



EKI-1360-BE Series

1/2-port RS-232/422/485 to
802.11a/b/g/n WLAN Serial
Device Servers

ADVANTECH

Enabling an Intelligent Planet

Copyright

The documentation and the software included with this product are copyrighted 2018 by Advantech Co., Ltd. All rights are reserved. Advantech Co., Ltd. reserves the right to make improvements in the products described in this manual at any time without notice. No part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without the prior written permission of Advantech Co., Ltd. Information provided in this manual is intended to be accurate and reliable. However, Advantech Co., Ltd. assumes no responsibility for its use, nor for any infringements of the rights of third parties, which may result from its use.

Acknowledgments

Intel and Pentium are trademarks of Intel Corporation.

Microsoft Windows and MS-DOS are registered trademarks of Microsoft Corp.

All other product names or trademarks are properties of their respective owners.

Product Warranty (5 years)

Advantech warrants to you, the original purchaser, that each of its products will be free from defects in materials and workmanship for five years from the date of purchase.

This warranty does not apply to any products which have been repaired or altered by persons other than repair personnel authorized by Advantech, or which have been subject to misuse, abuse, accident or improper installation. Advantech assumes no liability under the terms of this warranty as a consequence of such events.

Because of Advantech's high quality-control standards and rigorous testing, most of our customers never need to use our repair service. If an Advantech product is defective, it will be repaired or replaced at no charge during the warranty period. For out of-warranty repairs, you will be billed according to the cost of replacement materials, service time and freight. Please consult your dealer for more details.

If you think you have a defective product, follow these steps:

1. Collect all the information about the problem encountered. (For example, CPU speed, Advantech products used, other hardware and software used, etc.) Note anything abnormal and list any on-screen messages you get when the problem occurs.
2. Call your dealer and describe the problem. Please have your manual, product, and any helpful information readily available.
3. If your product is diagnosed as defective, obtain an RMA (return merchandise authorization) number from your dealer. This allows us to process your return more quickly.
4. Carefully pack the defective product, a fully-completed Repair and Replacement Order Card and a photocopy proof of purchase date (such as your sales receipt) in a shippable container. A product returned without proof of the purchase date is not eligible for warranty service.
5. Write the RMA number visibly on the outside of the package and ship it prepaid to your dealer.

Declaration of Conformity

CE

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

FCC Class B

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Technical Support and Assistance

1. Visit the Advantech web site at www.advantech.com/support where you can find the latest information about the product.
2. Contact your distributor, sales representative, or Advantech's customer service center for technical support if you need additional assistance. Please have the following information ready before you call:
 - Product name and serial number
 - Description of your peripheral attachments
 - Description of your software (operating system, version, application software, etc.)
 - A complete description of the problem
 - The exact wording of any error messages

Warnings, Cautions and Notes

Warning! Warnings indicate conditions, which if not observed, can cause personal injury!



Caution! Cautions are included to help you avoid damaging hardware or losing data. e.g.



There is a danger of a new battery exploding if it is incorrectly installed. Do not attempt to recharge, force open, or heat the battery. Replace the battery only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Note! Notes provide optional additional information.



Document Feedback

To assist us in making improvements to this manual, we would welcome comments and constructive criticism. Please send all such - in writing to:
support@advantech.com

Packing List

Before setting up the system, check that the items listed below are included and in good condition. If any item does not accord with the table, please contact your dealer immediately.

- 1 x Gateway Server
- 1 x DIN-Rail Mounting Bracket and Screws
- 1 x Wall-mounting Bracket
- 2 x Antennas

Safety Instructions

- Read these safety instructions carefully.
- Keep this User Manual for later reference.
- Disconnect this equipment from any DC outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
- For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
- Keep this equipment away from humidity.
- Put this equipment on a reliable surface during installation. Dropping it or letting it fall may cause damage.
- The openings on the enclosure are for air convection. Protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
- Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- All cautions and warnings on the equipment should be noted.
- If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
- Never pour any liquid into an opening. This may cause fire or electrical shock.
- Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
- If one of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well, or you cannot get it to work according to the user's manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious signs of breakage.
- **DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY GO -40°C (-40°F) ~ 80°C (176°F). THIS COULD DAMAGE THE EQUIPMENT. THE EQUIPMENT SHOULD BE IN A CONTROLLED ENVIRONMENT.**
- The sound pressure level at the operator's position according to IEC 704-1:1982 is no more than 70 dB (A).

DISCLAIMER: This set of instructions is given according to IEC 704-1. Advantech disclaims all responsibility for the accuracy of any statements contained herein.

Safety Precaution - Static Electricity

Static electricity can cause bodily harm or damage electronic devices. To avoid damage, keep static-sensitive devices in the static-protective packaging until the installation period. The following guidelines are also recommended:

- Wear a grounded wrist or ankle strap and use gloves to prevent direct contact to the device before servicing the device. Avoid nylon gloves or work clothes, which tend to build up a charge.
- Always disconnect the power from the device before servicing it.
- Before plugging a cable into any port, discharge the voltage stored on the cable by touching the electrical contacts to the ground surface.

Contents

Chapter 1	Introduction.....	1
1.1	Overview	2
1.2	Device Features	3
1.3	Specifications	3
1.4	Dimensions	4
Chapter 2	Getting Started.....	6
2.1	Hardware.....	7
2.1.1	Front View	7
2.1.2	Rear View	9
2.1.3	Top View	9
2.1.4	LED Indicators	10
2.2	Connecting Hardware	11
2.2.1	DIN Rail Mounting.....	11
2.2.2	Wall-Mounting.....	13
2.2.3	Wireless Connection	14
2.2.4	Network Connection.....	16
2.2.5	Serial Connection.....	16
2.2.6	Power Connection.....	17
2.3	Reset Button	21
Chapter 3	Utility Configuration	22
3.1	Installing the Configuration Utility	23
3.2	Starting the Configuration Utility.....	26
3.3	Discovering Your Device Server	27
3.3.1	Auto Searching	27
3.4	Network Settings	29
3.5	Administrator Settings	31
3.5.1	Locate the Serial Device Server	31
3.5.2	Restore to Factory Default Settings	32
3.5.3	Resetting the Device	33
3.5.4	Add to Favorite.....	34
3.5.5	Auto Mapping.....	34
3.5.6	Manual Mapping	34
3.5.7	Update Firmware	35
Chapter 4	Selecting An Operating Mode	36
4.1	Understanding the EKI-1360-BE Series.....	37
4.1.1	Product Description.....	37
4.1.2	COM Port Redirector	38
4.1.3	TCP Server Mode	40
4.1.4	TCP Client Mode.....	41
4.1.5	Serial Tunneling Mode	42
4.1.6	UDP Server/Client Mode.....	42
4.1.7	Control Mode	42

Chapter 5 Setting up Virtual COM Port..... 43

5.1	Setting COM Port Redirector	44
5.2	Virtual COM Port Mapping	44
5.2.1	Auto Mapping.....	44
5.2.2	Manual Mapping	46
5.2.3	Configuration Wizard	47
5.2.4	Confirming Virtual COM Settings.....	48
5.2.5	Removing VCOM Ports	50
5.2.6	Exporting and Importing VCOM Mapping	51

Chapter 6 Web Interface 52

6.1	Overview	53
6.2	Accessing the Web Page.....	53
6.2.1	Accessing the Web Page via Configuration Utility	53
6.2.2	Accessing the Web Page via Web Browser	54
6.3	Overview	54
6.4	Network Settings.....	55
6.4.1	LAN.....	55
6.5	Wireless Settings	56
6.5.1	Basic.....	56
6.5.2	Advanced.....	57
6.5.3	Security.....	58
6.5.4	Statistics	59
6.5.5	Site Survey	60
6.5.6	Access Control.....	61
6.5.7	Log.....	62
6.6	Port Configuration	63
6.6.1	Basic.....	63
6.6.2	Operation	64
6.6.3	Advanced.....	65
6.7	Monitor	66
6.7.1	Setting.....	66
6.7.2	Statistic	67
6.7.3	Connected IP	68
6.8	Alarm.....	69
6.8.1	Setting.....	69
6.8.2	Event.....	70
6.8.3	LogFile	72
6.9	Administration	72
6.9.1	System.....	72
6.9.2	Syslog	73
6.9.3	HTTP	73
6.9.4	Configuration	74
6.9.5	Firmware Upgrade.....	74
6.9.6	Tools.....	75

Chapter 7 Telnet/Serial Console Configuration76

7.1	Overview	77
7.2	Telnet Console.....	77
7.2.1	Create a new connection	77
7.2.2	Input the IP address.....	78
7.2.3	Connection Success	78
7.3	Command List.....	79
7.3.1	system	79
7.3.2	port.....	79

7.3.3	portadv	80
7.3.4	mvcom	80
7.3.5	mctrl	81
7.3.6	mdata	81
7.3.7	net	81
7.3.8	password.....	82
7.3.9	alarm	82
7.3.10	monitor	82
7.3.11	time	82
7.3.12	service.....	83
7.3.13	apply	83
7.3.14	exit	83
7.3.15	help	83
7.3.16	import.....	83
7.3.17	export.....	83
7.3.18	wireless	83
7.3.19	wirelessadv	84

Chapter 8 TCP and UDP Port Numbers.....86

8.1	List of Known TCP and UDP Port Numbers.....	87
-----	---	----

List of Figures

Figure 1.1	EKI-1361 Dimensions.....	4
Figure 1.2	EKI-1362 Dimensions.....	5
Figure 2.1	EKI-1361 Front View	7
Figure 2.2	EKI-1362 Front View	8
Figure 2.3	Rear View	9
Figure 2.4	Top View	9
Figure 2.5	System LED Panel	10
Figure 2.6	Installing the DIN-Rail Mounting Kit.....	11
Figure 2.7	Correctly Installed DIN Rail Kit	12
Figure 2.8	Removing the DIN-Rail.....	12
Figure 2.9	Installing Wall Mount Plates	13
Figure 2.10	Wall Mount Installation	14
Figure 2.11	Installing the Antenna.....	14
Figure 2.12	Positioning the Antenna	15
Figure 2.13	Ethernet Plug & Connector Pin Position.....	16
Figure 2.14	DB9 Pin Assignment	16
Figure 2.15	Power Wiring for EKI-1360-BE Series.....	17
Figure 2.16	Grounding Connection	19
Figure 2.17	Terminal Receptor: Relay Contact	19
Figure 2.18	Terminal Receptor: Power Input Contacts	20
Figure 2.19	Removing a Terminal Block	20
Figure 2.20	Installing DC Wires in a Terminal Block	21
Figure 2.21	Securing a Terminal Block to a Receptor.....	21
Figure 3.1	InstallShield Wizard 1 of 4.....	23
Figure 3.2	InstallShield Wizard 2 of 4.....	24
Figure 3.3	InstallShield Wizard 3 of 4.....	24
Figure 3.4	InstallShield Wizard 4 of 4.....	25
Figure 3.5	Configuration Utility Overview	26
Figure 3.6	Open View of Serial Device Configuration Utility	27
Figure 3.7	Selecting a Group.....	28
Figure 3.8	Selecting a Device.....	28
Figure 3.9	Viewing Basic Settings	28
Figure 3.10	Utility Overview.....	29
Figure 3.11	Network Settings Overview	30
Figure 3.12	Locate the Serial Device Server	31
Figure 3.13	Restore to Factory Default Settings	32
Figure 3.14	Reset Device	33
Figure 3.15	Add to Favorite	34
Figure 3.16	Update Firmware.....	35
Figure 4.1	Single Ethernet Connection.....	37
Figure 4.2	COM Port Redirector	38
Figure 4.3	Multi-Access Mode	39
Figure 4.4	TCP Server Mode.....	40
Figure 4.5	TCP Client Mode	41
Figure 4.6	Serial Tunneling Mode	42
Figure 5.1	Selecting Auto Mapping	44
Figure 5.2	Selecting Auto Mapping	45
Figure 5.3	Mapping Selected Ports	45
Figure 5.4	Viewing VCOM Mapping Results	45
Figure 5.5	Selecting Manual Mapping	46
Figure 5.6	Viewing Manual VCOM Mapping Results	46
Figure 5.7	Viewing Manual VCOM Mapping Results	47
Figure 5.8	Selecting the Configuration Wizard	47
Figure 5.9	Serial Port Listing on EKI-1360-BE Series Device	48
Figure 5.10	System Port VCOM Mapping Configuration.....	49
Figure 5.11	Verifying VCOM Mapping Configuration	49

Figure 5.12	Remove VCOM Port.....	50
Figure 6.1	Accessing the Web Page via Configuration Utility.....	53
Figure 6.2	System.....	54
Figure 6.3	Network Settings > LAN	55
Figure 6.4	Wireless Settings > Basic.....	56
Figure 6.5	Wireless Settings > Advanced.....	57
Figure 6.6	Wireless Settings > Security.....	58
Figure 6.7	Wireless Settings > Statistics	59
Figure 6.8	Wireless Settings > Site Survey	60
Figure 6.9	Wireless Settings > Access Control.....	61
Figure 6.10	Wireless Settings > Log.....	62
Figure 6.11	Port Configuration > Basic.....	63
Figure 6.12	Port Configuration > Operation.....	64
Figure 6.13	Port Configuration > Operation.....	65
Figure 6.14	Monitor > Setting	66
Figure 6.15	Monitor > Statistic.....	67
Figure 6.16	Monitor > Connected IP	68
Figure 6.17	Alarm > Setting.....	69
Figure 6.18	Alarm > Event.....	71
Figure 6.19	Alarm > LogFile	72
Figure 6.20	Administration > System.....	72
Figure 6.21	Administration > Syslogd.....	73
Figure 6.22	Administration > HTTP	73
Figure 6.23	Administration > Configuration	74
Figure 6.24	Administration > Firmware Upgrade.....	74
Figure 6.25	Administration > Tools.....	75
Figure 7.1	Creating a Telnet Connection.....	77
Figure 7.2	Creating a Telnet Connection.....	78
Figure 7.3	Telnet Connection Console	78

Chapter 1

Introduction

1.1 Overview

Advantech's EKI-1360-BE Series of Industrial Device Servers are a robust, feature-rich, and cost-effective way to network-enable equipment in an industrial automation environment. The EKI-1360-BE Series provides one or two serial ports, 802.11a/b/g/n wireless LAN interface to connect any RS-232/422/485 devices to wireless LAN. These wireless serial device servers provide serial-to-wireless network connectivity as an alternative to wired Ethernet connectivity and enable virtually any serial device or equipment to be remotely accessed, controlled, monitored, or shared on an 802.11a/b/g/n wireless network.

By encapsulating serial data and transporting it over Ethernet, the EKI-1360-BE Series allows virtual serial links over Ethernet IP-based networks. After the Advantech Serial Device Server Configuration Utility is installed, a standard serial operation calls with virtual COM port could be transparently redirected to the serial device servers, guaranteeing compatibility with legacy serial devices and enabling backward compatibility with existing software. EKI-1360-BE Series also supports serial tunneling, allowing two native serial devices to communicate over a network without any hosts or programming. As a result, you can extend a limited distance, point-to-point, direct serial connections within the plant, throughout the factory, the facility, the office building, or across the global enterprise.

The EKI-1360-BE Series provides an impressive list of features and functions enabling multiple industrial devices to be connected, controlled, configured, managed, and updated over a network. With serial ports and 802.11a/b/g/n wireless LAN, the EKI-1360-BE Series easily connects multiple serial devices to a network. The transmission speed of the EKI-1360-BE Series is up to 921.6 Kbps totally outstripping the competition to meet the demand for high-speed exchange. Functionally transparent and efficient, the EKI-1360-BE Series is specially designed for remotely controlling and monitoring devices via the Internet.

The EKI-1360-BE Series provides roaming ability. EKI-1360-BE Series can migrate from AP to AP during certain condition. In some field applications, the device can't use a fixed physical connection, such as AGV, transportation, and cross wide space communication. EKI-1360-BE Series can easily installed to fulfill this requirement. With a compact size and lightweight design, the EKI-1360-BE Series can be installed in moving vehicles without much extra weight.

Types of supported devices:

- Human Machine Interface (HMI)
- Programmable Logic Controller (PLC)
- Flow meters
- Temperature / pressure monitoring equipment
- Gas leak detection device
- Scales
- Power monitoring equipment
- Data Acquisition Modules

The EKI-136X series provides various operation modes: COM port redirection (Virtual COM port), TCP/UDP server/client mode. Serial devices can be connected by means of multi-access modes.

1.2 Device Features

- Supports standard Wireless 802.11a/b/g/n
- Supports MIMO 2x2 technology
- Expandable up to 4096 serial ports for one single host
- Provides 10/100/1000 Mbps auto-sensing Ethernet ports for easy diagnostic
- Supports any baud rate setting from 50 bps up to 921.6 Kbps
- Supports various operation modes: COM port redirection (Virtual COM port), TCP server/client, UDP server/client, control mode and RFC-2217 mode
- Easy to diagnostic LED indicators
- Supports multi-access features: allows maximum 5 hosts to access one serial port simultaneously
- Allows a maximum of 16 peers in TCP/UDP client mode
- Mounts on DIN rail, wall, or panel easily
- Surge protection for RS-422/485 line and power supply
- SNMP MIB-II for network management

1.3 Specifications

Specifications	Description
Interface	I/O Port <ul style="list-style-type: none">■ EKI-1361: 1 x RJ45 + 1 x RS-232/422/485■ EKI-1362: 1 x RJ45 + 2 x RS-232/422/485
	Power Connector Terminal block
Physical	Enclosure Metal shell with solid mounting kits
	Installation DIN-Rail and Wall mount
	Dimensions (W x H x D) 30 x 140 x 95 mm (1.18" x 5.51" x 3.74")
LED Display	System LED Power 1, Power 2, Status
	Port LED <ul style="list-style-type: none">■ WLAN: Quality, Link/Active■ LAN: Speed, Link/Active■ Serial: Tx, Rx
Environment	Operating Temperature -40°C ~ 75°C (-40°F ~ 166°F)
	Storage Temperature -40°C ~ 80°C (-40°F ~ 176°F)
	Ambient Relative Humidity 10 ~ 95% RH
Wireless LAN Communications	Compatibility IEEE 802.11a/b/g/n
	Speed Up to 300Mbps
	Antenna 2 x Reverse SMA (supports 2T2R)
	Free Space Range Open space 100 m
	Wireless Security WEP, WPA/WPA2-Personal, WPA/WPA2-Enterprise
Ethernet Communications	Compatibility IEEE 802.3, IEEE 802.3u
	Speed 10/100/1000 Mbps
	Port Connector 8-pin RJ45
	Protection Built-in 1.5 KV magnetic isolation

Specifications	Description	
Serial Communications	Port Type	RS-232/422/485, software selectable
	Port Connector	DB9 male
	Data Bits	5, 6, 7, 8
	Stop Bits	1, 1.5, 2
	Parity	None, Odd, Even, Space, Mark
	Baud Rate	50 bps ~ 921.6 kbps, any baud rate setting
	Protection	15 KV ESD for all signals
Power	Power Consumption	<div> <div>■</div> <div>EKI-1361: 8W</div> </div> <div> <div>■</div> <div>EKI-1362: 9W</div> </div>
	Power Input	12 ~ 48V _{DC} , redundant dual inputs
Software	Driver Support	32-bit/64-bit Windows XP/Vista/7/8/8.1/10, Windows Server 2003/2008/2008 R2/2012/2012 R2 and Linux
	Utility	Advantech EKI Device Configuration Utility
	Operation Modes	<div> <div>■</div> <div>Access Point mode/Station mode</div> </div> <div> <div>■</div> <div>COM port redirection mode (Virtual COM)</div> </div> <div> <div>■</div> <div>TCP/UDP server (polling) mode</div> </div> <div> <div>■</div> <div>TCP/UDP client (event handling) mode</div> </div>
	Configuration	Windows utility, Telnet console, Web Browser
	Protocol	ARP, ICMP, IPv4, IPv6, TCP, UDP, BOOTP, DHCP Client, Auto IP, Telnet, DNS, SNMP, HTTP, SMTP, SNTP
Regulatory Approvals	EMC	CE, FCC Part 15 Subpart B (Class B)

1.4 Dimensions

The following view depicts the EKI-1361.

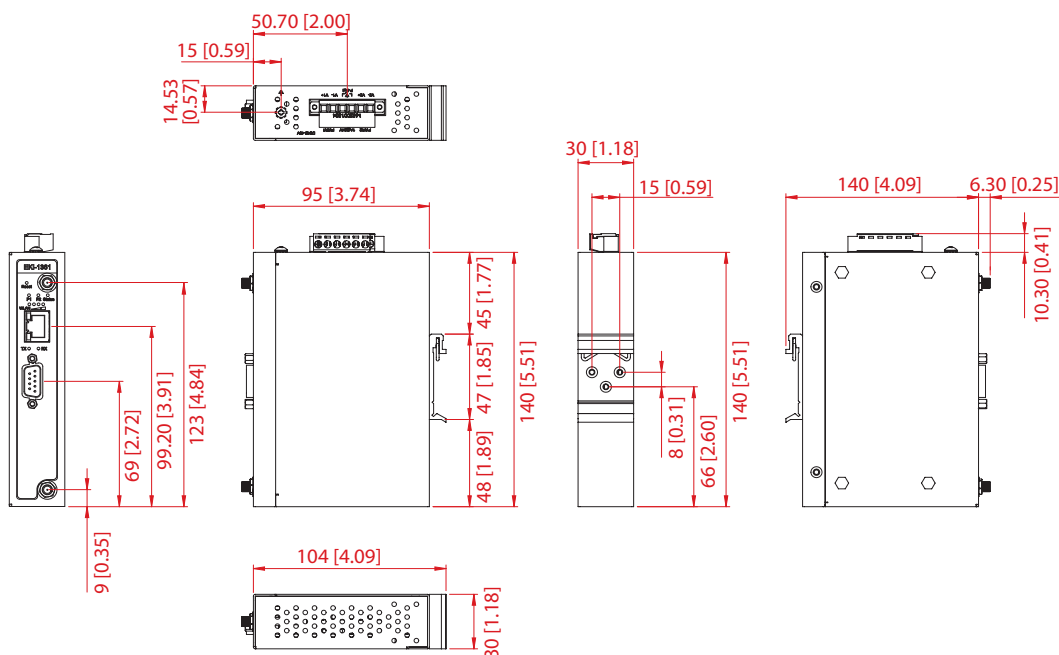


Figure 1.1 EKI-1361 Dimensions

The following view depicts the EKI-1362.

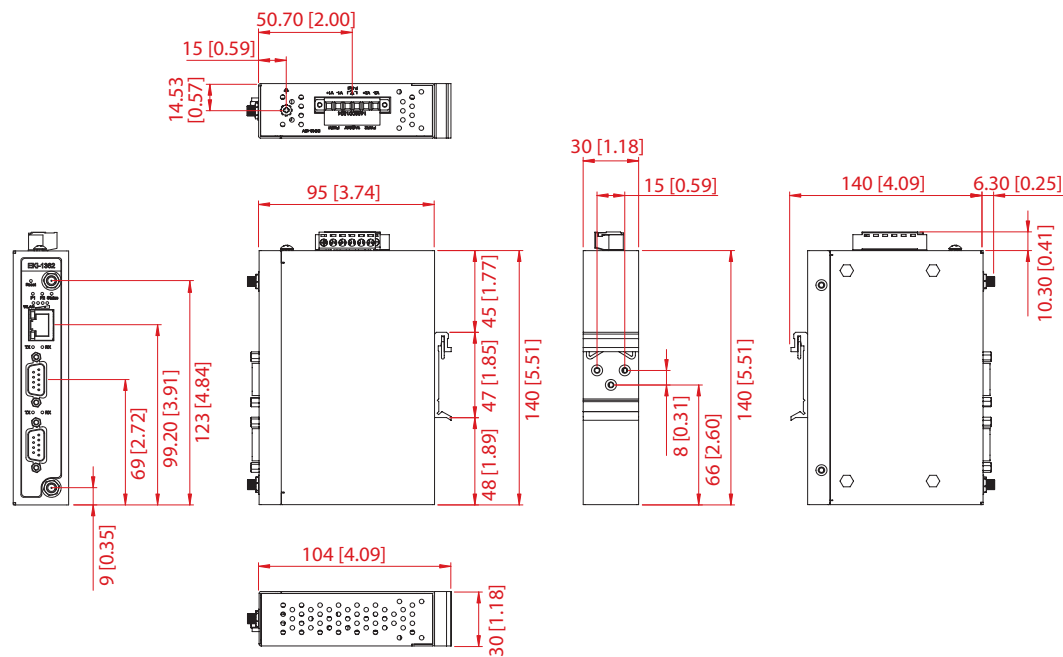


Figure 1.2 EKI-1362 Dimensions

Chapter 2

Getting Started

2.1 Hardware

2.1.1 Front View

The following view shows the EKI-1361.

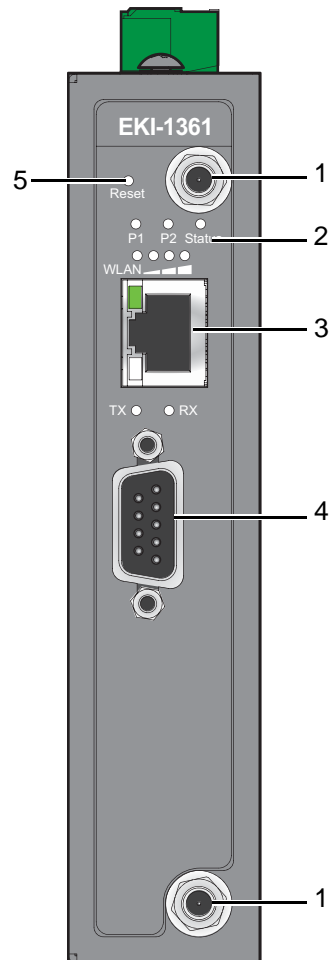


Figure 2.1 EKI-1361 Front View

No.	Item	Description
1	Antenna connector	Connector for antenna.
2	System LED panel	See "LED Indicators" on page 10 for further details.
3	ETH port	RJ45 ports x 1.
4	Serial port	DB9 pinout, supports RS-232/422/485.
5	Reset button	Button allows for system soft reset or factory default reset.

The following view shows the EKI-1362.

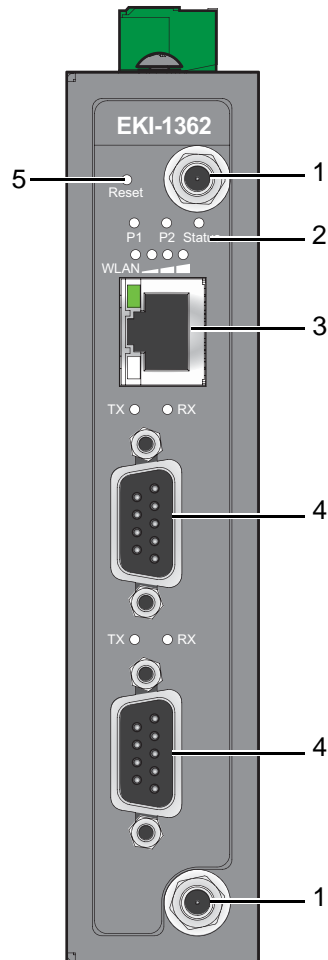


Figure 2.2 EKI-1362 Front View

No.	Item	Description
1	Antenna connector	Connector for antenna.
2	System LED panel	See "LED Indicators" on page 10 for further details.
3	ETH port	RJ45 ports x 1.
4	Serial port	DB9 pinout, supports RS-232/422/485.
5	Reset button	Button allows for system soft reset or factory default reset.

2.1.2 Rear View

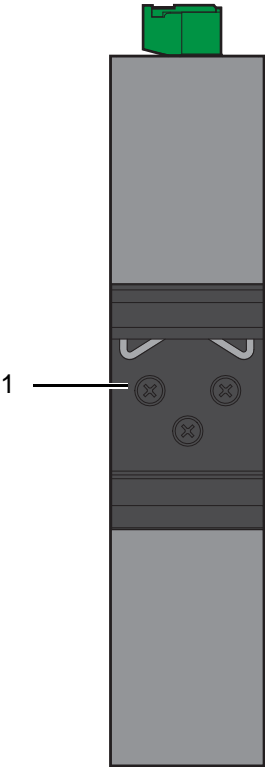


Figure 2.3 Rear View

No.	Item	Description
1	DIN-Rail mounting plate	Mounting plate used for the installation to a standard DIN rail

2.1.3 Top View

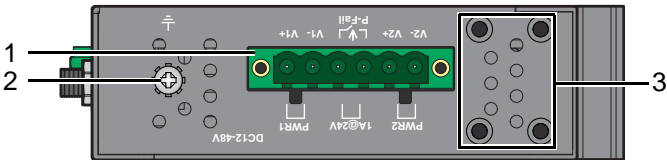


Figure 2.4 Top View

No.	Item	Description
1	Terminal block	Connect cabling for power and alarm wiring
2	Ground terminal	Screw terminal used to ground chassis
3	Wall mounting holes	Screw holes (x4) used in the installation of a wall mounting plate

2.1.4 LED Indicators

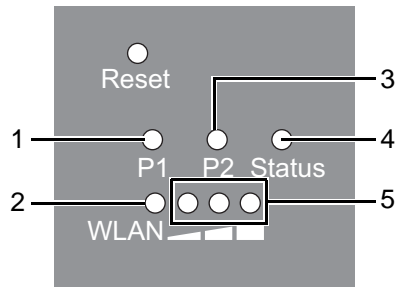


Figure 2.5 System LED Panel

Station Mode

No.	LED Name	LED Color	Description
1	P1	Green	Power 1 is on
		Off	Power 1 is off, or power error condition exists
2	WLAN Quality	Green	WLAN link is ready
		Off	WLAN is not operational
3	P2	Green	Power 2 is on
		Off	Power 2 is off, or power error condition exists
4	Status	Amber	The device server has been located by utility's location function
		Amber, blinking	System is ready (1cycle/sec.)
		Off	System is not operational
5	WLAN Signal Strength	Off	No signal available
		Green (One)	Signal quality is less than -80 dBm
		Green (Two)	Signal quality is between -80 dBm and -60 dBm
		Green (Three)	Signal quality is more than -60 dBm

AP Mode

No.	LED Name	LED Color	Description
1	P1	Green	Power 1 is on
		Off	Power 1 is off, or power error condition exists
2	WLAN Quality	Off	In AP mode, the LED is always off
3	P2	Green	Power 2 is on
		Off	Power 2 is off, or power error condition exists
4	Status	Amber	The device server has been located by utility's location function
		Amber, blinking	System is ready (1cycle/sec.)
		Off	System is not operational
5	WLAN Signal Strength	Green	WLAN link is ready
		Off	WLAN is not operational

2.2 Connecting Hardware

2.2.1 DIN Rail Mounting

The DIN rail mount option is the quickest installation option. Additionally, it optimizes the use of rail space.

The metal DIN rail kit is secured to the rear of the switch. The device can be mounted onto a standard 35 mm (1.37") x 7.5 mm (0.3") height DIN rail. The devices can be mounted vertically or horizontally. Refer to the following guidelines for further information.

Note! A corrosion-free mounting rail is advisable.



When installing, make sure to allow for enough space to properly install the cabling.

2.2.1.1 Installing the DIN-Rail Mounting Kit

1. Position the rear panel of the switch directly in front of the DIN rail, making sure that the top of the DIN rail clip hooks over the top of the DIN rail, as shown in the following illustration.

Warning! Do not install the DIN rail under or in front of the spring mechanism on the DIN rail clip to prevent damage to the DIN rail clip or the DIN rail.



Make sure the DIN rail is inserted behind the spring mechanism.

2. Once the DIN rail is seated correctly in the DIN rail clip, press the front of the switch to rotate the switch down and into the release tab on the DIN rail clip. If seated correctly, the bottom of the DIN rail should be fully inserted in the release tab.

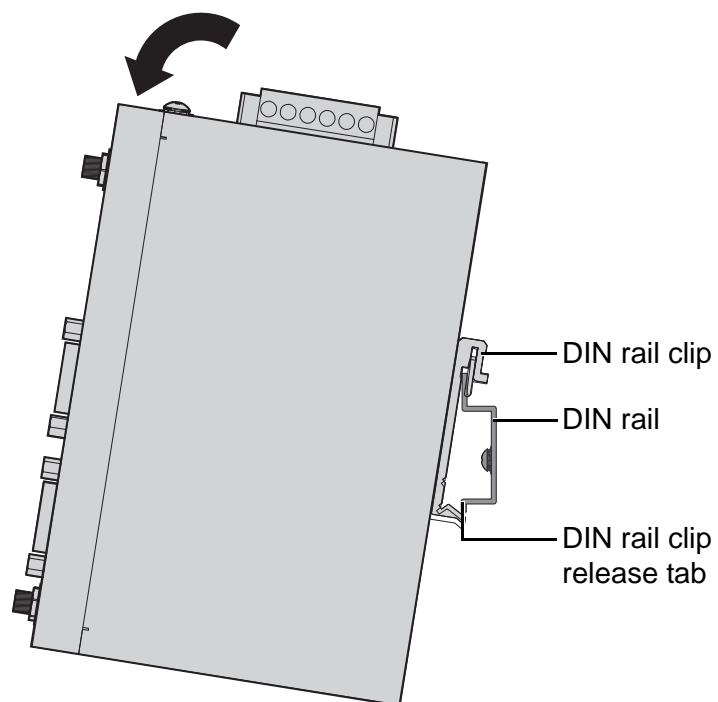


Figure 2.6 Installing the DIN-Rail Mounting Kit

See the following figure for an illustration of a completed DIN installation procedure.

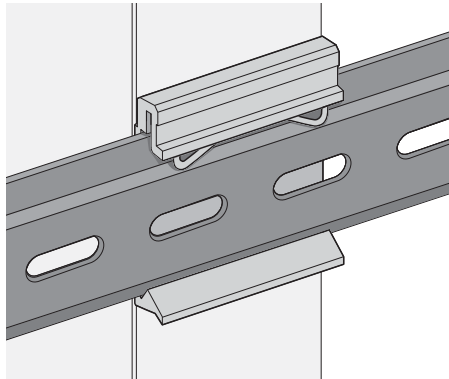


Figure 2.7 Correctly Installed DIN Rail Kit

3. Grasp the bottom of the switch and slightly rotate it upwards. If there is resistance, the switch is correctly installed. Otherwise, re-attempt the installation process from the beginning.

2.2.1.2 Removing the DIN-Rail Mounting Kit

1. Ensure that power is removed from the switch, and disconnect all cables and connectors from the front panel of the switch.
2. Push down on the top of the DIN rail clip release tab with your finger. As the clip releases, lift the bottom of the switch, as shown in the following illustration.

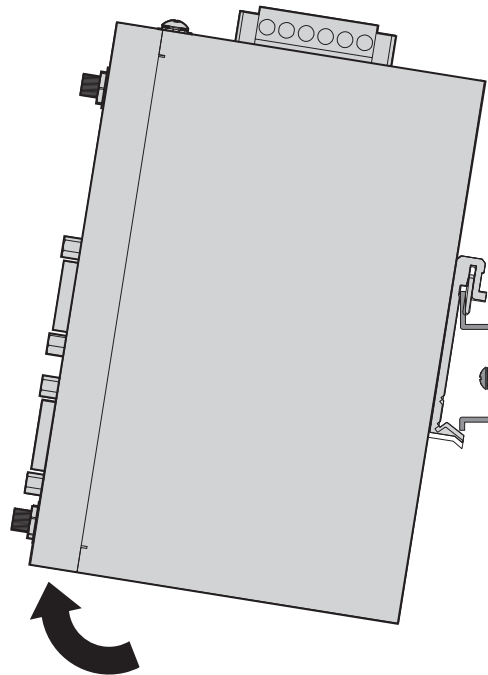


Figure 2.8 Removing the DIN-Rail

2.2.2 Wall-Mounting

The wall mounting option provides better shock and vibration resistance than the DIN rail vertical mount.

Note! When installing, make sure to allow for enough space to properly install the cabling.



Before the device can be mounted on a wall, you will need to remove the DIN rail plate.

1. Rotate the device to view the rear side and locate the DIN mounting plate.
2. Remove the screws securing the DIN mounting plate to the rear side.
3. Remove the DIN mounting plate. Store the DIN mounting plate and provided screws for later use.
4. Align the wall mounting brackets with the designated location as illustrated in the following figure. The screw holes on the device and the brackets align if seated correctly.
5. Secure the wall brackets to the device with M3 screws, see the following figure.

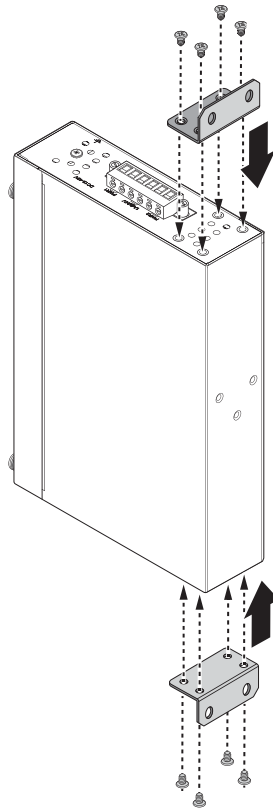


Figure 2.9 Installing Wall Mount Plates

Once the wall mounting brackets are secured on the device, mark the screw hole location on the wall area.

6. On the installation site, place the device firmly against the wall. Make sure the switch is vertically and horizontally level.
7. Insert a pencil or pen through the screw holes on the mounting bracket to mark the location of the screw holes on the wall.
8. Remove the switch from the wall and drill holes over each marked location (4) on the wall, keeping in mind that the holes must accommodate wall sinks in addition to the screws.

9. Insert the wall sinks into the walls.
10. Align the mounting bracket over the screw holes on the wall.
11. Starting with the upper bracket, insert a screw through the bracket and rotate it to secure. Do not tighten at this point. Repeat for the remaining locations, see the following figure.

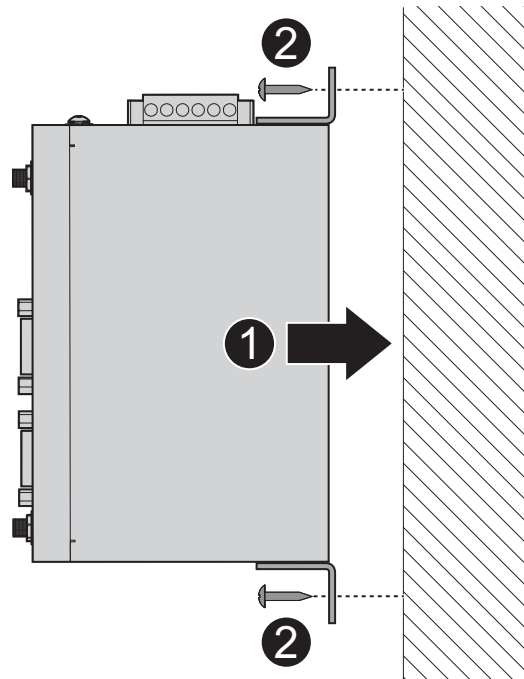


Figure 2.10 Wall Mount Installation

12. Once the device is installed on the wall, tighten the screws to secure the device.

2.2.3 Wireless Connection

1. Connect the antenna by screwing the antenna connectors in a clockwise direction.

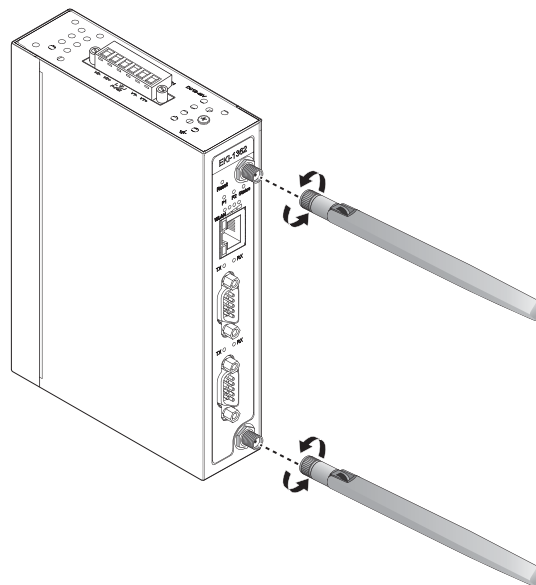


Figure 2.11 Installing the Antenna

2. Position the antenna for optimal signal strength.

Note! *The location and position of the antenna is crucial for effective wireless connectivity*

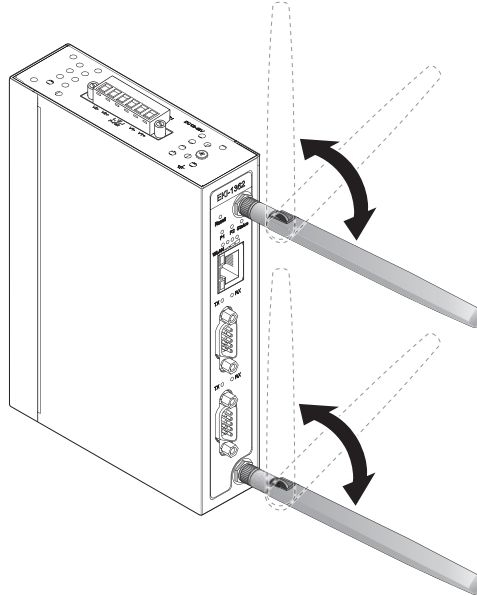


Figure 2.12 Positioning the Antenna

2.2.4 Network Connection

For RJ45 connectors, data-quality, twisted pair cabling (rated CAT5 or better) is recommended. The connector bodies on the RJ45 Ethernet ports are metallic and connected to the GND terminal. For best performance, use shielded cabling. Shielded cabling may be used to provide further protection.

Straight-thru Cable Wiring		Cross-over Cable Wiring	
Pin 1	Pin 1	Pin 1	Pin 3
Pin 2	Pin 2	Pin 2	Pin 6
Pin 3	Pin 3	Pin 3	Pin 1
Pin 6	Pin 6	Pin 6	Pin 2

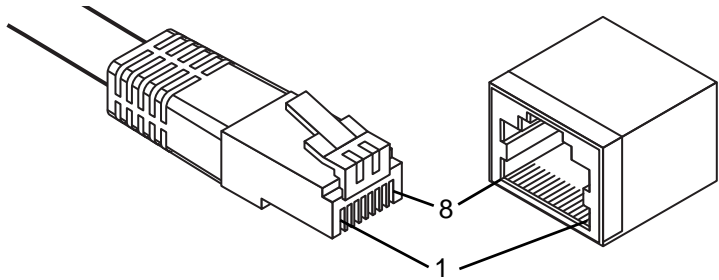


Figure 2.13 Ethernet Plug & Connector Pin Position

Maximum cable length: 100 meters (328 ft.) for 10/100BaseT.

2.2.5 Serial Connection

EKI-1360-BE Series provides up to four ports DB9 (male) connectors. RS-232/422/485 pin assignments as below:

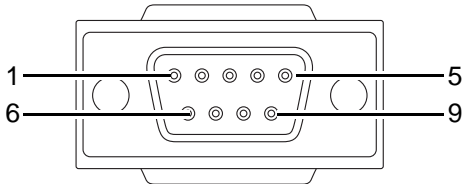


Figure 2.14 DB9 Pin Assignment

Pin	1	2	3	4	5	6	7	8	9
RS-232	DCD	RX	TX	DTR	GND	DSR	RTS	CTS	RI
RS-422	TX-			TX+	GND		RX+		RX-
RS-485	DATA-			DATA+	GND				

2.2.6 Power Connection

2.2.6.1 Overview

Warning! Power down and disconnect the power cord before servicing or wiring the switch.



Caution! Do not disconnect modules or cabling unless the power is first switched off.



The device only supports the voltage outlined in the type plate. Do not use any other power components except those specifically designated for the switch device.

Caution! Disconnect the power cord before installation or cable wiring.



The switches can be powered by using the same DC source used to power other devices. A DC voltage range of 12 to 48 V_{DC} must be applied between the V1+ terminal and the V1- terminal (PW1), see the following illustrations. The chassis ground screw terminal should be tied to the panel or chassis ground. A redundant power configuration is supported through a secondary power supply unit to reduce network down time as a result of power loss.

EKI-1360-BE Series support 12 to 48 V_{DC}. Dual power inputs are supported and allow you to connect a backup power source.

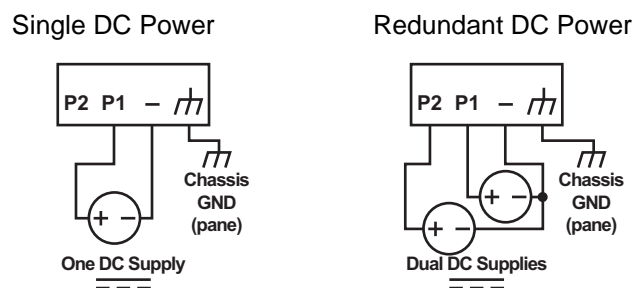


Figure 2.15 Power Wiring for EKI-1360-BE Series

2.2.6.2 Considerations

Take into consideration the following guidelines before wiring the device:

- The Terminal Block (CN1) is suitable for 12-24 AWG (3.31 - 0.205 mm²). Torque value 7 lb-in.
- The cross sectional area of the earthing conductors shall be at least 3.31 mm².
- Calculate the maximum possible current for each power and common wire. Make sure the power draw is within limits of local electrical code regulations.
- For best practices, route wiring for power and devices on separate paths.
- Do not bundle together wiring with similar electrical characteristics.
- Make sure to separate input and output wiring.
- Label all wiring and cabling to the various devices for more effective management and servicing.

Note! *Routing communications and power wiring through the same conduit may cause signal interference. To avoid interference and signal degradation, route power and communications wires through separate conduits.*



2.2.6.3 Grounding the Device

Caution! *Do not disconnect modules or cabling unless the power is first switched off.*



The device only supports the voltage outlined in the type plate. Do not use any other power components except those specifically designated for the switch device.

Caution! *Before connecting the device properly ground the device. Lack of a proper grounding setup may result in a safety risk and could be hazardous.*



Caution! *Do not service equipment or cables during periods of lightning activity.*



Caution! Do not service any components unless qualified and authorized to do so.



Caution! Do not block air ventilation holes.



Electromagnetic Interference (EMI) affects the transmission performance of a device. By properly grounding the device to earth ground through a drain wire, you can setup the best possible noise immunity and emissions.

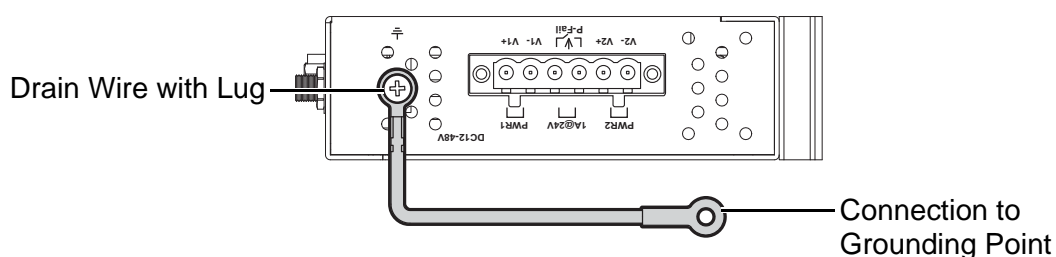


Figure 2.16 Grounding Connection

By connecting the ground terminal by drain wire to earth ground the switch and chassis can be ground.

Note! Before applying power to the grounded switch, it is advisable to use a volt meter to ensure there is no voltage difference between the power supply's negative output terminal and the grounding point on the switch.



2.2.6.4 Wiring a Relay Contact

The following section details the wiring of the relay output. The terminal block on the EKI-1360-BE Series is wired and then installed onto the terminal receptor located on the EKI-1360-BE Series.

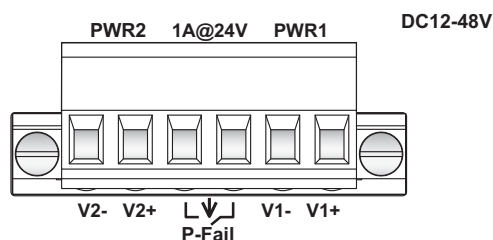


Figure 2.17 Terminal Receptor: Relay Contact

The terminal receptor includes a total of six pins: two for PWR1, two for PWR2 and two for a fault circuit.

2.2.6.5 Wiring the Power Inputs

Caution! Do not disconnect modules or cabling unless the power is first switched off.



The device only supports the voltage outlined in the type plate. Do not use any other power components except those specifically designated for the switch device.

Warning! Power down and disconnect the power cord before servicing or wiring the switch.



There are two power inputs for normal and redundant power configurations. The power input 2 is used for wiring a redundant power configuration. See the following for terminal block connector views.

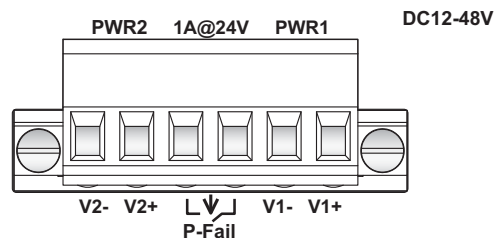


Figure 2.18 Terminal Receptor: Power Input Contacts

To wire the power inputs:

Make sure the power is not connected to the switch or the power converter before proceeding.

1. Loosen the screws securing terminal block to the terminal block receptor.
2. Remove the terminal block from the switch.

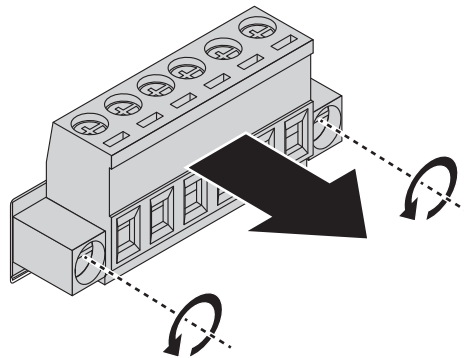


Figure 2.19 Removing a Terminal Block

3. Insert a small flat-bladed screwdriver in the V1+/V1- wire-clamp screws, and loosen the screws.
4. Insert the negative/positive DC wires into the V+/V- terminals of PW1. If setting up power redundancy, connect PW2 in the same manner.

5. Tighten the wire-clamp screws to secure the DC wires in place.

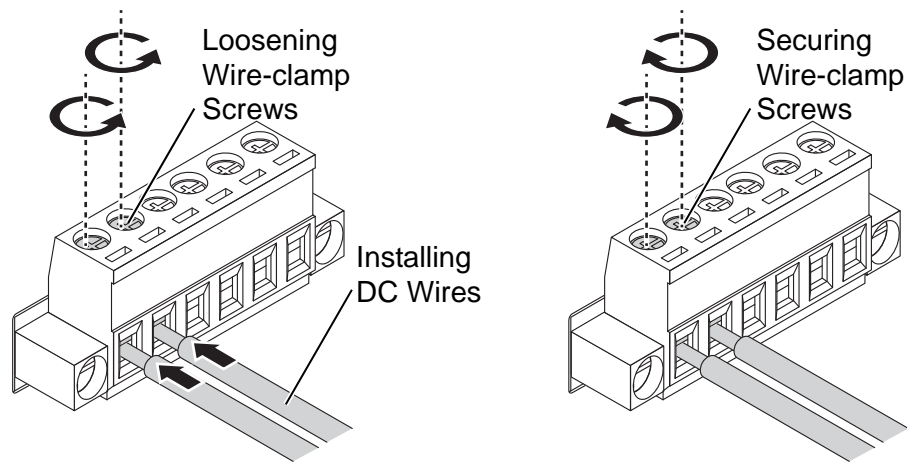


Figure 2.20 Installing DC Wires in a Terminal Block

6. Align the terminal block over the terminal block receptor on the switch.
7. Insert the terminal block and press it in until it is flush with the terminal block receptor.
8. Tighten the screws on the terminal block to secure it to the terminal block receptor.

If there is no gap between the terminal block and the terminal receptor, the terminal block is seated correctly.

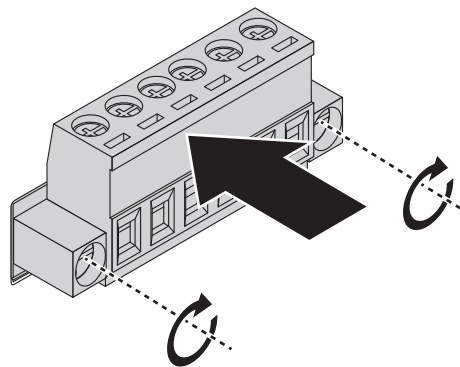


Figure 2.21 Securing a Terminal Block to a Receptor

2.3 Reset Button

Reset configuration to factory default:

Press and hold Reset button for 5 seconds.

System reboot:

Press and hold Reset button for 2 seconds.

Note! Do NOT power off the Ethernet switch when loading default settings.



Chapter 3

Utility Configuration

3.1 Installing the Configuration Utility

Note! *Microsoft.NET Framework version 2.0 or greater is required for this application.*



1. Insert the Advantech EKI Device Configuration Utility CD-ROM into the CD-ROM drive (whereas E:\ is the drive name of your CD-ROM) on the host PC.
2. Use Windows explorer or the Windows Run command to execute the setup program, the path for the setup program on the CD-ROM is as follows:
E:\EKI_Device_Configuration_Utility_v2.01.exe
3. If there is an existing COM port mapping utility on the host PC, remove it at this time. A system reboot may be necessary before continuing the installation.
4. Once the InstallShield Wizard screen displays, click **Next** to proceed with the installation.

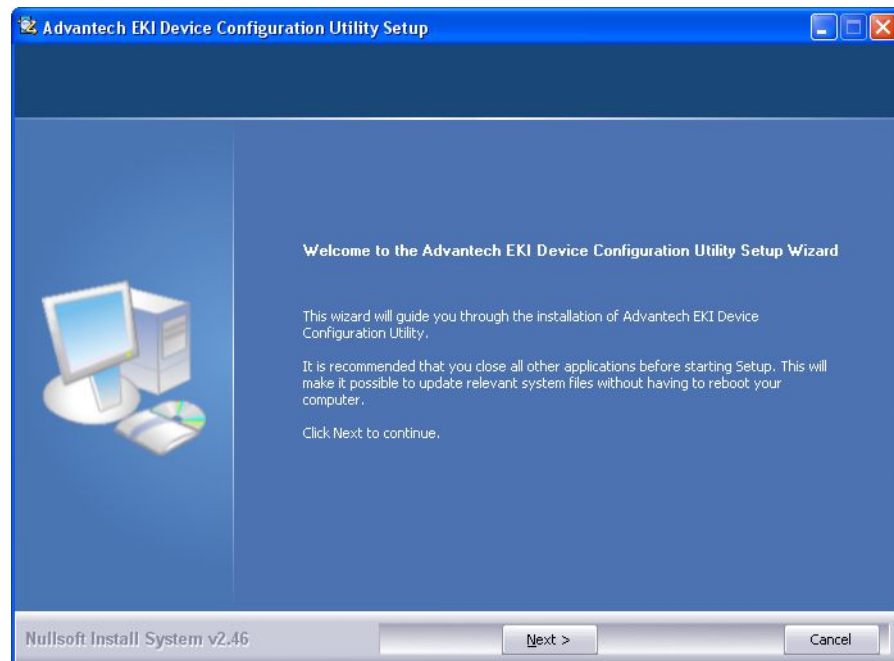


Figure 3.1 InstallShield Wizard 1 of 4

5. The Software License Agreement displays, press **I Agree** to continue or **Cancel** to stop the installation.

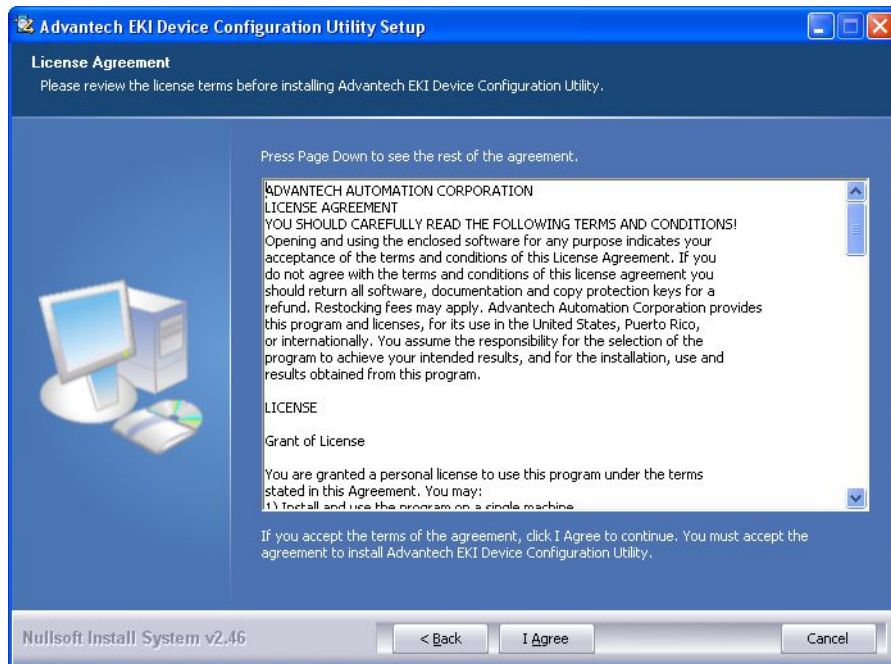


Figure 3.2 InstallShield Wizard 2 of 4

The InstallShield continues and a status screen displays. The default installation path is C:\Program Files\EKI Device Configuration Utility.

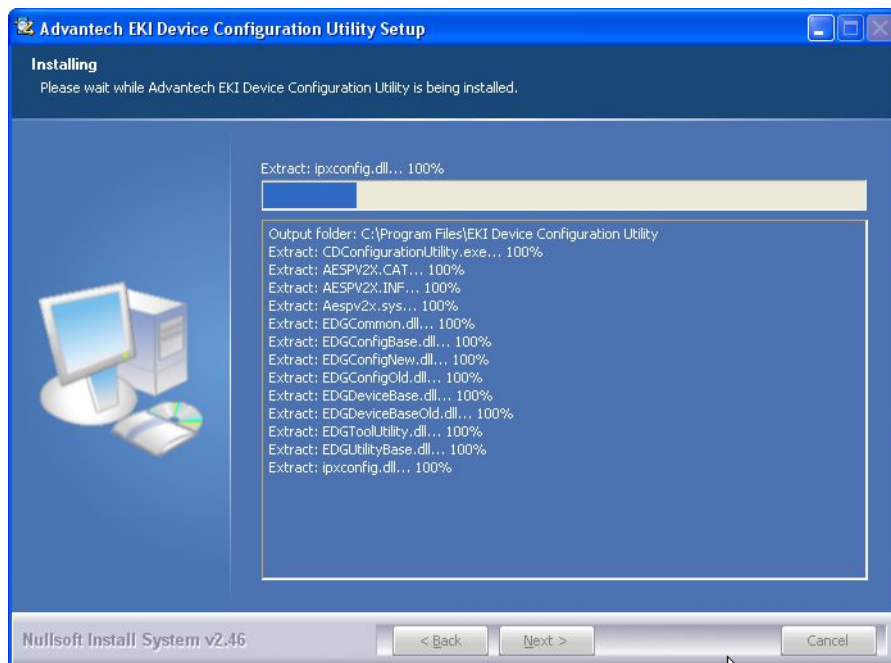


Figure 3.3 InstallShield Wizard 3 of 4

6. Once the installation of the package is finished a Configuration Utility Setup screen displays. Click **Finish** to conclude the process and exit the InstallShield Wizard.

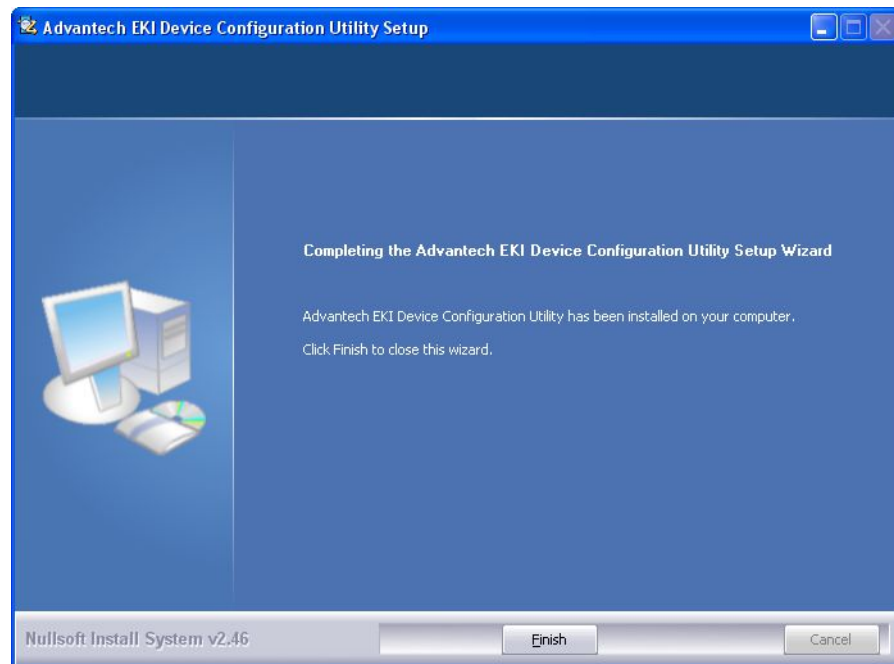


Figure 3.4 InstallShield Wizard 4 of 4

3.2 Starting the Configuration Utility

Advantech EKI-1360-BE Series device servers provide an easy-to-use utility to configure your serial device server through an Ethernet connection. For secure administration, it can also restrict the access rights for configuration to only one host PC. With this secure function enabled, other PCs will not have permission for configuration. After the installation program on the Advantech IEDG Series Driver Utility CD-ROM is finished, the serial device servers are ready for use and configuration.

Advantech Serial Device Server Configuration Utility is an excellent device server management tool. You can connect and configure the local and remote Advantech serial device servers easily. The utility provides access to the following functions:

- Configure the network settings (you can set the IP address, Gateway address, and Subnet mask)
- Perform diagnostic tests (virtual COM port testing, port status list)
- Perform administrative functions (export and import the serial device server setting, manage access IP, a descriptive name, upgrade firmware)

You can open the Configuration Utility from the Windows Start Menu by clicking **Start > All Programs > EKI Device Configuration Utility > EKI Device Configuration Utility**. The Configuration Utility displays as shown in the following figure.

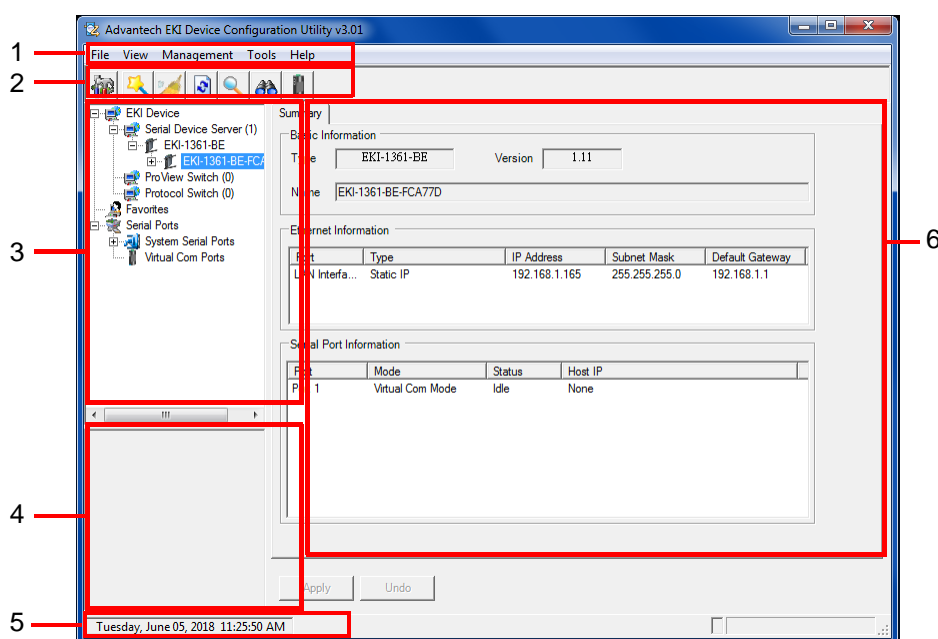


Figure 3.5 Configuration Utility Overview

No	Item	Description
1	Menu Bar	Displays File, View, Management, Tools and Help.
2	Quick Tool Bar	Useful management functions shortcuts.
3	Serial Device Server List Area	Available devices are listed in this area. Devices and COM ports can be organized or grouped in this area.
4	Information Panel	Click on the devices or move cursor to the devices, the related information is shown in this area.
5	Status Bar	Displays the current time.
6	Configuration Area	Click on the item on the Device Server List Area, the configuration page displays.

3.3 Discovering Your Device Server

3.3.1 Auto Searching

Advantech Serial Device Server Configuration Utility will automatically search all the EKI-1360-BE Series device servers on the network and show them on the Serial Device Server List Area of the utility. The utility provides an auto-search function to show your device (s) by simply executing the configuration utility program from the Start Menu.

From here all device on the same network domain will be searched and displayed on Device Server List Area. You can click on the device name to show the features of the specific device.

Click on the “+” before the model name, and the utility will expand the tree structure to show the individual device name. Click on the “-” before the model name, and the utility will collapse the tree structure.



Figure 3.6 Open View of Serial Device Configuration Utility

Note! *When you run the configuration utility for the first time, the default device name is obtained from the serial device's MAC identification number. The name can be altered through the configuration utility.*



Select the device in this sub-tree. The first tab on the Configuration Area shows the summary of “Basic Information” included device type, version, and name, “Ethernet

Information”, and “Serial Port Information”. The serial port information frame displays the operation mode, status and connected host IP.

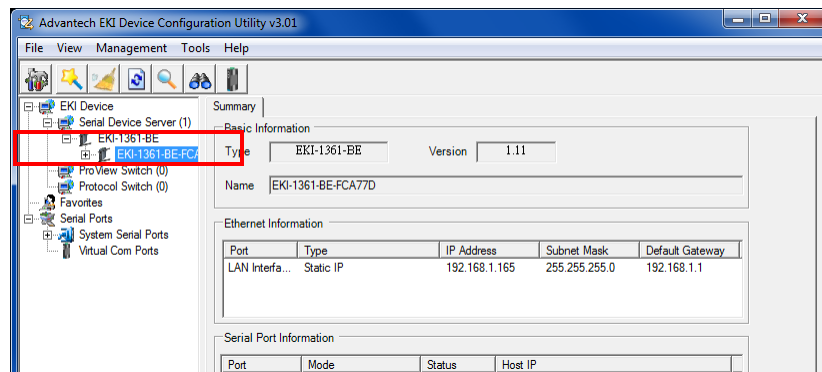


Figure 3.7 Selecting a Group

Click on the “+” before the device name, and the utility will expand the interfaces on this device server.

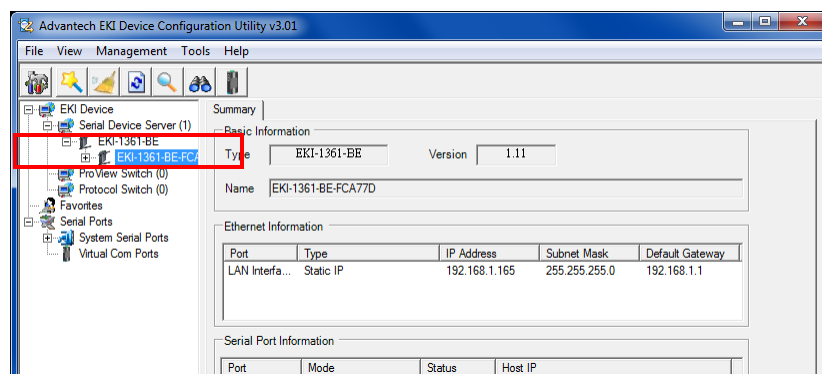


Figure 3.8 Selecting a Device

Click to enter the configuration page to change the setting. The configuration will be introduced on following sections.

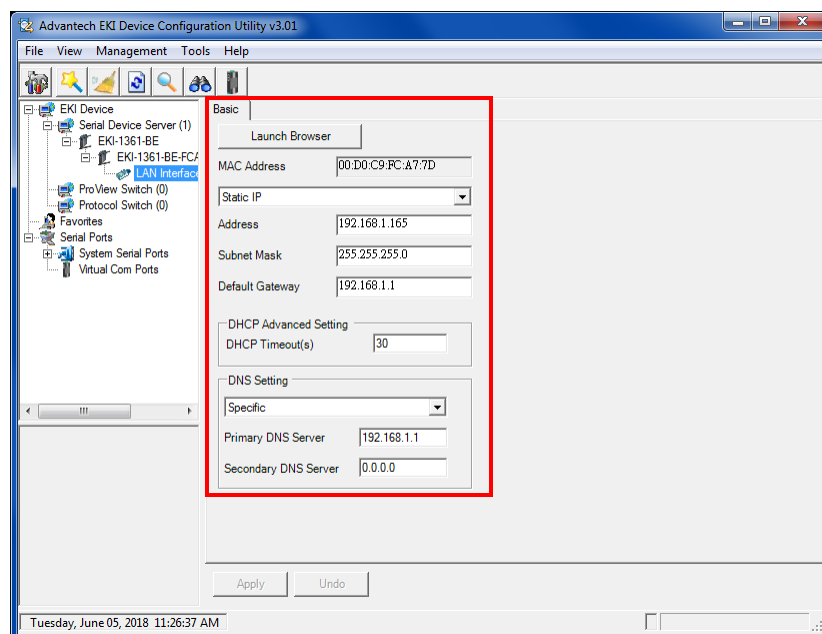


Figure 3.9 Viewing Basic Settings

3.4 Network Settings

Prior to setting up the server's IP address determine the IP address mode.

There are four mode types available:

- Static IP: mode to assign a specific assigned address
- DHCP / AutoIP: mode to automatically assign IP addresses through a DHCP server
- BOOTP / AutoIP: mode to automatically assign an IP address through the configuration server
- DHCP/BOOTP/AutoIP: mode to automatically assign an IP address using a Bootstrap Protocol or DHCP server.

The server is set with the following default IP configuration:

- 10.0.0.1

The EKI-1360-BE Series includes a software utility option, which you can install on your system, for configuration through computer-based software. The EKI-1360-BE Series also includes a web interface option for configuration through a standard web browser.

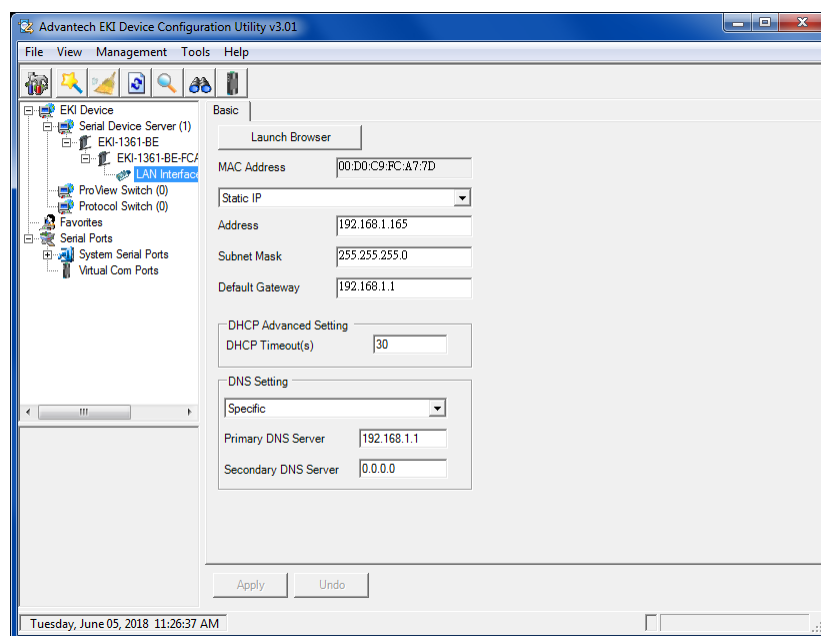



Figure 3.10 Utility Overview

You can choose from four possible IP Configuration modes --- Static, DHCP, BOOTP, and DHCP/BOOTP.

Figure 3.11 Network Settings Overview

Item	Description
Static IP	Static IP User defined IP address, Subnet Mask, and Default Gateway.
DHCP + Auto-IP	DHCP Server assigned IP address, Subnet Mask, Default Gateway, and DNS.
BOOTP + Auto-IP	BOOTP Server assigned IP address.
DHCP + BOOTP + Auto-IP	DHCP Server assigned IP address, Subnet Mask, Default Gateway, and DNS, or BOOTP Server assigned IP address. (If the DHCP Server does not respond)
DNS Setting	In order to use DNS feature, you need to set the IP address of the DNS server to be able to access the host with the domain name. The EKI-1360-BE Series device server provides Primary DNS Server and Secondary DNS Server configuration items to set the IP address of the DNS server. Secondary DNS Server is included for use when Primary DNS server is unavailable.
DHCP Advanced Setting	When you enabling DHCP protocol to get IP address, it will be waited DHCP server to give IP within DHCP time out. The default value is 180 seconds.

Note!  When you have finished the configuration of these settings for each category, please press the “Apply” button in order to make these settings effective on the Serial Device Server.

3.5 Administrator Settings

3.5.1 Locate the Serial Device Server

When several serial device servers are connected to the network, identification of a specific serial device is possible through the Locate function.

To locate the serial device server:

1. From the device list frame, locate the desired device and right-click on it to display the settings menu.
2. Select **Locate** from the menu.

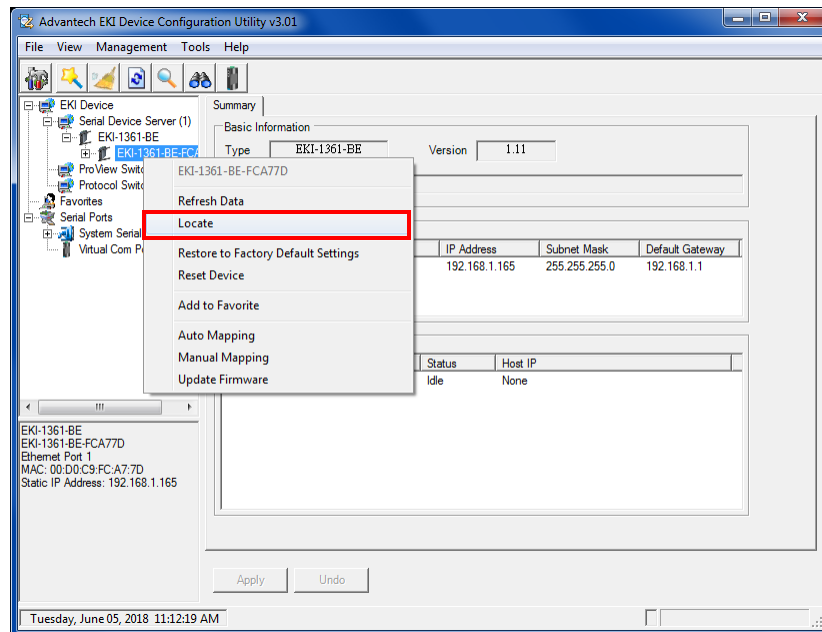


Figure 3.12 Locate the Serial Device Server

The unit's Status LED will turn solid amber and the buzzer will sound until you click **Stop Locate**.

3.5.2 Restore to Factory Default Settings

The configuration utility provides the function to restore the serial device server to factory default settings.

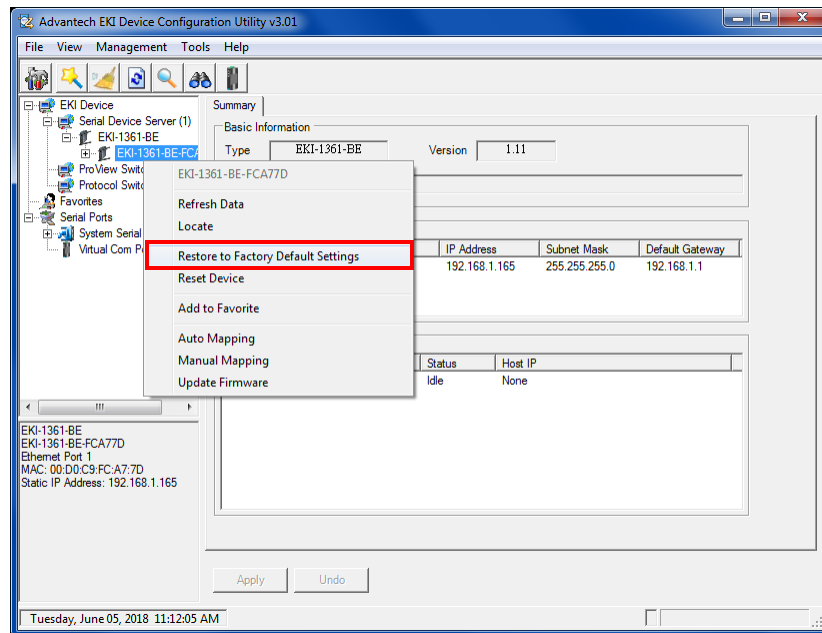


Figure 3.13 Restore to Factory Default Settings

The confirm message will display after clicking **Restore to Factory Default Settings**. If you really want to restore the serial device server to factory default settings, please click **Yes** button to continue.

Power off the serial device server within ten seconds. After reconnecting the power, all settings will be reset to the factory default. If the power supply remains connected for more than ten seconds, the serial device server will not be changed.

3.5.3 Resetting the Device

The **Reset Device** is available to allow you to reset the serial device server. The function disconnects both the ethernet and serial connections.

The function also allows the serial device server to save new configuration settings to flash memory. Once a new setting is changed, you can use the Save function to accept the changes. You will need to reset the device to save the settings to flash memory.

To reset the device:

1. Right-click a desired device to display the settings menu.
2. Select **Reset Device**.

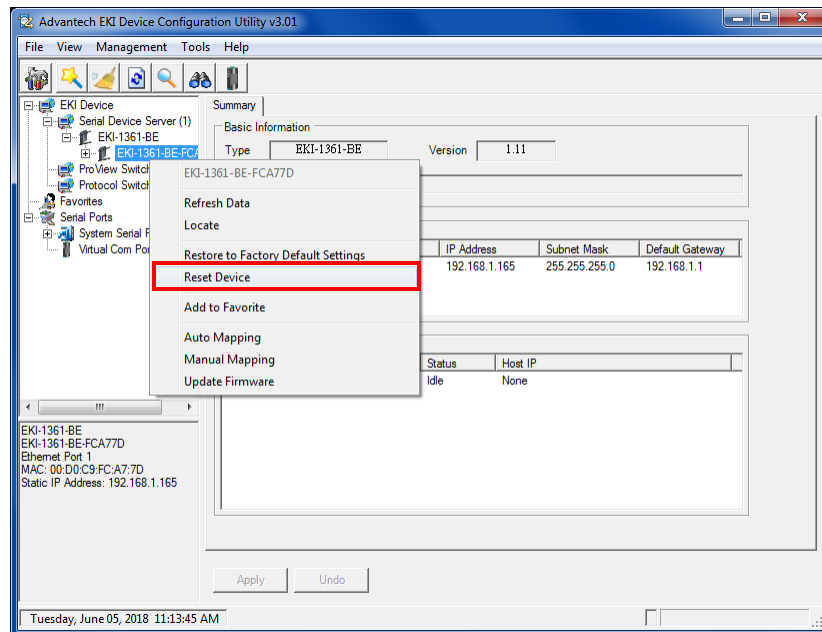


Figure 3.14 Reset Device

The device resets. Once the process is complete, the serial device server displays under the Serial Device Server listing once again.

3.5.4 Add to Favorite

The Add to Favorite function allows to easily map available devices to Favorite's. By bookmarking specific devices, you can create quickly accessible shortcuts for existing critical devices from the vast pool of locally or remotely networked EKI-1360-BE Series devices.

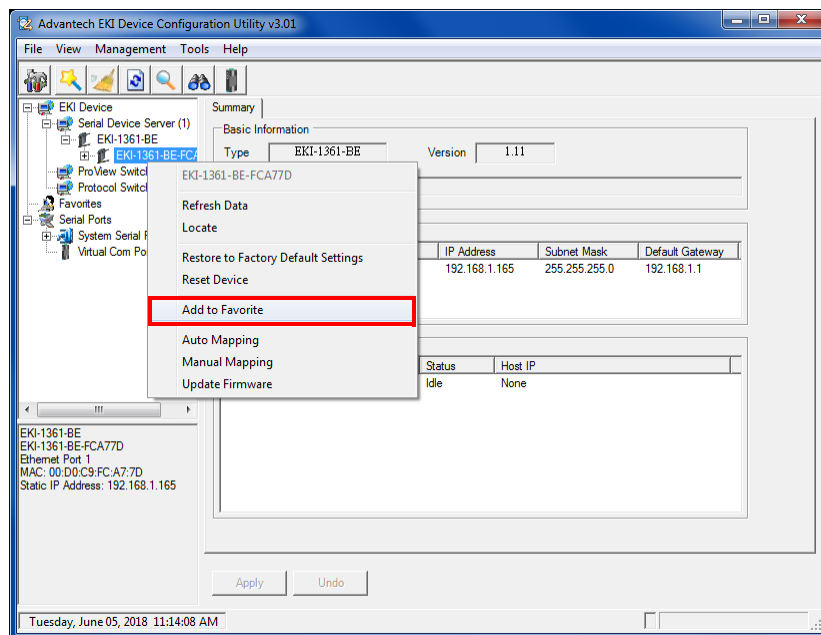


Figure 3.15 Add to Favorite

3.5.5 Auto Mapping

See “Auto Mapping” on page 44 for further details.

3.5.6 Manual Mapping

See “Manual Mapping” on page 46 for further details.

3.5.7 Update Firmware

Advantech continually upgrades its firmware to keep up with the ever-expanding world of computing. You can use the update firmware function in the utility to carry out the upgrade procedure. Please access Advantech's website: <http://www.advantech.com> to download the latest version of the firmware. Before updating the firmware, make sure that your host's Network domain is as same as the serial device server or the host can establish the TCP connection to the serial device server.

To update firmware:

1. Right-click a desired device to display the settings menu.
2. Select **Update Firmware**.

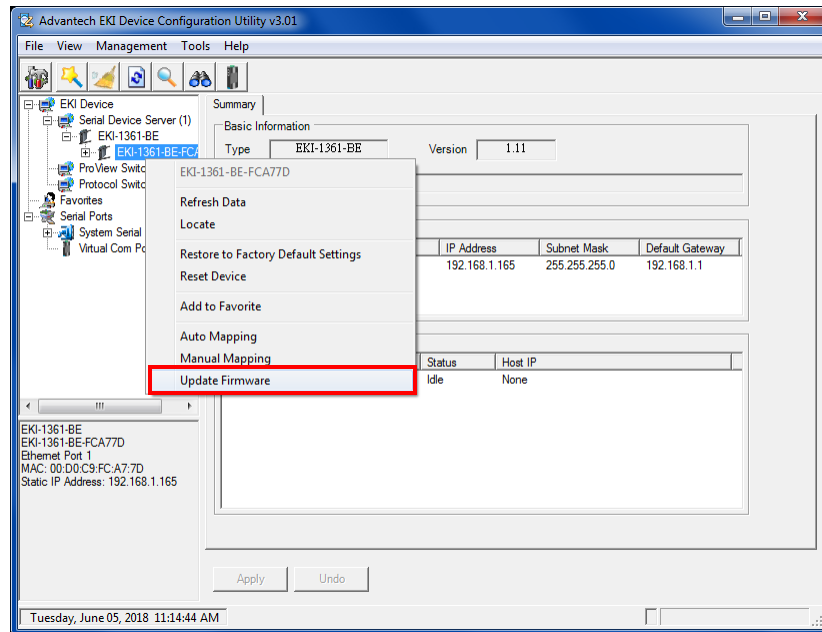


Figure 3.16 Update Firmware

3. Select the firmware file you want to update.

Wait for a few seconds for the firmware to finish updating. After the update has completed, click on the **OK** button. The serial device server will restart automatically.

Note! Be sure that the host PC Ethernet network domain is as same as the EKI-1360-BE Series serial device server or the host PC can establish the TCP connection with the serial device server while doing the updating firmware process.



Chapter 4

Selecting An
Operating Mode

4.1 Understanding the EKI-1360-BE Series

The EKI-1360-BE Series are wireless-based, serial device servers for connecting RS-232/422/485 devices to a TCP/IP network. Once connected through EKI series, the serial device will be able to send and receive data on a network like any other network device. It extends traditional COM ports of a PC with access over a TCP/IP network. Through networking, you can control and monitor remote serial devices either over a LAN or over the WAN. Since the EKI series is connected through a TCP/IP network, you might need to know some basic facts about networking in order to get the server hooked up correctly.

4.1.1 Product Description

The EKI series is designed to network-enable any RS-232/422/485 serial device and provide industry-grade hardware and easy-use software to make connecting serial devices to an Ethernet network a surprisingly simple process. These units immediately upgrade your existing serial devices for integration into the Internet world. The EKI series features a lot of powerful functions such as: high speed data transfer, access-control, auto-detection of all EKI series products, remote connection from different network domain, remote firmware download, and more.

After the simple installation steps to attach your network and serial device to the appropriate connectors on the serial device servers and driver installation, you will then be able to communicate with the serial devices via its own application software and with the EKI serial device server. COM port redirector, TCP server mode, TCP client mode, UDP server mode, UDP client mode and Control mode are all different schemes to make a serial connection across using one or more Serial device server.

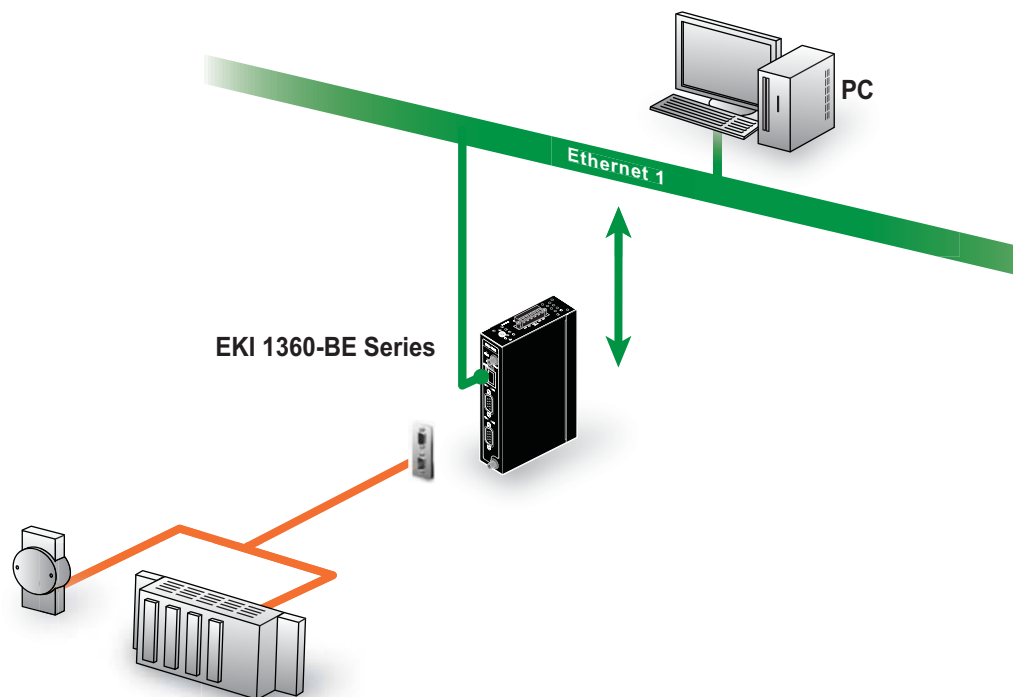


Figure 4.1 Single Ethernet Connection

4.1.2 COM Port Redirector

Advantech Serial Device Server Configuration Utility is a serial COM port redirector that creates virtual COM ports and provides access to serial device connected to Advantech serial device server. You can configure the serial device server and enable the Virtual COM port using one integrated utility. Advantech Serial Device Server Configuration Utility allows you to configure Microsoft applications to communicate with network enabled serial device servers as easily as if they were physically installed in or directly connected on the PC.

The Advantech redirector can create up to 4096 virtual COM ports. Application on the host can open virtual COM port to access the serial device servers at the same time. The redirector will handle each active virtual COM port as a separate TCP connection to Advantech serial device servers.

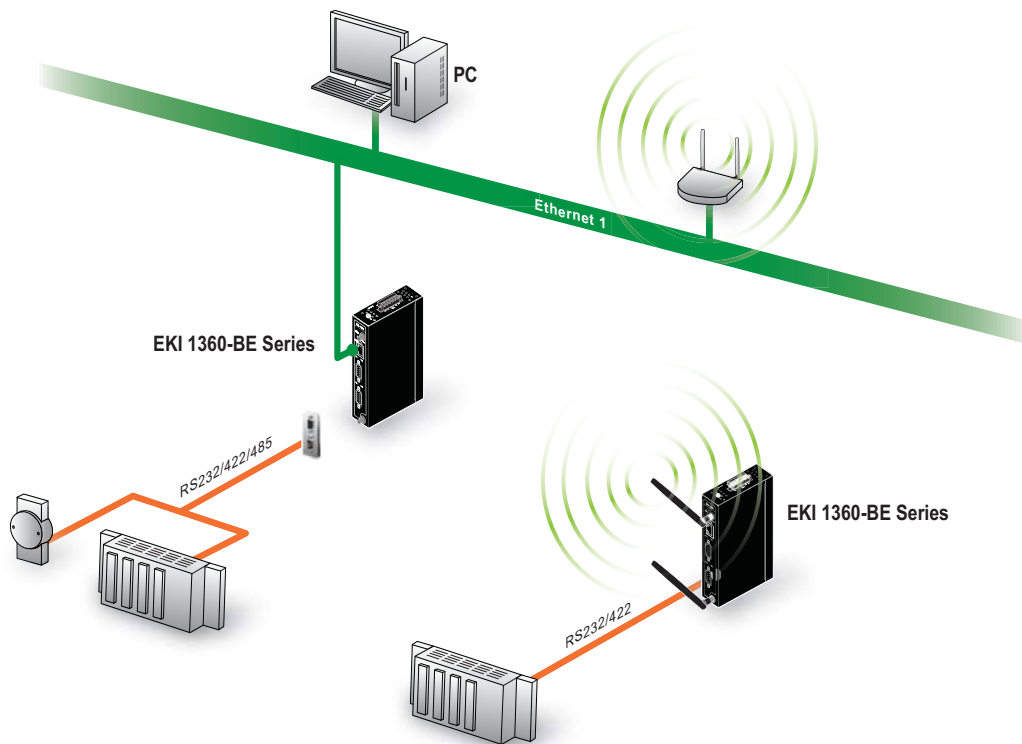


Figure 4.2 COM Port Redirector

4.1.2.1 Normal Mode

The Advantech redirector connects the Advantech serial device servers while an application open the COM port and disconnects from the Advantech serial device servers when the application closes the COM port. The redirector uses TCP network connections to the Advantech serial device server to gain the access to the connected serial devices.

4.1.2.2 Multi-Access Mode (Shared COM port mode)

Most of serial devices are connected directly and physically to the PC serial ports via a cable. The operation system, ex. Windows XP, provides the COM ports that user's application can access, and control the serial device through the serial cable. This means that the serial device can be connected to one host and only one application on this host can handle input, output and control operation on this device.

If you want to run more than one applications to use a serial device, you can employ EKI serial device servers that provide a virtual COM port for a host or multi-hosts on an Ethernet network. EKI serial device server is located between hosts and serial devices. Each serial port on the EKI serial device server can allow max. five host connections through one Ethernet port or two Ethernet ports. There are two major operation modes for Multi-Access Mode. First one is broadcast mode; EKI serial device server handles a command from one application and replies the data from the serial port to all applications that are connecting this serial port. Another one is polling mode; EKI serial device server handles the command from one application and reply to this application only. Query from other applications must be queued and wait for current process completing.

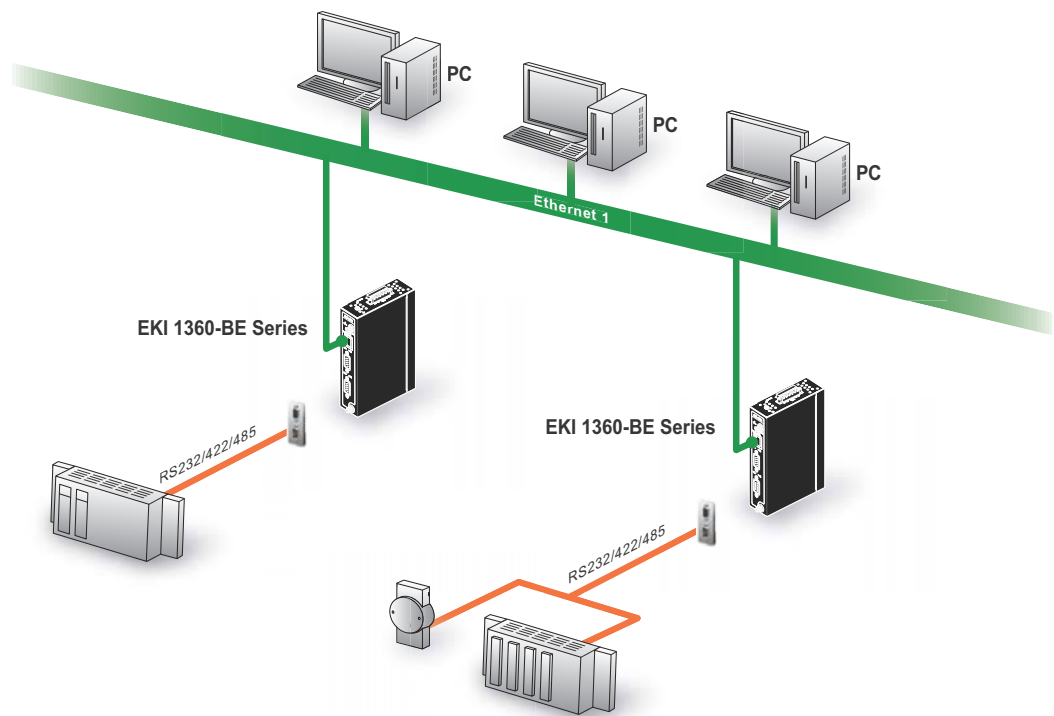


Figure 4.3 Multi-Access Mode

By using a serial device server to share serial device, you eliminate the separate serial lines and serial devices that can be attached to individual hosts. Collecting the data from these serial devices become more easily and more effectively.

4.1.3 TCP Server Mode

In TCP server mode, you might initiate the TCP connection from host to EKI serial device server. This operation mode support max. Five simultaneous connections for each serial port on EKI serial device server from one host or several hosts, however multi-hosts collect the data from one serial port at the same time.

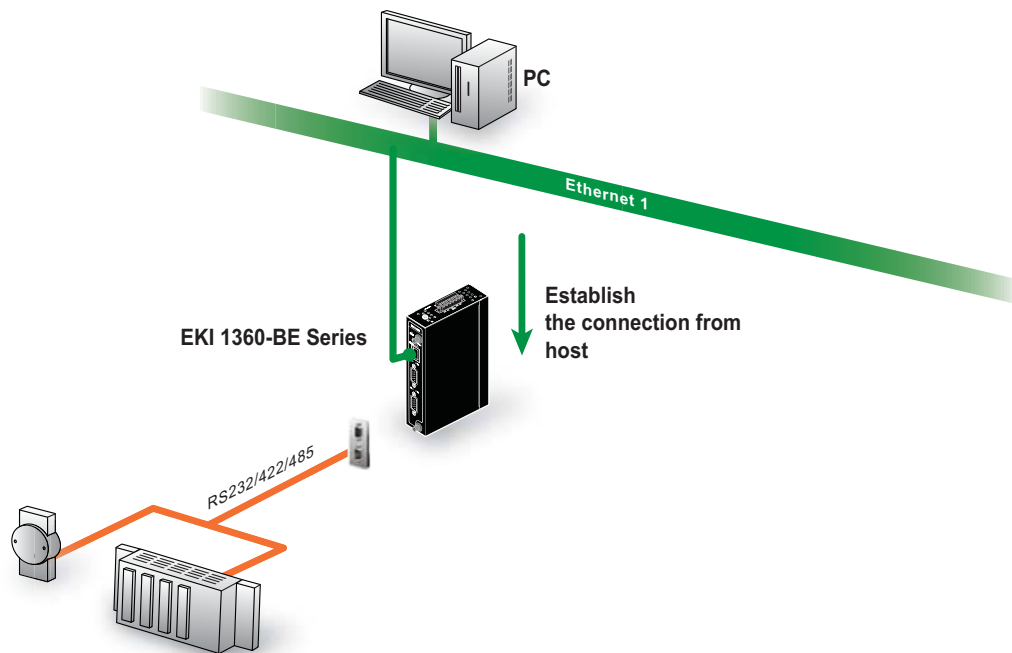


Figure 4.4 TCP Server Mode

4.1.4 TCP Client Mode

In TCP Client mode, the TCP connection will be established from EKI serial device server. This operation mode supports a maximum of 16 simultaneous connections for each serial port on EKI series to one host or several hosts. You should configure the IP address and TCP port number of the network hosts which the EKI serial device server connect to using Advantech Serial Device Server Configuration Utility. After configuration, when EKI serial device server receives the data from serial port, the device server will employ the connection to hosts which are configured.

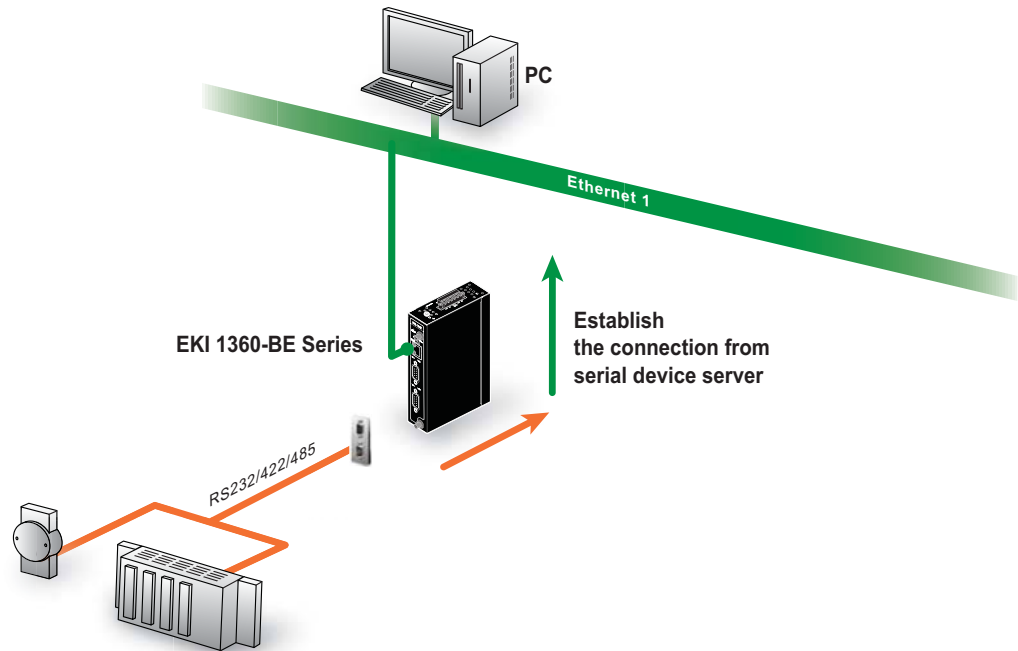


Figure 4.5 TCP Client Mode

4.1.5 Serial Tunneling Mode

Two native serial devices can communicate over an Ethernet network without any intermediate host PC and software programming. Serial Tunneling is very simple to use. You can use Advantech Serial Device Server Configuration Utility to designate one serial port as the tunneling master and another serial device server port as the tunneling slave.

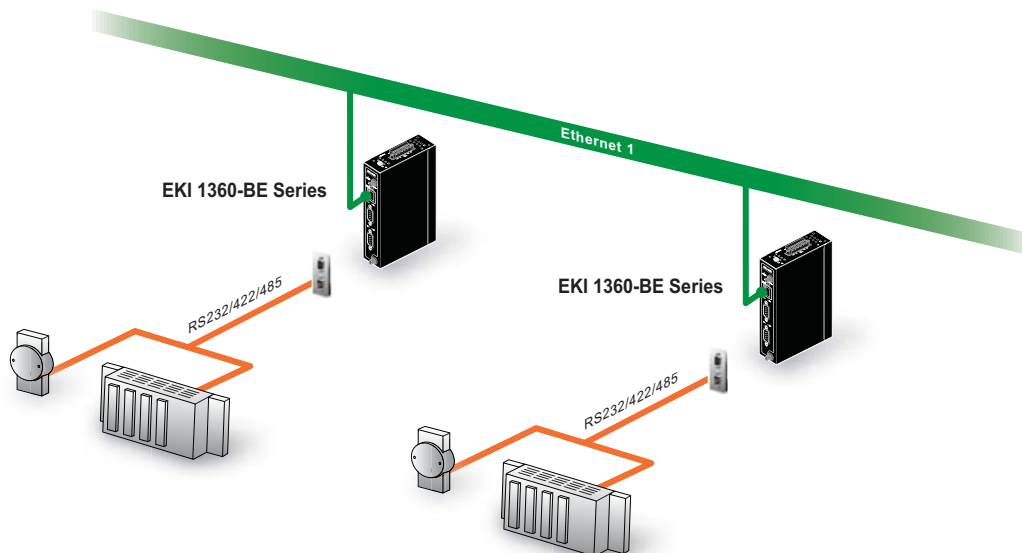


Figure 4.6 Serial Tunneling Mode

4.1.6 UDP Server/Client Mode

UDP is used primarily for broadcasting messages over a network. In the UDP server mode, EKI series access max. 8 hosts' UDP message. In the UDP client mode, EKI serial device servers transmit UDP message to max. 16 hosts simultaneously.

4.1.7 Control Mode

In controlling mode, the EKI serial device server presents a modem interface to the attached serial device: it accepts AT-style modem commands to connect / disconnect to other networking device. If you want serial device running application program to connect/disconnect to different devices by request, you can use controlling mode.

The controlling mode provides three kinds of modem AT-style commands. The serial devices can use these commands to control EKI series connecting or disconnecting to remote networking devices. Thus intelligent serial devices such as stand-alone PLC will send /receive data to/from devices one by one via Ethernet.

Chapter 5

Setting up Virtual COM
Port

5.1 Setting COM Port Redirector

Advantech COM port mapping software is a serial COM port redirector that creates virtual COM ports and provides access to serial devices connected to an Advantech serial device servers. Your serial device applications can communicate with serial devices connected to the Advantech serial device servers without software changes.

Since the virtual COM ports work like standard Windows COM ports, your application software sees no difference between a local serial device and one connected to an Advantech serial device server.

The COM redirector utility and the virtual COM port management utility are integrated into one utility with same GUI. The Advantech Serial Device Server Configuration Utility can create all Virtual COM ports using the Auto Mapping function or by using the manual mapping function.

5.2 Virtual COM Port Mapping

5.2.1 Auto Mapping

1. On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
2. Under Serial Device Servers, locate **your server** and **click the icon to expand the listing**.
3. Select the target device and right-click on it to open up the options menu window.
4. Locate **Auto Mapping** and select it.

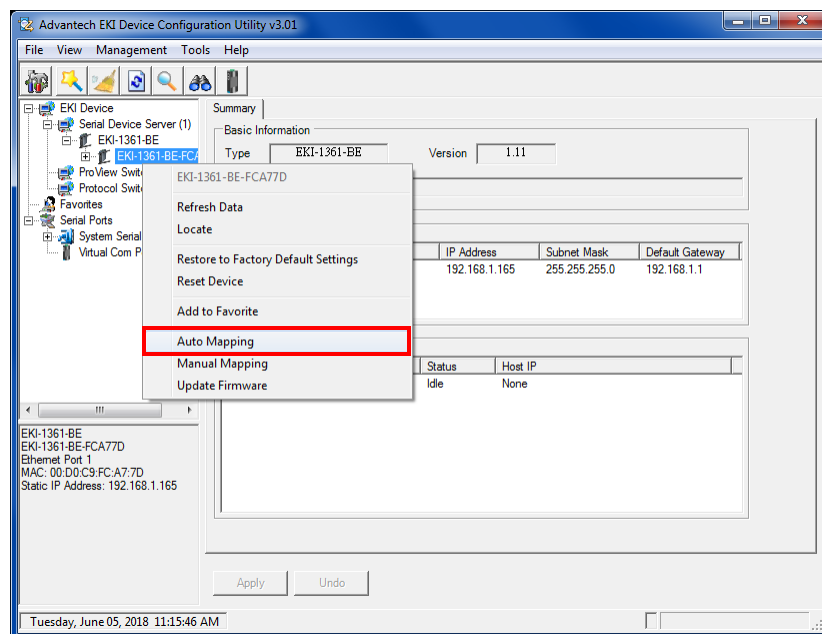


Figure 5.1 Selecting Auto Mapping

The **Batch Automatic Mapping Virtual COM Port** window displays.

5. Locate **From System Port** and click the drop-down menu to select the target COM port.
6. From the network address list, select the address options to map.
The selected address displays the Device Port and (EKI-1360-BE Series device server physical serial port) and the system port which will be the VCOM port for the PC.

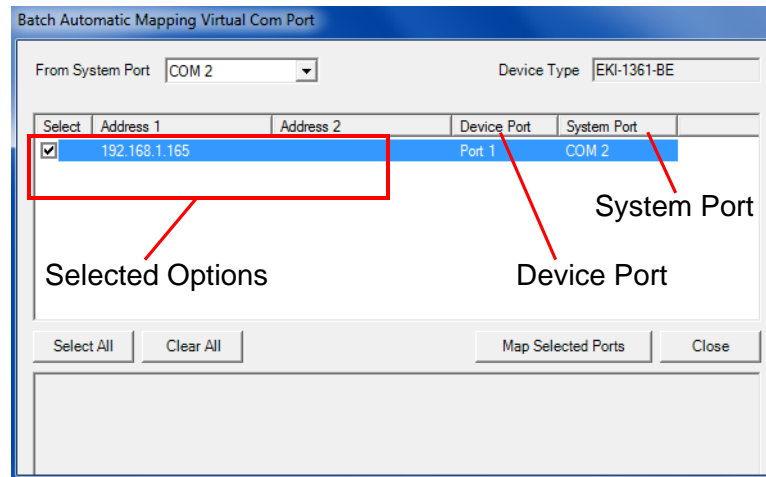


Figure 5.2 Selecting Auto Mapping

7. From the network address list, select the address options to map.
8. Click **Map Selected Ports** to set the configuration.

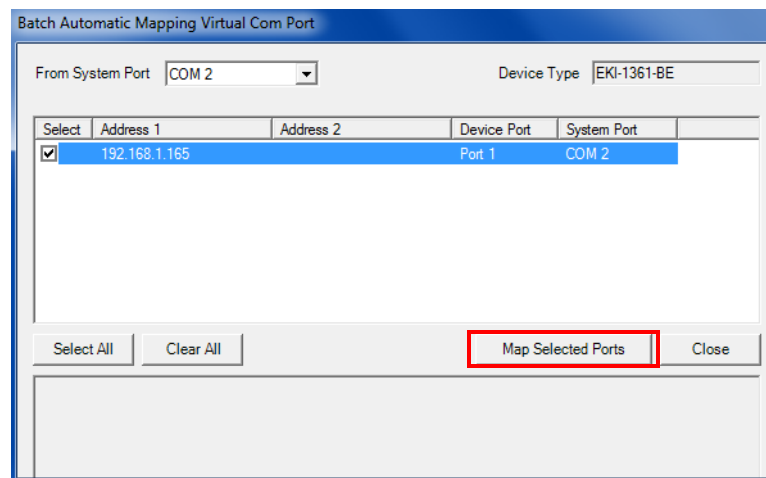


Figure 5.3 Mapping Selected Ports

Once the mapping function is initialized, a successful mapping process results in the virtual mapping of the designated physical serial port and VCOM PC port. See the following figure.

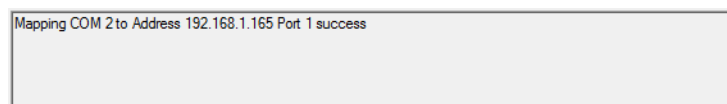 


Figure 5.4 Viewing VCOM Mapping Results

5.2.2 Manual Mapping

1. On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
2. Under **Serial Device Servers**, locate your server and click the icon to expand the listing.
3. Select the target device and right-click on it to open up the options menu window.
4. Locate **Manual Mapping** and select it.

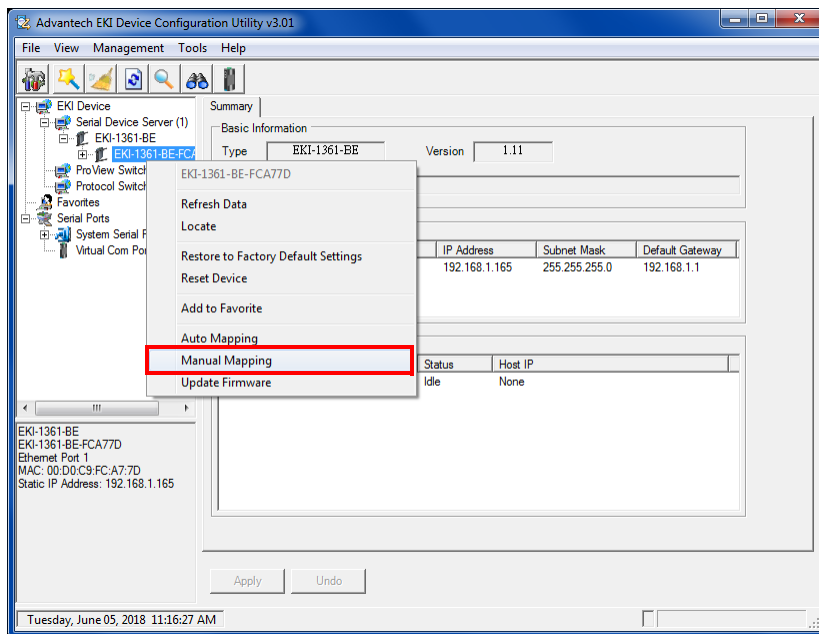


Figure 5.5 Selecting Manual Mapping

The **Manual Mapping Virtual COM Port** window displays.

5. In the **Device > Serial Port** drop-down menu, select the target port to map. This is the physical serial port on the EKI-1360-BE Series device.
6. In the **Host > COM Port** drop-down menu, select the target COM port to map. This is the virtual port on the target PC.

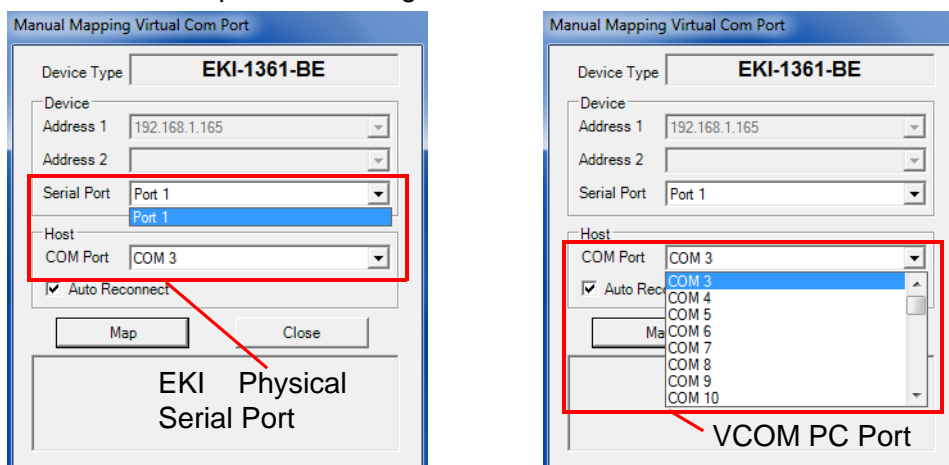


Figure 5.6 Viewing Manual VCOM Mapping Results

- Click **Map it** to continue the process. The mapping process may require a short time. Once this step is completed, the **Manual Mapping Virtual COM Port** window displays again to map the VCOM port on the target PC. Once the mapping function is initialized, a successful mapping process results in the virtual mapping of the designated physical serial port and VCOM PC port. See the following figure.

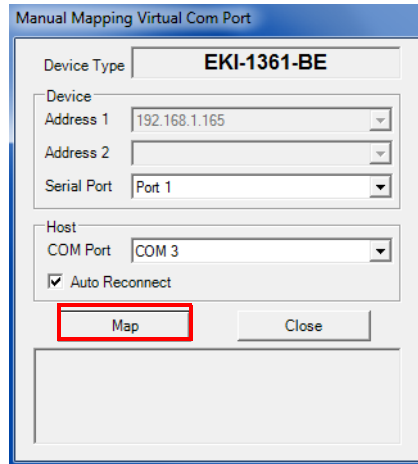


Figure 5.7 Viewing Manual VCOM Mapping Results

To allow for an automatic connection after a reboot or a power up, click the **Auto Reconnect** option to enable this function.

5.2.3 Configuration Wizard

- On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
- Under **Serial Device Servers**, locate your server and click the icon to expand the listing.
- From the tool bar, select **Configuration Wizard**.

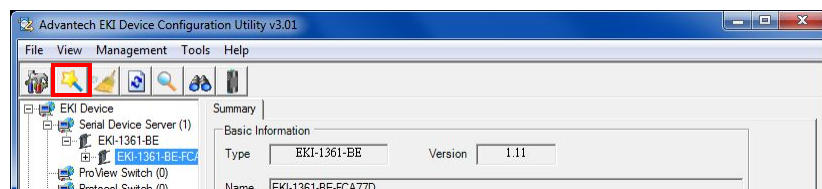


Figure 5.8 Selecting the Configuration Wizard

The Wizard screen displays and lists available devices.

- Select the target device and click **Next** to continue. The Wizard Device Settings window displays.
- Under Serial Port Settings, click the **Type** drop-down menu and select the port type. Review the settings under the Ethernet fields and verify them.
- Click **Next** to continue or **Previous** to return to the previous screen. The selected settings are displayed in the following Wizard window.
- Locate the radio button correlating to the target port to modify and click on it to select it. Verify the Device Port (EKI-1360-BE Series device physical serial port) and System Port (virtual COM port for PC) settings before continuing.
- Click **Finish** to complete the process. A Wizard complete! screen displays indicating the completion of a successful procedure.

5.2.4 Confirming Virtual COM Settings

1. On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
2. Locate **Serial Ports** menu in the menu pane and click on the Expand icon next to Virtual COM Ports to view a list of the mapped ports.
3. Select a VCOM port to view its settings.

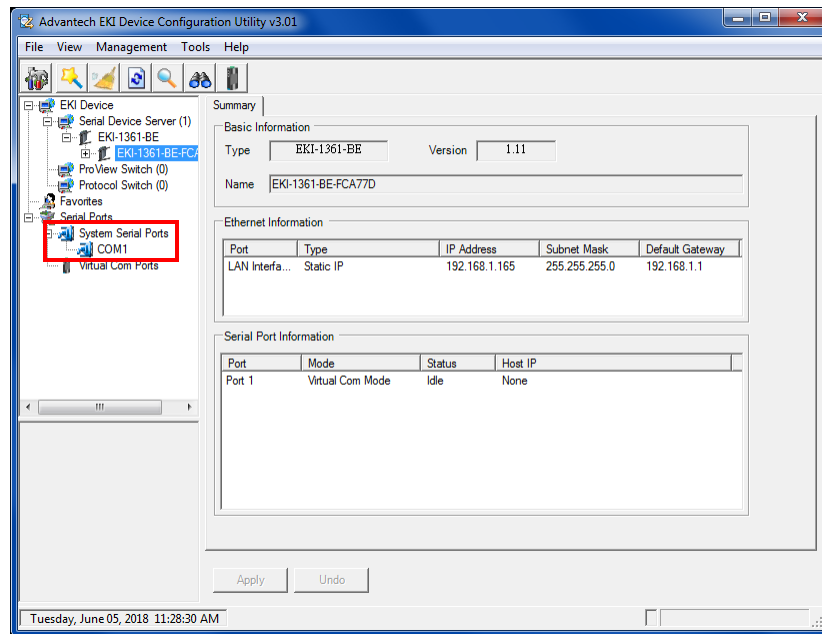


Figure 5.9 Serial Port Listing on EKI-1360-BE Series Device

For the next step, you will need to open the device manager on your system. Using the Device Manager, you can both view and change the COM port settings.

Note! *The following instructions were developed in a Windows 7 environment; the Windows XP equivalent is displayed in parentheses (). Instructions may vary according to the operating system used.*



4. On your desktop, click on the **Start** button and then on **Control Panel**. A window displays showing all the available control panels.
5. Click on **Hardware and Sound (Hardware)**. A list of all available hardware configuration options displays.
6. Under **Devices and Printers**, click on the **Device Manager** link. A new window displays showing a list of all the available devices on your computer.
7. Locate **Ports (COM & LPT)** and click on the expand icon. A list of all available serial and parallel port devices display.

The newly mapped VCOM port should be listed under the same mapped settings used in the previous steps.

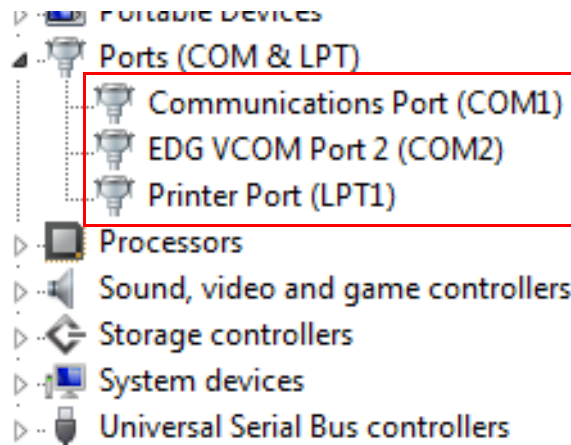


Figure 5.10 System Port VCOM Mapping Configuration

The newly mapped VCOM port is listed under the same mapped settings used in the previous steps. The settings correspond to the VCOM port configuration on the EKI-1360-BE Series device, see the following figure.

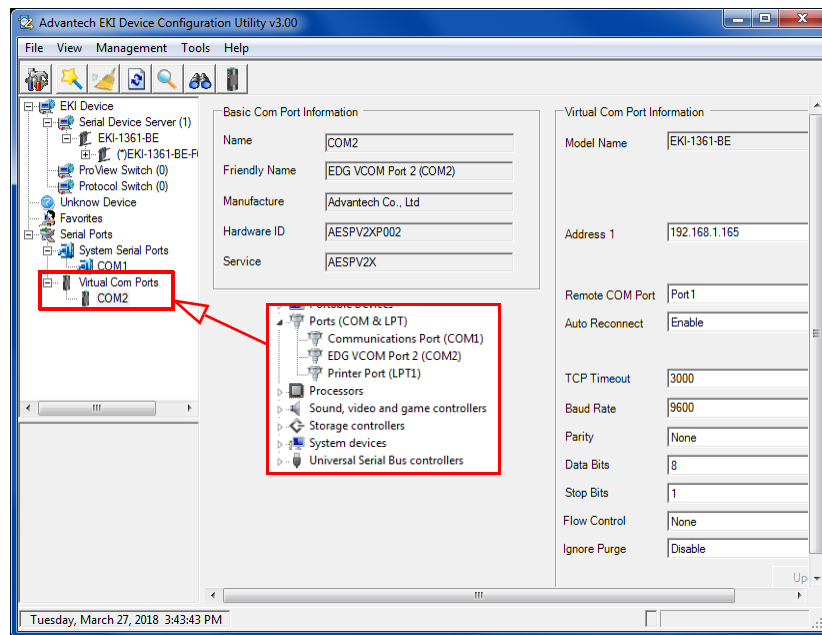


Figure 5.11 Verifying VCOM Mapping Configuration

If the settings do not correspond, the VCOM mapping is not correct. See “Virtual COM Port Mapping” on page 44 to re-map the VCOM ports.

5.2.5 Removing VCOM Ports

1. On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
2. Under Serial Ports, click the expand icon on Virtual COM Ports to view the configured port list.
3. Locate the port to remove and right-click on it to open the options menu.
4. Scroll down to **Remove This Port** and click on it to initiate the procedure.

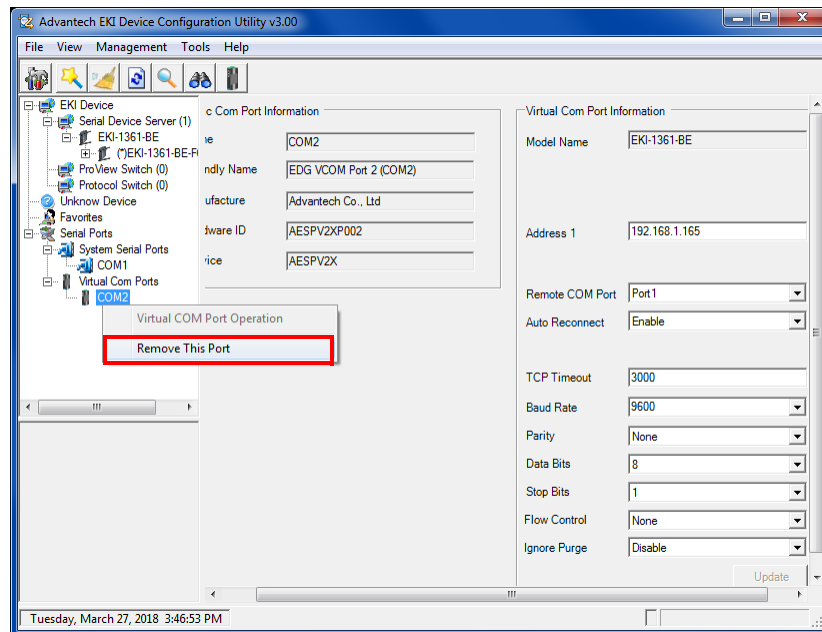


Figure 5.12 Remove VCOM Port

A Remove Port confirmation window displays.

5. Click **OK** to continue with the removal process or **Cancel** to return to the previous menu.

Once the procedure is completed, a prompt displays the successful removal of the port from the VCOM mapping list.

5.2.6 Exporting and Importing VCOM Mapping

Importing and exporting Virtual COM Port Mapping is useful when the factory has already used a number of serial device servers in VCOM mode. You can easily upgrade to a new utility, and don't need to re-map the Virtual COM Ports. For example, when you would like to upgrade from Utility 1.71 to Utility 3.0, you can export your own mapped Virtual COM Ports in Utility 1.71 and save them as a *.cpm file.

After upgrading to Utility 3.0, import your *.cpm file and restore your own Virtual COM Ports.

Note! *This Virtual COM Port Mapping tool can only recover Virtual COM Ports that have been mapped previously. For newly installed serial device servers, please follow the virtual COM Port mapping steps.*



1. On your desktop, navigate to **Start > All Programs > EKI Device Configuration Utility** and click **Advantech EKI Device Configuration Utility** to open the utility.
2. Locate **Serial Ports** menu in the menu pane and click on the Expand icon next to Virtual COM Ports to view a list of the mapped ports.
3. Select a VCOM port.
4. Click **Import Virtual COM Port Mapping** or **Export Virtual COM Port Mapping** in the File menu.

Chapter 6

Web Interface

6.1 Overview

EKI-1360-BE Series serial device server can be configured through a web interface. By using a standard web browser, the same procedure as with the Windows configuration utility can be used. In the browser's address field, enter the IP Address of your EKI-1360-BE Series serial device server. The default IP setting is 10.0.0.1, but you should use the IP which you have previously assigned for this device. Once the IP is entered, you will be presented with the following windows.

Note! *Before using the web-based configuration, make sure your host PC Ethernet network IP domain is as same as the serial device server, or it can establish the TCP connection with the serial device server.*

Note! *It is recommended that you use Microsoft Internet Explorer 7.0 or higher.*

6.2 Accessing the Web Page

6.2.1 Accessing the Web Page via Configuration Utility

To access the web page via configuration utility:

1. Select Ethernet under the desired device.
2. Click **Launch Browser**.

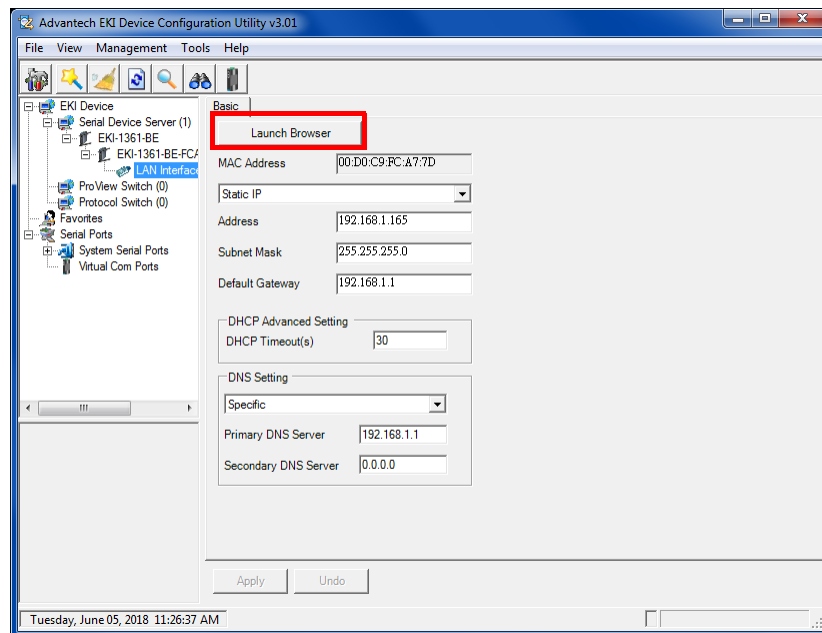


Figure 6.1 Accessing the Web Page via Configuration Utility

6.2.2 Accessing the Web Page via Web Browser

Once the device is installed and connected, power on the device. The following information guides you through the logging in process.

1. Launch your web browser on the PC.
2. In the browser's address bar, type the device's default IP address (LAN Interface 1: 10.0.0.1).
The main menu is shown.

6.3 Overview

To access this page, click **System**.

System Info	
Information Name	Information Value
Firmware Version	1.08
Local Hostname	
System Time	Tue Apr 18 01:44:26 UTC 2017
System Up Time	0 day 1 hr 56 min 51 sec
System Platform	EKI-1361-BE
Memory	
Information Name	Information Value
Total Available	68372 kB
Free	83552 kB
Buffered	4716 kB
Local Network	
Information Name	Information Value
Local IP Address	192.168.1.165
Local Netmask	255.255.255.0
MAC Address	00:D0:C9:FC:A7:7D

Figure 6.2 System

The following table describes the items in the previous figure.

Item	Description
System Info	
Firmware Version	Display the current firmware version of the device.
Local Hostname	Display the current local hostname of the device.
System Time	Displays the current date of the device.
System Up Time	Displays the time since the last device reboot.
System Platform	Displays the model name of the device.
Memory	
Total Available	Displays the total amount of physical memory installed RAM in kiloBytes (kB) on the device.
Free	Displays the currently unused RAM in kiloBytes (kB) on the device.
Buffered	Displays the RAM in kiloBytes (kB) set aside as a temporary holding place for data.

Item	Description
Local Network	
Local IP Address	Displays the assigned IP address of the device.
Local Netmask	Displays the assigned netmask of the device.
MAC Address	Displays the MAC address of the device.

6.4 Network Settings

6.4.1 LAN

To access this page, click **Network Settings > LAN**.

Figure 6.3 Network Settings > LAN

The following table describes the items in the previous figure.

Item	Description
Local Hostname	Enter the device name: up to 31 alphanumeric characters.
Network mode	Click the drop-down menu to select the IP Address Setting mode: Static or DHCP.
IP Address	Enter a value to specify the IP address of the interface. The default is 10.0.0.1.
Subnet Mask	Enter a value to specify the IP subnet mask for the interface. The default is 255.255.255.0.
Default Gateway	Enter a value to specify the default gateway for the interface. The default is 192.168.1.254.
DNS	Click the radio button to select the DNS mode: Automatic or Specific.
DNS 1	Enter a value to specify the default DNS 1 for the interface. The default is 192.168.1.1.
DNS 2	Enter a value to specify the default DNS 2 for the interface.
MAC Address	Display the MAC address to which packets are statically forwarded.
Apply	Click Apply to save the values and update the screen.

Note! All new configurations will take effect after rebooting. To reboot the device, click **Administration > Tools > Reboot**.



6.5 Wireless Settings

6.5.1 Basic

To access this page, click **Wireless Settings > Basic**.

Basic Wireless Settings

Wireless Network

Operation Mode: Client

SSID: EKI-1361

BSSID: 00:D0:C9:FC:A7:7E

Operation frequency

Country Code: US (United States)

Channel Selection: Manual

Band: 5G

Channel bandwidth: 11ac - VHT 80

Channel 5G

- ☐ Channel 36 : 5.18 GHz
- ☐ Channel 44 : 5.22 GHz
- ☐ Channel 48 : 5.24 GHz
- ☐ Channel 149 : 5.745 GHz
- ☐ Channel 153 : 5.765 GHz
- ☐ Channel 157 : 5.785 GHz
- ☐ Channel 161 : 5.805 GHz

Apply

Figure 6.4 Wireless Settings > Basic

The following table describes the items in the previous figure.

Item	Description
Wireless Network	
Operation Mode	Click the drop-down menu to select an operation mode.
SSID	Enter the name to distinguish it from other networks in your neighborhood.
SSID broadcast	Click the drop-down menu to enable or disable the SSID broadcast function. The function is only enabled when Operation Mode is set to Access Point.
AP Isolation	Click the drop-down menu to enable or disable the AP Isolation function. The function is only enabled when Operation Mode is set to Access Point.

Item	Description
BSSID	Display the MAC address of the device.
Operation frequency	
Country Code	Click the drop-down menu to select the country code to specify different selectable channels. Available options: US (United States), Germany, France, China and Japan. Some specific channels and/or operational frequency bands are country dependent.
Channel Selection	Click the drop-down menu to select Auto (default) or Manual. The Auto selection allows the device to select a band. The Manual selection provides access to a selection of the option band (2.4G / 5G).
Band	Click the drop-down menu to select the band channel. The function is only enabled when Channel Selection is set to Manual.
Channel bandwidth or Band / Channel bandwidth	Click the drop-down menu to select the band and channel bandwidth.
Channel/Frequency	Select the 2.4 or 5G wireless frequency to the least congested channel. The available settings on a 2.4G setting are 2.412 GHz to 2.484 GHz (802.11B). For 5G, the available settings are 5.18 GHz to 5.825 GHz.
Apply	Click Apply to save the values and update the screen.

6.5.2 Advanced

To access this page, click **Wireless Settings > Advanced**.

Figure 6.5 Wireless Settings > Advanced

The following table describes the items in the previous figure.

Item	Description
Client Settings	
Roam	Click the drop-down menu to enable/disable the roaming function (default: Disable). The function allows client devices to switch between one access point (AP) to another.

Item	Description
Watchdog	<p>The function stops unsecured wireless LAN usage across the network.</p> <ul style="list-style-type: none"> ■ Disassociation: Transmits disassociation and de-authentication frames to prevent client association. Detected rogue WLANs. ■ Ping: The feature pings a specified IP address. If there is no response to the pings, the AP performs one of the following functions: Restart WiFi, Reboot, or Force Re-association.
Watchdog Action	Click the drop-down menu to associate a response to the Watchdog event, options: Restart WiFi, Reboot, Force Re-association.
Disassociate Timer	Set the timer in seconds to set the disassociation setting. If the device stays in an invalid state for as long as the set timer period, the system automatically reboots.
Ping target	Enter the IP address to ping when Watchdog Ping is selected.
Ping Waittime	Enter a value in seconds to designate the interval between pings.
Ping Loss Counter	Enter a value to activate the Watchdog function when the configured number of ping failure time is reached.
Advanced Wireless Setting	
Transmission Power	Click the drop-down menu to set the transmission power of the WiFi. By default the AP transmits at full power (100mW), options: Full, Half, Quarter.
Short Guard Interval	Click the drop-down menu to enable/disable the short guard interval. In 802.11 operation, the guard interval is 800ns. The short guard interval time is 400ns to allow for an increased throughput.
Apply	Click Apply to save the values and update the screen.

6.5.3 Security

To access this page, click **Wireless Settings > Security**.

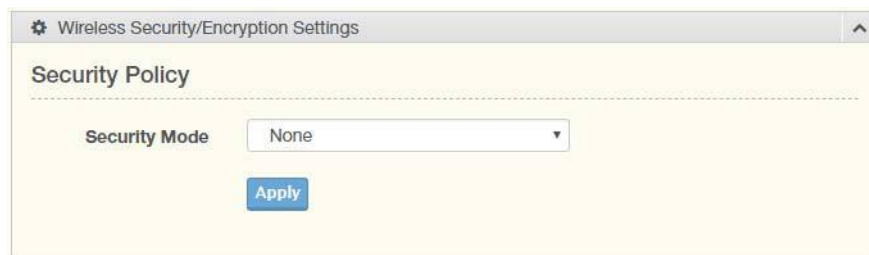


Figure 6.6 Wireless Settings > Security

The following table describes the items in the previous figure.

Item	Description
Security Policy	
Security Mode	Click the drop-down menu to select the encryption when communication. Available options: None, WEP, WPA-Personal and WPA-Enterprise. If data encryption is enabled, the key is required and only sharing the same key with other wireless devices can the communication be established.
Apply	Click Apply to save the values and update the screen.

6.5.4 Statistics

To access this page, click **Wireless Settings > Statistics**.

Overview	
Information Name	Information Value
Mode	Client
SSID	EKI-1361
Channel / Frequency	
Receive Statistics	
Information Name	Information Value
BSSID	
Signal Level	dBm
Wlan status	
Information Name	Information Value
TX packets	0
TX bytes	0
RX packets	0
RX bytes	0

Figure 6.7 Wireless Settings > Statistics

The following table describes the items in the previous figure.

Item	Description
Overview	
Mode	Display the current operation mode of the device.
SSID	Display the SSID.
Channel / Frequency	Display the current channel / frequency of the device.
Receive Statistics	
BSSID	Displays the basic service set identifier (BSSID), access point unique MAC address.
Signal Level	Displays the power level measure in decibel-milliwatts of the listed BSSID.
Wlan status	
TX packets	Display the current Tx packets.
TX bytes	Display the current Tx bytes.
RX packets	Display the current Rx packets.
RX bytes	Display the current Rx bytes.
Apply	Click Apply to save the values and update the screen.

6.5.5 Site Survey

To access this page, click **Wireless Settings > Site Survey**.

Refresh				
AP list				
SSID	BSSID	Frequency	Signal level	Encryption
	10:7B:EF:32:DD:FE	2412 MHz	-64 dBm	WPA-personal
minyang	F0:7D:68:94:75:10	2417 MHz	-68 dBm	WPA-personal
HomeNo.94_5G-3	60:45:CB:C9:22:94	5805 MHz	-84 dBm	WPA-personal
vivi	64:77:7D:C1:44:C8	2437 MHz	-78 dBm	WPA-personal
TP-LINK_nien	18:A6:F7:AB:C4:9E	2452 MHz	-83 dBm	WPA-personal
dark-cacao2	78:32:1B:63:B0:D5	2447 MHz	-87 dBm	WPA-personal
TP-LINK_AF256E	F8:D1:11:AF:25:6E	2437 MHz	-86 dBm	WPA-personal
HomeNo.94-2	60:45:CB:C9:30:A8	2412 MHz	-83 dBm	WPA-personal
Guest	F0:79:59:D1:7E:09	2447 MHz	-86 dBm	WPA-personal
Super8312-N18	F0:79:59:D1:7E:08	2447 MHz	-81 dBm	WPA-personal
HomeNo.94-3	60:45:CB:C9:22:90	2452 MHz	-88 dBm	WPA-personal
DSL-6641K	28:10:7B:44:14:E5	2437 MHz	-85 dBm	Open
Chexi.chou	28:6C:07:CD:93:80	2462 MHz	-87 dBm	WPA-personal

Figure 6.8 Wireless Settings > Site Survey

The following table describes the items in the previous figure.

Item	Description
Refresh	Click Refresh to update the screen.

6.5.6 Access Control

The Access Control feature is only available when the wireless mode of the device is set to AP, see “Basic” on page 56.

Access Control allows for an administrator to allow or deny access by defining specific devices through their MAC address.

To access this page, click **Wireless Settings > Access Control**.

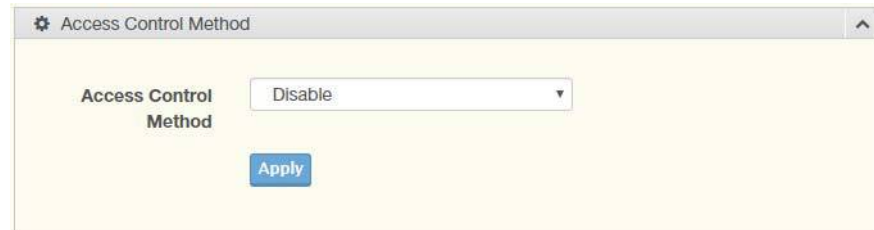


Figure 6.9 Wireless Settings > Access Control

The following table describes the items in the previous figure.

Item	Description
Access Control Method	Click the drop-down menu to set the access control method: Disable, Deny or Allow. In the Deny or Allow menu, enter the MAC address of the target device - support for up to 32 target devices.
Apply	Click Apply to save the values and update the screen.

6.5.7 Log

To access this page, click **Wireless Settings > Log**.

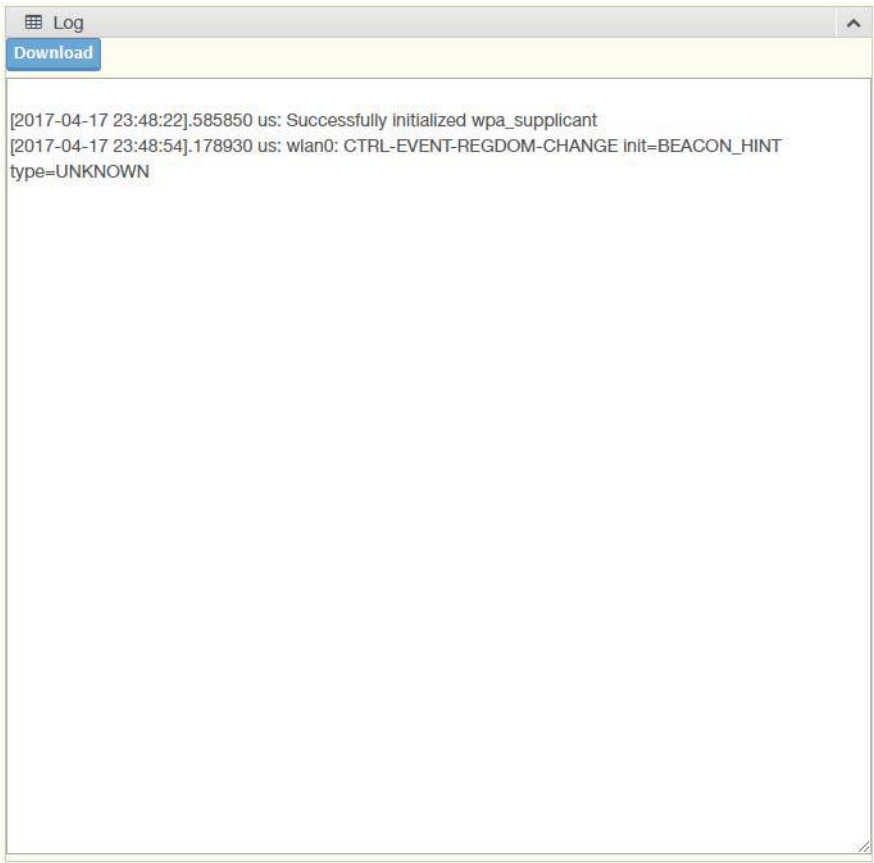


Figure 6.10 Wireless Settings > Log

The following table describes the items in the previous figure.

Item	Description
Download	Click Download to download the log file.


6.6 Port Configuration

The serial port configuration menu has Basic, Operation Mode, and Advanced Settings.

6.6.1 Basic

The Basic menu allows for the configuration of the serial interface type, baud rate, parity, data / stop bits, and flow control for port configuration.

To access this page, click **Port Configuration > Basic**.

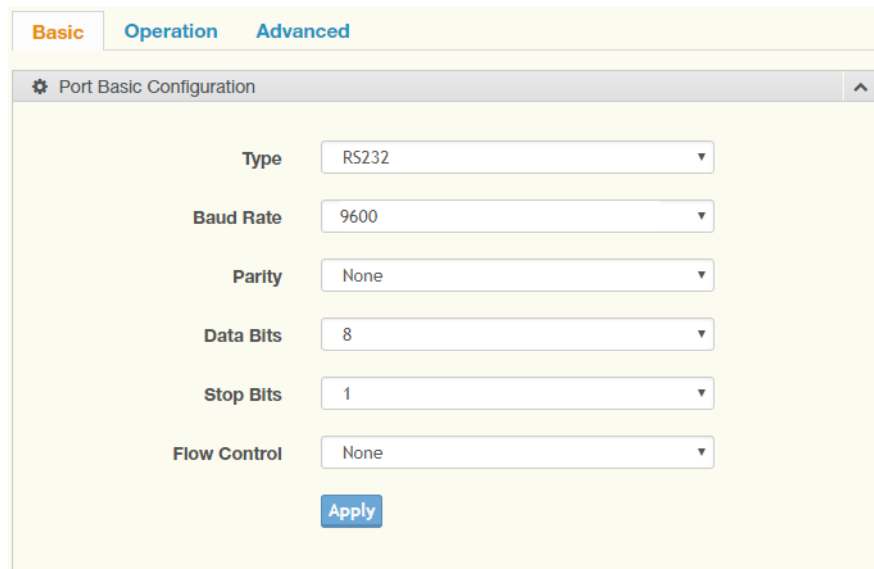

The screenshot shows a web interface for 'Port Basic Configuration'. At the top, there are three tabs: 'Basic' (selected), 'Operation', and 'Advanced'. Below the tabs is a title bar with a gear icon and the text 'Port Basic Configuration'. The main area contains six configuration items, each with a label and a drop-down menu:

- Type: RS232
- Baud Rate: 9600
- Parity: None
- Data Bits: 8
- Stop Bits: 1
- Flow Control: None

At the bottom of the form is a blue 'Apply' button.

Figure 6.11 Port Configuration > Basic

The following table describes the items in the previous figure.

Item	Description
Type	Click the drop-down menu to select a serial interface: RS232, RS422 or RS485.
Baud Rate	Enter a value to specify the baud rate. The value should conform to the current transmission speeds of connected devices when setting the baud rate.
Parity	Click the drop-down menu to select the parity: None, Odd, Even, Mark or Space.
Data Bits	Click the drop-down menu to select the data bits: 5, 6, 7, or 8.
Stop Bits	Click the drop-down menu to select the stop bits: 1, 1.5 or 2.
Flow Control	Click the drop-down menu to select the flow control mode: None, Xon/Xoff or RTS/CTS
Apply	Click Apply to save the values and update the screen.

6.6.2 Operation

The Operation menu allows for the configuration of the mode type and related attributes for port configuration.

To access this page, click **Port Configuration > Operation**.

Basic Operation Advanced

Port Operation Configuration

Mode Virtual COM Mode

Host Idle Timeout(s) 60 (0 - 65535)

Response Timeout(ms) 0 (100 - 65535, or 0)

Frame Break(ms) 0 (10 - 65535, or 0)

Pack conditions (Pack sent immediately when reach 1024 Bytes)

☐ By size Bytes (1 - 1024)

☐ By interval ms (1 - 60000)

☐ By end-character

Char Format ASCII

Char Value

Port Data Buffering

Media NONE

When Data Full Stop

Apply

Figure 6.12 Port Configuration > Operation

The following table describes the items in the previous figure.

Item	Description
Mode	Click the drop-down menu to select the port configuration mode: Virtual COM Mode, USDG Data Mode, USDG Control Mode or RFC2217 Mode.
Host Idle Timeout(s)	Enter a value to define the host idle timeout period.
Response Timeout(s)	Enter a value to define the response timeout period.
Frame Break(ms)	Enter a value to specify the frame break time.
Pack conditions (Pack sent immediately when reach 1024 Bytes)	
By size	Click the option to sent pack immediately by size.
By interval	Click the option to sent pack immediately by interval.
By end-character	Click the option to sent pack immediately by end-character.
Port Data Buffering	
Media	Click the drop-down menu to select port data buffering type: None or RAM.

Item	Description
When Data Full	Click the drop-down menu to select process mode when data full: Stop.
Apply	Click Apply to save the values and update the screen.

6.6.3 Advanced

The Advanced menu allows for the configuration of the time delay, buffer data size and FIFO size for port configuration.

To access this page, click **Port Configuration > Advanced**.

Figure 6.13 Port Configuration > Operation

The following table describes the items in the previous figure.

Item	Description
Ignore Purge	Click the option to purge the serial port when the serial port opens first time.
Disable Character Timeout Detection	Click the option to disable the serial port character timeout detection.
Disable Multiple Connection	Click the option to disable the multi-access function. Then only one TCP connection is allowed on this serial port.
Enable BufferData Size	Click the option to enter the value to queue data to become a packet.
USDG Advanced Options (Flow Control will overwrite these options)	
RTS Control	Click the drop-down menu to select the status of RTS: ON, OFF or Toggle By Connect.
DTR Control	Click the drop-down menu to select the status of DTR: ON, OFF or Toggle By Connect.
Apply	Click Apply to save the values and update the screen.

6.7 Monitor

The EKI-1360-BE Series device server allows monitoring of the serial ports' status. The serial port's operation mode and status is available for display. The IP address of the host PC which is communicating with serial port is also displayed.


The Monitor function provides a method to monitor the serial device server's status (operation mode, baud rate, data bits, stop bits, parity and RTS/XON/DTR).

Monitoring information is divided into three main message types: Setting/Statistic/Connected IP.

6.7.1 Setting

The Monitor Setting page allows for easy viewing of the port's statistics.

To access this page, click **Monitor > Setting**.

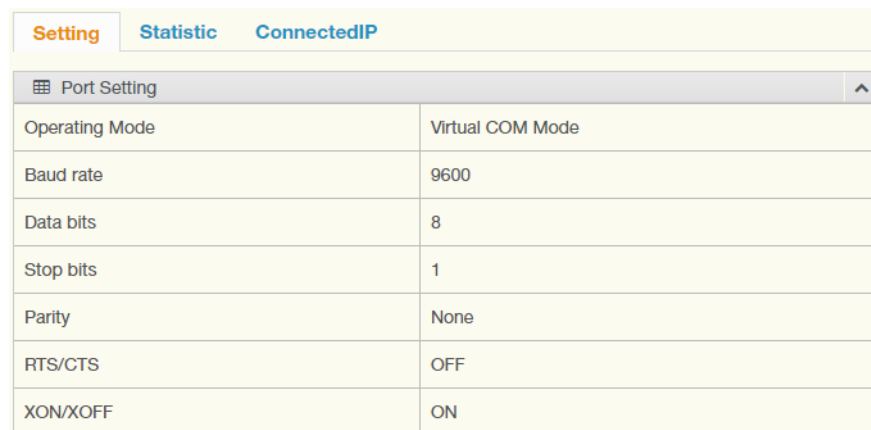The screenshot shows a web interface with three tabs: 'Setting' (highlighted in orange), 'Statistic', and 'ConnectedIP'. Below the tabs is a section titled 'Port Setting' with a list icon and an upward arrow. It contains a table with two columns. The first column lists settings: Operating Mode, Baud rate, Data bits, Stop bits, Parity, RTS/CTS, and XON/XOFF. The second column shows the current values: Virtual COM Mode, 9600, 8, 1, None, OFF, and ON.

Setting	Statistic	ConnectedIP
Port Setting		
Operating Mode	Virtual COM Mode	
Baud rate	9600	
Data bits	8	
Stop bits	1	
Parity	None	
RTS/CTS	OFF	
XON/XOFF	ON	

Figure 6.14 Monitor > Setting

The following table describes the items in the previous figure.

Item	Description
Operation Mode	Display the current operation mode of the selected port.
Baud Rate	Display the current baud rate of the selected port.
Data Bits	Display the current data bits of the selected port.
Stop Bits	Display the current stop bits of the selected port.
Parity	Display the current parity of the selected port.
RTS/CTS	Display the current RTS/CTS status of the selected port.
XON/XOFF	Display the current XON/OFF status of the selected port.

6.7.2 Statistic

The Monitor Statistic page allows for easy viewing of the port's TX/RX data count. To access this page, click **Monitor > Statistic**.

Setting	Statistic	ConnectedIP
Port Statistic		^
Tx Count	0	
Rx Count	0	
Total Tx Count	0	
Total Rx Count	0	
RTS	ON	
CTS	OFF	
DTR	ON	
DSR	OFF	
DCD	OFF	

Figure 6.15 Monitor > Statistic

The following table describes the items in the previous figure.

Item	Description
Tx Count	Display the current Tx count of the selected port.
Rx Count	Display the current Rx count of the selected port.
Total Tx Count	Display the current total Tx count of the selected port.
Total Rx Count	Display the current total Rx count of the selected port.
RTS	Display the current RTS status of the selected port.
CTS	Display the current CTS status of the selected port.
DTR	Display the current DTR status of the selected port.
DSR	Display the current DSR status of the selected port.
DCD	Display the current DCD status of the selected port.

6.7.3 Connected IP

The Monitor Connected IP page allows for easy viewing of all connected device's IP address.

To access this page, click **Monitor > Connected IP**.

Setting	Statistic	ConnectedIP	
Port ConnectedIP			
Connected IP		IP Address	
IP 1			
IP 2			
IP 3			
IP 4			
IP 5			
IP 6			
IP 7			
IP 8			
IP 9			
IP 10			
IP 11			
IP 12			
IP 13			
IP 14			
IP 15			
IP 16			

Figure 6.16 Monitor > Connected IP

The following table describes the items in the previous figure.

Item	Description
Connected IP	Display the IP designation for the device.
IP Address	Display the current connected IP address of the selected port.

6.8 Alarm

You can set the e-mail server and SNMP Trap server in the Setting page, and set the event type in the Event page.

6.8.1 Setting

The Alarm Setting menu includes three alarm setting menus for event notification: Mail Sever, SNMP Trap Server, and the SNMP Agent Setting.

At the top of the list is the Mail Server setting which allows you to specify the mail server to be used by the serial device server in order to deliver notifications to selected Email accounts.

The SNMP Trap Server settings allows you to specify the management station of a significant event by way of an unsolicited SNMP message.

The Simple Network Management Protocol (SNMP) is used by the serial device server to collect detailed information about the serial device server.

To access this page, click **Alarm > Setting**.

The screenshot displays the 'Alarm Setting' web interface. It features three main sections: 'Mail Server', 'SNMP Trap Server', and 'SNMP Agent Setting'. The 'Mail Server' section includes fields for 'Mail Server', 'From Email address' (pre-filled with 'admin@advantech.com'), and four 'Email address' fields. The 'SNMP Trap Server' section includes fields for 'Trap Server', 'Trap Server Port' (pre-filled with '162' and a range '(1 - 65535)'), 'Trap Version' (radio buttons for 'v1' and 'v2c', with 'v1' selected), and 'Trap Community' (pre-filled with 'public'). The 'SNMP Agent Setting' section includes fields for 'Read Community', 'Write Community', 'Contact', and 'Location'. An 'Apply' button is located at the bottom of the form.

Figure 6.17 Alarm > Setting

The following table describes the items in the previous figure.

Item	Description
Mail Server	
Mail Server	Enter the SMTP mail server.
From Email address	Enter the email address.
Email address 1	Enter the email address 1 to receive alarm emails.
Email address 2	Enter the email address 2 to receive alarm emails.
Email address 3	Enter the email address 3 to receive alarm emails.
Email address 4	Enter the email address 4 to receive alarm emails.
SNMP Trap Server	
Trap Server	Enter the SNMP Trap server address.
Trap Server Port	Enter the SNMP Trap server port.
Trap Version	Click the radio button to select the SNMP version credentials: v1 or v2c.
Trap Community	Enter the community string to be passed for the specified event.
SNMP Agent Setting	
Read Community	Enter the read-only, public, community string.
Write Community	Enter the write-only, private, community string.
Contact	Enter the individual designated the contact point for this event.
Location	Enter the designated location/department of the setting.
Apply	Click Apply to save the values and update the screen.

6.8.2 Event

The Alarm Event page allows the selection of triggers for system, DCD and DSR events for the alarm function.

To access this page, click **Alarm > Event**.

Event Type

System Event

Cold Start ☐ Mail ☐ Trap ☐ Log

Warm Start ☐ Mail ☐ Trap ☐ Log

Authentication failure ☐ Mail ☐ Trap ☐ Log

IP address changed ☐ Mail

Password changed ☐ Mail

LAN interface 1 link down ☐ Mail ☐ Trap ☐ Log

DCD changed

Port 1 ☐ Mail ☐ Trap ☐ Log

DSR changed

Port 1 ☐ Mail ☐ Trap ☐ Log

Apply

Figure 6.18 Alarm > Event

The following table describes the items in the previous figure.

Item	Description
System Event	
Cold Start	Click the option to select a warning type when the device server's power is cut off and reconnected.
Warm Start	Click the option to select a warning type when the device server is reboot.
Authentication failure	Click the option to select a warning type when an incorrect password is entered.
IP address changed	Click the option to select a warning type when the IP address is changed.
Password changed	Click the option to select a warning type when the password is changed.
LAN Interface 1 link down	Click the option to select a warning type when the LAN Interface 1 port is disconnected.
DCD changed	
Port	Click the option to select a warning type of the selected port when a change in the DCD (Data Carrier Detect) signal indicates that the modem connection status has changed.
DSR changed	
Port	Click the option to select a warning type of the selected port when a change in the DSR (Data Set Ready) signal indicates that the data communication equipment is powered off.
Apply	Click Apply to save the values and update the screen.

6.8.3 LogFile

To access this page, click **Alarm > LogFile**.

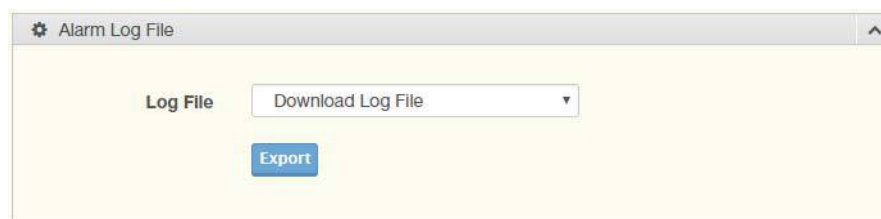


Figure 6.19 Alarm > LogFile

The following table describes the items in the previous figure.

Item	Description
Log File	Click the drop-down menu to select a specific action for the system log file. Available options: Download Log File, Remove Log File, Download and Remove Log File.
Export	Click Export to download the log file.

6.9 Administration

6.9.1 System

To access this page, click **Administration > System**.

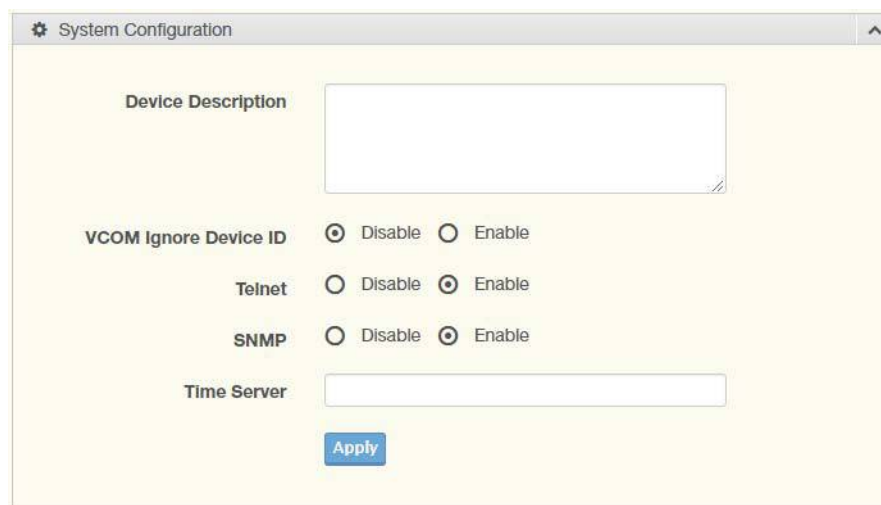


Figure 6.20 Administration > System

The following table describes the items in the previous figure.

Item	Description
Device Description	Enter the device description.
VCOM Ignore Device ID	Click Enabled or Disabled to enable or disable VCOM ignore device ID.
Telnet	Click Enabled or Disabled to set remote access through the Telnet Service function.
SNMP	Click Enabled or Disabled to define the SNMP daemon.
Apply	Click Apply to save the values and update the screen.

6.9.2 Syslog

Users can enable the syslogd function to record historical events or messages locally or on a remote syslog server.

To access this page, click **Administration > Syslogd**.

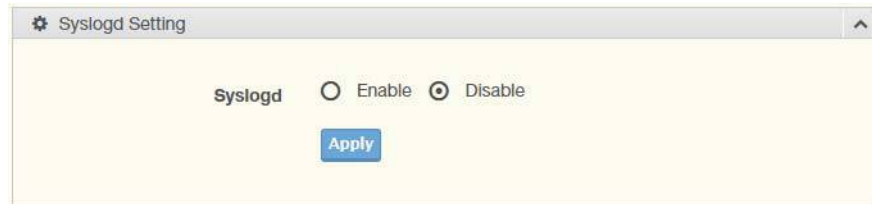
A screenshot of the 'Syslogd Setting' window. It features a title bar with a gear icon and the text 'Syslogd Setting'. Below the title bar, the word 'Syslogd' is followed by two radio buttons: 'Enable' (which is unselected) and 'Disable' (which is selected). At the bottom of the window is a blue 'Apply' button.

Figure 6.21 Administration > Syslogd

The following table describes the items in the previous figure.

Item	Description
Syslogd	Click Enabled or Disabled to set the logging service status.
Apply	Click Apply to save the values and update the screen.

6.9.3 HTTP

To access this page, click **Administration > HTTP**.

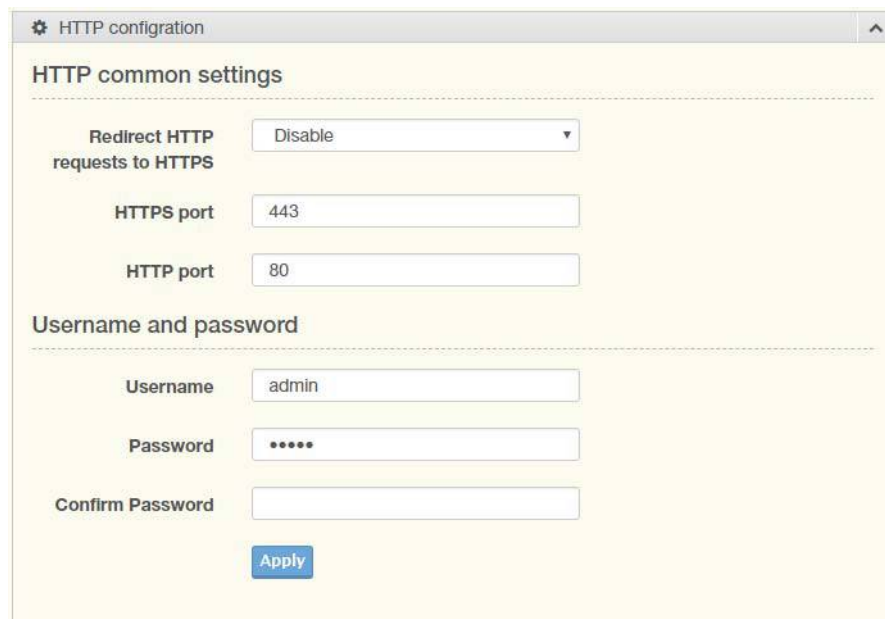
A screenshot of the 'HTTP configuration' window. The title bar shows a gear icon and 'HTTP configuration'. The main content area is titled 'HTTP common settings'. It contains three sections: 1) 'Redirect HTTP requests to HTTPS' with a drop-down menu currently set to 'Disable'. 2) 'HTTPS port' with a text input field containing '443'. 3) 'HTTP port' with a text input field containing '80'. Below these is a section titled 'Username and password' with three input fields: 'Username' (containing 'admin'), 'Password' (masked with dots), and 'Confirm Password' (empty). A blue 'Apply' button is at the bottom.

Figure 6.22 Administration > HTTP

The following table describes the items in the previous figure.

Item	Description
HTTP common settings	
Redirect HTTP requests to HTTPS	Click the drop-down menu to enable or disable the function. By default the function is disabled. When enabled, a NAT setting and Open Ports can be setup to direct connection requests to an internal server.
HTTPS port	Enter the port to forward HTTPS traffic, default: 443.
HTTP port	Enter the port to forward HTTP traffic, default: 80.
Username and password	

Item	Description
Username	Enter the name of the user entry.
Password	Enter the character set for the define password type.
Confirm Password	Retype the password entry to confirm the profile password.
Apply	Click Apply to save the values and update the screen.

6.9.4 Configuration

To access this page, click **Administration > Configuration**.

The screenshot displays the Configuration page with three distinct sections, each with a gear icon in the top-left corner and an upward arrow in the top-right corner:

- Export Configuration:** Contains an "Export Button" and a blue "Export" button.
- Import Configuration:** Contains a "Settings file location" text field, a "Browse..." button, and two blue buttons labeled "Import" and "Cancel".
- Load Factory Defaults:** Contains a "Load Default Button" and a blue "Load Default" button.

Figure 6.23 Administration > Configuration

The following table describes the items in the previous figure.

Item	Description
Export Configuration	
Export	Click Export to export the device settings.
Import Configuration	
Browse	Click Browse to select the configuration file.
Import	Click Import to import the configuration to the device.
Cancel	Click Cancel to cancel the import function.
Load Factory Defaults	
Load Default	Click Load Default to have all configuration parameters reset to their factory default values. All changes that have been made will be lost, even if you have issued a save.

6.9.5 Firmware Upgrade

To access this page, click **Administration > Firmware Upgrade**.

The screenshot displays the Firmware Upgrade page with a single section featuring a gear icon in the top-left corner and an upward arrow in the top-right corner:

- Firmware Upgrade:** Contains a "Firmware Location" text field, a "Browse..." button, and a blue "Upload" button.

Figure 6.24 Administration > Firmware Upgrade

The following table describes the items in the previous figure.

Item	Description
Browse	Click Browse to select the configuration file.
Upload	Click Upload to upload to the current version.

6.9.6 Tools

To access this page, click **Administration > Tools**.



Figure 6.25 Administration > Tools

The following table describes the items in the previous figure.

Item	Description
Reboot	
Reboot	Click Reboot to reboot the device. Any configuration changes you have made since the last time you issued a save will be lost.
Ping	
IP Address / Name	Enter the IP address or host name of the station to ping. The initial value is blank. The IP Address or host name you enter is not retained across a power cycle. Host names are composed of series of labels concatenated with periods. Each label must be between 1 and 63 characters long, maximum of 64 characters.
Ping	Click Ping to display ping result for the IP address.

Chapter 7

Telnet/Serial Console Configuration

7.1 Overview

The purpose of the Console Configuration is to help you manage your device in console mode. One of the main functions of the console mode is to change the web configuration login password. You can use terminal software like Hyper Terminal, Telix and other related terminal software.

7.2 Telnet Console

7.2.1 Create a new connection

You can create a new Telnet connection and assign a connection name for the console configuration.



Figure 7.1 Creating a Telnet Connection

7.2.2 Input the IP address

Confirm that the Telnet console configuration works ok. Be sure that your host PC Ethernet network IP domain is as same as the EKI-1360-BE Series device server, and the Telnet TCP port number is “23”.

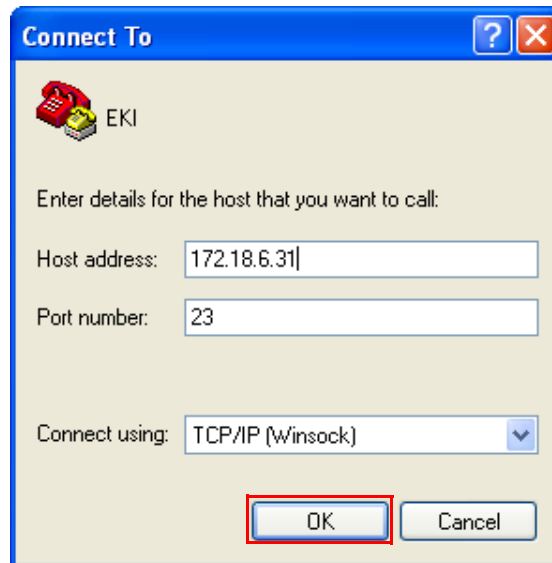


Figure 7.2 Creating a Telnet Connection

7.2.3 Connection Success

After connecting to the serial device server in HyperTerminal console, a welcome greeting displays.

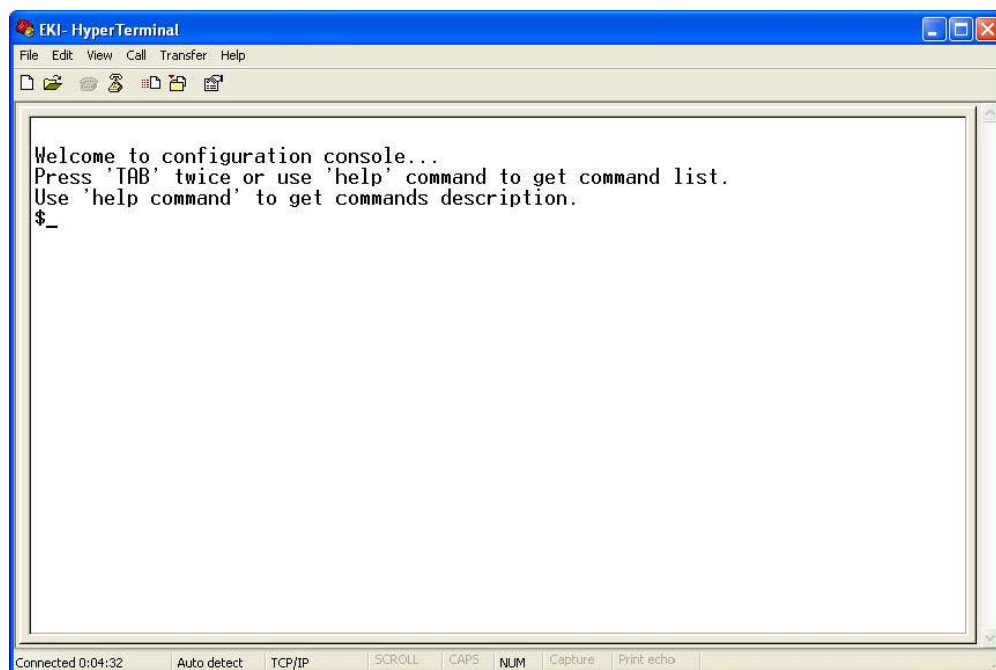


Figure 7.3 Telnet Connection Console

At the command prompt, you can type a “help” followed by the Enter button, or <Tab> twice, to display the command list.

You can toggle between the different command menu options.

7.3 Command List

Command	Function Description
system	Show or configure the system information
port	Show or configure the serial ports information
portadv	Show or configure the serial ports advanced settings
mvcom	Show or configure the serial ports in Virtual COM mode
mctrl	Show or configure the serial ports in Control mode (USDG)
mdata	Show or configure the serial ports in Data mode (USDG)
net	Show or configure the Ethernet ports settings
password	Set or change the password
alarm	Show or configure the auto warning functions including mail alarm and SNMP alarm
monitor	Monitor the serial ports status
time	Show or configure the time information
service	Enable or disable the web, Telnet and SNMP functions
apply	Write settings to the flash memory and reboot the system immediately
exit	Terminate the shell session
help	Display command list help information
import	Import the serial device server all settings
export	Export the serial device server all settings
wireless	Show or configure the wireless settings or informations
wirelessadv	Show or configure the advanced wireless settings or informations

7.3.1 system

Usage: system

Show firmware version, device name and description.

Usage: system name [Maximum length 31 bytes]

Set current device name.

Usage: system desc [Maximum length 127 bytes]

Set current device description.

7.3.2 port

Usage: port [nn|all]

Show the “nn”th port or all ports information.

Usage: port [nn] desc [Maximum length 127 bytes]

Set the “nn”th port’s description.

Usage: port [nn|all] type [232|422|485] flow [0|1|2|3]

Set serial ports’ type and flow control.

- flow 0: None.
- flow 1: XOn/XOff.
- flow 2: RTS/CTS.
- flow 3: DTR/DSR.

Usage: port [nn|all] baud [50-921600] parity [n|e|o|m|s] data [5-8] stop [1|1.5|2]
 Set the serial ports' baud rate, parity, data bits, and stop bits.
 Acceptable baud: 50, 75, 110, 150, 300, 600, 1200, 1800, 2400, 4800, 7200, 9600, 14400, 19200, 38400, 57600, 115200, 230400, 460800, and 921600

- parity n: None Parity.
- parity e: Even Parity.
- parity o: Odd Parity.
- parity m: Mark Parity.
- parity s: Space Parity.

Usage: port [nn|all] mode [vcom|ctrl|data]
 Set the serial ports as virtual COM mode, control mode, or data mode.

7.3.3 portadv

\$ help portadv
 Show port advanced setting.

Usage: portadv [nn|all] delayT []
 Set delay time(ms).

Usage: portadv [nn|all] ignorepurge [TRUE|FALSE] dischato [TRUE|FALSE] dismulticon [TRUE|FALSE]
 Enable or disable the feature of ignore purge,
 Disable character timeout detection, and disable multiple connection.

Usage: portadv [nn|all] databuf []
 Set databuffer threshold.

Usage: portadv [nn|all] timeout [] rtl [] ttl [] fcl [] fch []
 Set port timeout, and set portrtl, portttl, portfcl, portfch.

Usage: portadv [nn|all] fifosize [size|null]
 Set port Writed size of FIFO, null for disable

Usage: portadv [nn|all] rts []
 Set port RTS status.

- value 0: None Setting.
- value 1: Setting power on.
- value 2: Setting accept on.
- value 4: Setting transmission on.

Usage: portadv [nn|all] dtr []
 Set port DTR status.

- value 0: None Setting.
- value 1: Setting power on.
- value 2: Setting accept on.
- value 4: Setting transmission on.

7.3.4 mvcom

Usage: mvcom
 Show all serial ports mode and related information.

Usage: mvcom [nn|all]
 Set the “nn”th or all serial ports as the Virtual COM mode.

Usage: mvcom [nn|all] idleto []

Set the “nn”th or all serial ports host idle timeout(S).

Usage: mvcom [nn|all] respto [] framebk []

Set the “nn”th or all serial ports response timeout and frame break.

7.3.5 mctrl

Usage: mctrl

Show all serial ports mode and related information.

Usage: mctrl [nn|all]

Set the “nn”th or all serial ports as the control mode.

Usage: mctrl [nn|all] idleto [] guardt [] hangchr []

Set the “nn”th or all serial ports data idle timeout, guard time and hang character.

7.3.6 mdata

Usage: mdata

Show all serial ports mode and related information.

Usage: mdata [nn|all]

Set the “nn”th or all serial ports as the data mode.

Usage: mdata [nn|all] protocol [TCP|UDP]

Set the “nn”th or all serial ports’ transmit protocol as TCP or UDP.

Usage: mdata [nn|all] idleto [] lsport [] atport []

Set the “nn”th or all serial ports data idle timeout, listen port, and AT command port.

Usage: mdata [nn|all] respto [] framebk []

Set the “nn”th or all serial ports response timeout and frame break.

Usage: mdata [nn|all] peernum [1-16] peer [d.d.d.d:d] ...

Set the peer IP address and port for receive data.

7.3.7 net

Usage: net [1|2]

Show the first or second Ethernet port status and information.

Usage: net [1|2] mode [static|dhcp|boot|all]

Set the network operating mode.

Usage: net [1|2] ip [d.d.d.d] netmask [d.d.d.d] gw [d.d.d.d]

Set IP address, subnet mask, and default gateway.

Usage: net [1|2] dns [auto|specific]

Enable/Disable DNS.

Usage: net [1|2] dns1 [d.d.d.d]

Set network DNS1.

Usage: net [1|2] dns2 [d.d.d.d]

Set network DNS2.

7.3.8 password

Usage: password

Display two different Usage.

Usage: password new [1-31 characters]

Set new password.

Usage: password old [***...] new [1-31 characters]

Confirm the old password and set new password.

7.3.9 alarm

Usage: alarm

Show current alarm informations.

Usage: alarm mail server [null|address] from [null|address] to1 [null|address] to2 [null|address] to3 [null|address] to4 [null|address]

Set current mail server configuration.

Usage: alarm trap server [null|address] ver [1|2] community [null|name]

Set current trap server configuration.

Usage: alarm agent rcommunity [null|name] wcommunity [null|name] contact [null|name] location [null|name]

Set current snmp agent configuration.

Usage: alarm event mail [cstart] [wstart] [auth] [ip] [passwd] [eth1] [eth2]

Set current mail event configuration.

Usage: alarm event trap [cstart] [wstart] [auth] [eth1] [eth2]

Set current trap event configuration.

Usage: alarm port [1|2|...] dcd [none|mail|trap|all] dsr [none|mail|trap|all]

Set current port alarm configuration.

7.3.10 monitor

Usage: monitor port [1-16] setting

Monitor the serial ports settings.

Usage: monitor port [1-16] statistic

Monitor the serial ports statistic.

Usage: monitor port [1-16] ip

Monitor the serial ports connected IP address.

7.3.11 time

Usage: time

Show current time informations.

Usage: time [YYYYMMDDhhmmss]

Set current time configuration.

Usage: time timezone[-12|...|0|1..12]

Set current time zone configuration.

Usage: time daylight [on|off] [begin [MMDD] end [MMDD]]

Set current daylight saving configuration.

Usage: time ntp [timeserver]

Set current time server configuration.

7.3.12 **service**

Usage: service web [enable|disable]

Enable/Disable web function.

Usage: service telnet [enable|disable]

Enable/Disable telnet function.

Usage: service snmp [enable|disable]

Enable/Disable SNMP function.

7.3.13 **apply**

Usage: apply

Save the settings to the flash memory and reboot the system immediately.

7.3.14 **exit**

Usage: exit

Terminate the shell session.

7.3.15 **help**

Usage: help

Display help information of command list.

Usage: help [cmd]

Show the usage of command.

7.3.16 **import**

Usage: import

Import the serial device server settings' file.

7.3.17 **export**

Usage: export

Export the serial device server settings' file.

7.3.18 **wireless**

Usage: wireless

Show or configure the wireless settings or informations.

Usage: wireless ssid []

Set SSID.

Usage: wireless country [us|de|fr|es|jp|kr|cn] channel [0|1|...|14]

Set country code and channel.

- us: United States
- de: Germany
- fr: France
- es: Spain
- jp: Japan
- kr: Korea
- cn: China
- channel 0: Auto

Usage: wireless encryption [none|wep|wpa-psk|wpa-enterprise]

Set encryption type.

Usage: wireless wepauth [on|off]

Set WEP authentication algorithm.

Usage: wireless wepidx [0|1|2|3]

Set WEP key index.

Usage: wireless wepkey [asc|hex] []

Set WEP key as [] in specific format.

Usage: wireless wpakey []

Set WPA-PSK key as [].

Usage: wireless wpaep [tls|ttls|peap]

Set WPA-Enterprise EAP method.

Usage: wirelesswpa11w [0|1|2]

Set WPA-Enterprise management frame protected.

- 0: Disable
- 1: Optional
- 2: Required

Usage: wireless wpaid []

Set WPA-Enterprise identity as [].

Usage: wireless wpapw []

Set WPA-Enterprise as [].

Usage: wireless wpaphase [mschapv2|md5]

Set WPA-Enterprise inner authentication.

Usage: wireless capw []

Set private key as [].

Usage: wireless cacert

Import the CA certification from host PC to device.

Usage: wireless caclient

Import the Client certification from host PC to device.

Usage: wireless cakey

Import the private key from host PC to device.

7.3.19 wirelessadv

Usage: wirelessadv

Show device wireless advance informations.

Usage: wirelessadv rts [256|...|2347]

Set RTS threshold.

Usage: wirelessadv frag [256|...|2346]

Set fragmentation threshold.

Usage: wirelessadv roaming [on|off]

Enable/disable Roaming.

Usage: wirelessadv rssi [10|...|95]

Set connection quality monitor RSSI threshold.

Usage: wirelessadv preamble [short|long]

Set preamble.

Usage: wirelessadv scanint_high [10|...|600]

Set scan interval when received signal strength is better than RSSI threshold.

Usage: wirelessadv scanint_low [10|...|600]

Set scan interval when received signal strength is worse than RSSI threshold.

Chapter 8

TCP and UDP Port
Numbers

8.1 List of Known TCP and UDP Port Numbers

Port	Protocol	Service
5048	(TCP/UDP)	Configuration Utility
5058	(TCP/UDP)	Configuration Utility
5202	(TDP)	VCOM/RVCOM
9999	(TDP)	Firmware Download
22	(TDP)	SSH
23	(TDP)	Telnet
25	(TDP)	SMTP (Mail Client)
53	(TCP/UDP)	DNS
67	(UDP)	BOOTP Server/DHCP
68	(UDP)	BOOTP Client/DHCP
80	(TDP)	Web Interface/HTTP
123	(TDP)	NTP
161	(TDP)	SNMP
162	(TCP/UDP)	SNMP Trap
443	(TDP)	HTTPS
502	(TDP)	Modbus/TCP (Default)
514	(TDP)	Syslog
546	(TCP/UDP)	DHCPv6 Client
547	(TCP/UDP)	DHCPv6 Server



Enabling an Intelligent Planet

www.advantech.com

Please verify specifications before quoting. This guide is intended for reference purposes only.

All product specifications are subject to change without notice.

No part of this publication may be reproduced in any form or by any means, electronic, photocopying, recording or otherwise, without prior written permission of the publisher.

All brand and product names are trademarks or registered trademarks of their respective companies.

© Advantech Co., Ltd. 2018