

F3X27 Series Router User Manual	Document Version	Page
	V2.0.0	
	Product Name: F3X27	Total:72

# F3X27 Series Router User Manual

The user manual is suitable for the following model:

Model	Product Type
F3127	GPRS Router
F3227	CDMA Router
F3437	WCDMA Router
F3627	EVDO Router
F3727	TDD LTE Router
F3827	FDD LTE Router
F3A27	LTE Router



**Xiamen Four-Faith Communication Technology Co., Ltd.**

Add: J1-J3, 3rd Floor, No.44, Guanri Road, Software Park, Xiamen, China

Postal Code:361008

Tel: +86 -592-6300320

Fax:+86-592-5912735

<http://en.four-faith.com>




**Files Revised Record**

Date	Version	Remark	Author
2015-02-02	V1.00	Initial version	ZBQ/WT
2015-12-30	V1.01	Modify parameter and install picture	Harven
2016-10-20	V2.0.0	Modify document version name and version number	Ye

## Copyright Notice

All contents in the files are protected by copyright law, and all copyrights are reserved by Xiamen Four-Faith Communication Technology Co., Ltd. Without written permission, all commercial use of the files from Four-Faith are forbidden, such as copy, distribute, reproduce the files, etc., but non-commercial purpose, downloaded or printed by individual (all files shall be not revised, and the copyright and other proprietorship notice shall be reserved) are welcome.

## Trademark Notice

Four-Faith、四信、、、 are all registered trademarks of Xiamen Four-Faith Communication Technology Co., Ltd., illegal use of the name of Four-Faith, trademarks and other marks of Four-Faith is forbidden, unless written permission is authorized in advance.



Note: There may be different components and interfaces in different model, please in kind prevail.

# Contents

Chapter 1 Brief Introduction of Product.....	7
1.1 General.....	7
1.2 Features and Benefits.....	7
1.3 Working Principle.....	9
1.4 Specifications.....	9
Power consumption.....	12
Chapter 2 Installation Introduction.....	13
2.1 General.....	13
2.2 Encasement List.....	13
2.3 Installation and Cable Connection.....	13
2.4 Power.....	17
2.5 Indicator Lights Introduction.....	17
2.6 Reset Button Introduction.....	18
Chapter 3 Configuration and Management.....	19
3.1 Configuration Connection.....	19
3.2 Access the Configuration Web Page.....	19
3.3 Management and configuration.....	21
3.3.1 Setting.....	21
3.3.1.1 Basic Setting.....	21
3.3.1.2 Dynamic DNS.....	26
3.3.1.3 Clone MAC Address.....	27
3.3.1.4 Advanced Router.....	28
3.3.1.5 Networking.....	29
3.3.2 Services.....	32
3.3.2.1 Services.....	32
3.3.3 VPN.....	35
3.3.3.1 PPTP.....	35
3.3.3.2 L2TP.....	37
3.3.3.3 IPSEC.....	38
3.3.3.4 GRE.....	41
3.3.4 Security.....	43
3.3.4.1 Firewall.....	43
3.3.5 Access Restrictions.....	45
3.3.5.1 WAN Access.....	45
3.3.5.2 Packet Filter.....	48
3.3.6 NAT.....	49
3.3.6.1 Port Forwarding.....	49
3.3.6.2 Port Range Forward.....	50
3.3.6.3 DMZ.....	51
3.3.7 QoS Setting.....	51

---

3.3.7.1 Basic.....	51
3.3.7.2 Classify.....	52
3.3.8 Applications.....	53
3.3.8.1 Serial Applications.....	53
3.3.9 Administration.....	54
3.3.9.1 Management.....	54
3.3.9.2 Keep Alive.....	56
3.3.9.3 Commands.....	57
3.3.9.4 Factory Defaults.....	58
3.3.9.5 Firmware Upgrade.....	58
3.3.9.6 Backup.....	59
3.3.10 Status.....	60
3.3.10.1 Router.....	60
3.3.10.2 WAN.....	62
3.3.10.3 LAN.....	64
3.3.10.4 Bandwidth.....	67
3.3.10.5 Sys-Info.....	68
Appendix.....	70


## Chapter 1 Brief Introduction of Product

### 1.1 General

F3X27 series ROUTER is a kind of cellular terminal device that provides data transfer function by public cellular network.

It adopts high-powered industrial 32-bits CPU and embedded real time operating system. It supports RS232 (or RS485/RS422), Ethernet port that can conveniently and transparently connect one device to a cellular network, allowing you to connect to your existing serial, Ethernet with only basic configuration.

It has been widely used on M2M fields, such as self-service terminal, intelligent transportation, smart grid, smart home, industrial automation, intelligent building, public security, fire protection, environment protection, telemetry, finance, POS, water supply, meteorology, remote sensing, digital medical, military, space exploration, agriculture, forestry, petrochemical and other fields.

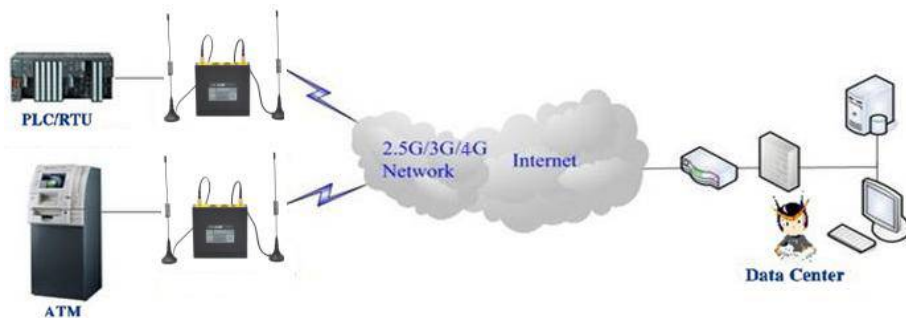

### 1.2 Features and Benefits

#### Design for Industrial Application

- ◆ High-powered industrial cellular module
- ◆ High-powered industrial 32bits CPU
- ◆ Support low-consumption mode, including sleep mode, scheduled online/offline mode
- ◆ Housing: iron, providing IP30 protection.
- ◆ Power range: DC 5~36V

#### Stability and Reliability

- ◆ Support hardware and software WDT
- ◆ Support auto recovery mechanism, including online detect, auto redial when offline to make router always online
- ◆ Ethernet port: 1.5KV magnetic isolation protection

- ◆ RS232/RS485/RS422 port: 15KV ESD protection
- ◆ SIM/UIM port: 15KV ESD protection
- ◆ Power port: reverse-voltage and overvoltage protection
- ◆ Antenna port: lightning protection(optional)

#### **Standard and Convenience**


- ◆ Support standard RS232(or RS485/RS422), Ethernet port that can connect to serial, Ethernet devices directly
- ◆ Support intellectual mode, enter into communication state automatically when powered
- ◆ Provide management software for remote management
- ◆ Support several work modes
- ◆ Convenient configuration and maintenance interface (WEB or CLI)

#### **High-performance**

- ◆ Support multiple WAN access methods, including static IP, DHCP, L2TP, PPTP,PPPOE,2.5G/3G/4G
- ◆ Support double link backup between cellular and WAN(PPPOE, ADSL) (optional)
- ◆ Support VPN client(PPTP, L2TP, OPENVPN, IPSEC and GRE)(only for VPN version)
- ◆ Support VPN server(PPTP, L2TP, OPENVPN, IPSEC and GRE)(only for VPN version)
- ◆ Support local and remote firmware upgrade,import and export configure file.
- ◆ Support NTP, RTC embedded.
- ◆ Support multiple DDNS provider service.
- ◆ Support MAC Address clone, PPPoE Server
- ◆ Support multi online trigger ways, including SMS, ring and data. Support link disconnection when timeout
- ◆ Support APN/VPDN
- ◆ Support DHCP server and client, firewall, NAT, DMZ host , URL block, QoS, ttraff,statistics, real time link speed statistics etc.
- ◆ Full protocol support , such as TCP/IP, UDP, ICMP, SMTP, HTTP, POP3, OICQ, TELNET, FTP, SNMP, SSHD, etc.
- ◆ Schedule Online and Offline

## 1.3 Working Principle

The principle chart of the router is as following:

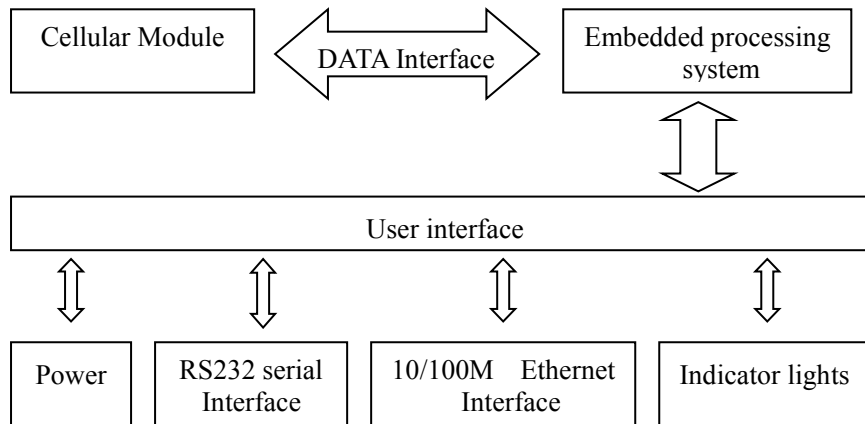

## 1.4 Specifications

### Cellular Specification

Cellular Module	Industrial cellular module
<b>F3127 GPRS ROUTER</b>	
Standard and Band	EGSM 900/GSM 1800MHz, GSM 850/900/1800/1900MHz(optional) Compliant to GSM phase 2/2+ GPRS class 10, class 12(optional)
Bandwidth	85.6Kbps
TX power	GSM850/900:<33dBm GSM1800/1900:<30dBm
RX sensitivity	<-107dBm
<b>F3227 CDMA ROUTER</b>	
Standard and Band	CDMA2000 1xRTT 800MHz, 450MHz(optional)
Bandwidth	153.6Kbps
TX power	<30dBm
RX sensitivity	<-104dBm
<b>F3427 WCDMA ROUTER</b>	
Standard and Band	UMTS/WCDMA/HSDPA/HSUPA/HSPA+ 850/1900/2100MHz, 850/900/1900/2100MHz(optional) GSM 850/900/1800/1900MHz GPRS/EDGE CLASS 12

Bandwidth	DC-HSPA+: Download speed 42Mbps, Upload speed 5.76Mbps HSPA+: Download speed 21Mbps, Upload speed 5.76Mbps HSDPA: Download speed 7.2Mbps, HSUPA: Upload speed 5.76Mbps UMTS: 384Kbps
TX power	<24dBm
RX sensitivity	<-109dBm
<b>F3627 EVDO ROUTER</b>	
Standard and Band	CDMA2000 1X EVDO Rev A 800MHz, 800/1900MHz(optional), 450MHz(optional) CDMA2000 1X EVDO Rev B 800/1900MHz(optional) CDMA2000 1X RTT, IS-95 A/B
Bandwidth	EVDO Rev. A: Download speed 3.1Mbps, Upload speed 1.8Mbps EVDO Rev. B: Download speed 14.7Mbps, Upload speed 5.4Mbps (optional)
TX power	<23dBm
RX sensitivity	<-104dBm
<b>F3727 TDD LTE ROUTER</b>	
Standard and Band	LTE TDD 2600/1900/2300MHz(Band 38/39/40), 800/1400/1800MHz(Band 27/61/62)(optional) TD-SCDMA 2010/1900MHz(A/F frequency band, Band 34/39) GSM /GPRS/EDGE 900/1800/1900MHz
Bandwidth	LTE TDD: Download speed 61Mbps, Upload speed 18Mbps TD-HSPA+: Download speed 4.2Mbps, Upload speed 2.2Mbps TD-HSPA: Download speed 2.2Mbps, Upload speed 2.2Mbps
TX power	<23dBm
RX sensitivity	<-97dBm
<b>F3827 FDD LTE ROUTER</b>	
Standard and Band	LTE FDD 2600/2100/1800/900/800MHz, 700/1700/2100MHz(optional) DC-HSPA+/HSPA+/HSDPA/HSUPA/UMTS 850/900/2100MHz, 800/850/1900/2100MHz(optional) EDGE/GPRS/GSM 850/900/1800/1900MHz GPRS CLASS 10 GPRS CLASS 12
Bandwidth	LTE FDD: Download speed 100Mbps, Upload speed 50Mbps DC-HSPA+: Download speed 42Mbps, Upload speed 5.76Mbps HSPA+: Download speed 21Mbps, Upload speed 5.76Mbps HSDPA: Download speed 7.2Mbps, HSUPA: Upload speed 5.76Mbps UMTS: 384Kbps

TX power	<23dBm
RX sensitivity	<-97dBm
<b>F3A27 LTE ROUTER</b>	
Standard and Band	LTE FDD,LTE TDD,EVDO,WCDMA,TD-SCDMA,CDMA1X,GPRS/EDGE
Bandwidth	LTE FDD: Download speed 100Mbps, Upload speed 50Mbps LTE TDD: Download speed 61Mbps, Upload speed 18Mbps DC-HSPA+: Download speed 42Mbps, Upload speed 5.76Mbps TD-HSPA+: Download speed 4.2Mbps, Upload speed 2.2Mbps EVDO Rev. A: Download speed 3.1Mbps, Upload speed 1.8Mbps
TX power	<23dBm
RX sensitivity	<-97dBm

### Hardware System

Item	Content
CPU	Industrial 32bits CPU
FLASH	16MB(Extendable to 64MB)
DDR2	128MB(Extendable to 256MB)

### Interface Type

Item	Content
Ethernet	1 10/100 Mbps Ethernet port(RJ45), auto MDI/MDIX, 1.5KV magnetic isolation protection
Serial	1 RS232(or RS485/RS422) port, 15KV ESD protection Data bits: 5, 6 ,7, 8 Stop bits: 1, 1.5(optional), 2 Parity: none, even, odd, (space, mark)(optional) Baud rate: 2400~115200 bps
Indicator	"PWR", "SYS", "SIM", "Online", "ETH", "Signal Strength"
Antenna	Cellular:1 or 2 Standard SMA female interface, 50 ohm, lightning protection(optional)
SIM/UIM	Standard 3V/1.8V user card interface, 15KV ESD protection
Power	Standard 3-PIN power jack, reverse-voltage and overvoltage protection
Reset	Restore the router to its original factory default settings

### Power Input

Item	Content
Standard Power	DC 12V/1.5A
Power Range	DC 5~36V



**Note:** There may be different components and interfaces in different model, please in kind prevail.

### Power consumption

Working state	Power consumption
Standby	4G:96~130mA@12VDC 3G:96~115mA@12VDC 2G:83~90mA@12VDC
Communication	4G:203~290mA@12VDC 3G:172~305mA@12VDC 2G:113~148mA@12VDC

### Physical Characteristics

Item	Content
Housing	Iron, providing IP30 protection
Dimensions	100x97x25 mm
Weight	320g

### Environmental Limits

Item	Content
Operating Temperature	-35~+75°C (-31~+167°F)
Storage Temperature	-40~+85°C (-40~+185°F)
Operating Humidity	95% (unfreezing)

## Chapter 2 Installation Introduction

### 2.1 General

The router must be installed correctly to make it work properly.


Warning: Forbid to install the router when powered!

### 2.2 Encasement List


Name	Quantity	Remark
Router host	1	
Cellular antenna (Male SMA)	1 or 2	
Network cable	1	
Console cable	1	optional
Power adapter	1	
Manual CD	1	
Certification card	1	
Maintenance card	1	

### 2.3 Installation and Cable Connection

Stator and routing equipment of screw specification for: M3 \* 5 mm countersunk head screws (black)

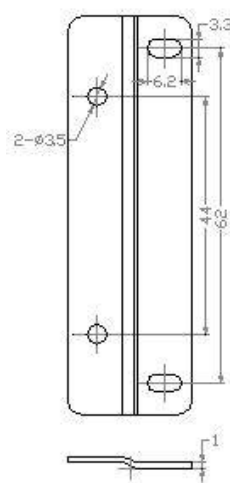

Fixed Size

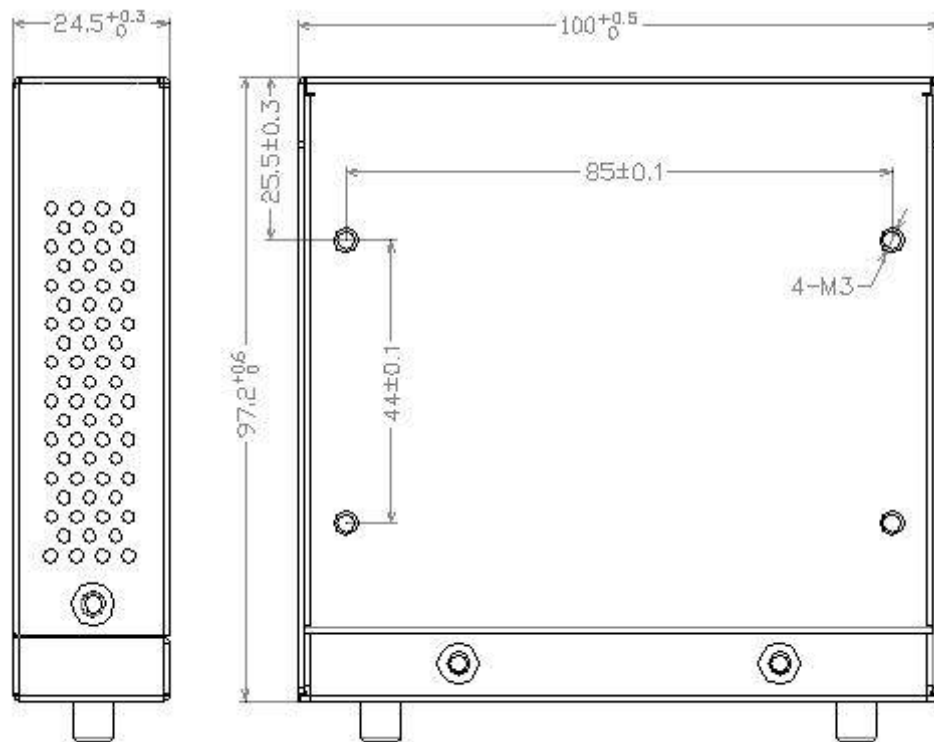

Router Size

Note: no fixed piece to install the ROUTER for the M3 screw, screw lock into the depth of the ROUTER is 3 ~ 4 mm.


### Installation of SIM/UM card:

Firstly power off the router, and press the out button of the SIM/UM card outlet with a needle object. Then the SIM/UM card sheath will flick out at once. Put SIM/UM card into the card sheath (Pay attention to put the side which has metal point outside), and insert card sheath back to the SIM/UM card outlet.

**Warning:** Forbid to install SIM/UM card when powered!

### Installation of antenna:

Screw the SMA male pin of the cellular antenna to the female SMA interface of the router with sign "ANT-M" and "ANT-A".

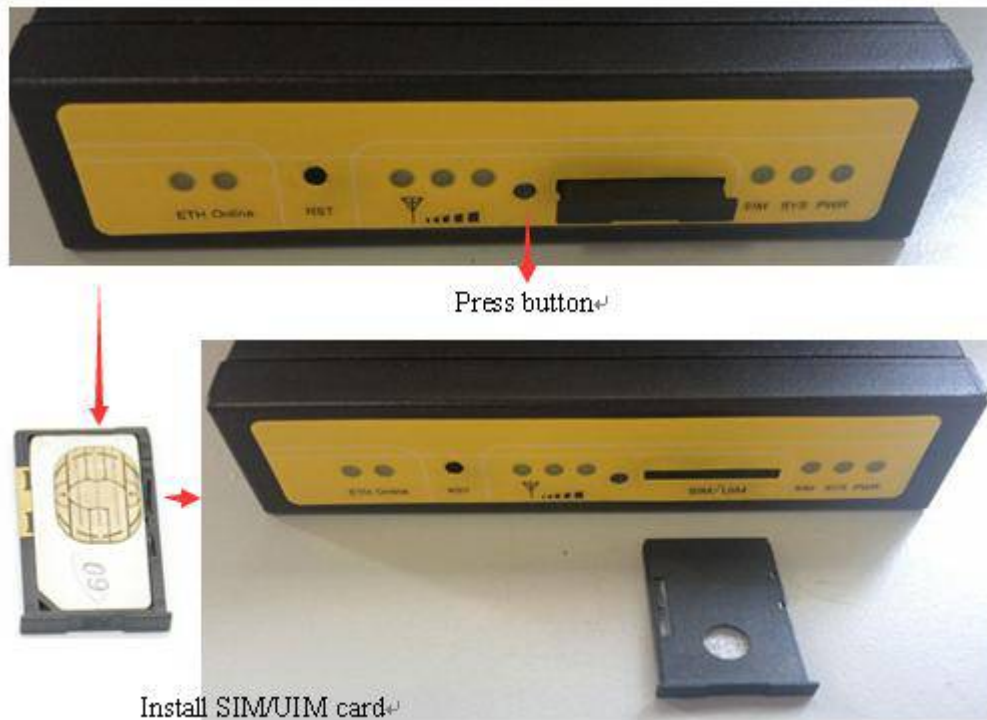

### Installation of cable:

Insert one end of the network cable into the network interface with sign “ETH”, and insert the other end into the Ethernet interface of user’s device. The signal connection of network direct cable is as follows:

RJ45-1	RJ45-2	Line color
1	1	White/Orange
2	2	Orange
3	3	White/Green
4	4	Blue
5	5	White/Blue
6	6	Green
7	7	White/Brown
8	8	Brown



Insert the RJ45 end of the console cable into the RJ45 outlet with sign “console”, and insert the DB9F end of the console cable into the RS232 serial interface of user’s device.

The signal connection are defined of the console cable is as follows:

Console line definition (RS232)					
RJ45	Color	Signal	DB9F	Description	Dir (Router
1	White/ Orang e	CTS	8	Clera To Send	Output
2	Orang e	DSR	6	Data Set Ready	Output
3	White/ Green	RXD	2	Receive Data	Output
4	Blue	DCD	1	Data Carrier Detect	Output
5	White/ Blue	GND	5	System Ground	
6	Green	TXD	3	Transmit Data	Input
7	White/ Brown	DTR	4	Data Terminal Ready	Input
8	Brown	RTS	7	Request To Send	Input



## 2.4 Power

The power range of the router is DC 5~36V.

Warning: When we use other power, we should make sure that the power can supply power above 7W.

We recommend user to use the standard DC 12V/1.5A power.

## 2.5 Indicator Lights Introduction

The router provides following indicator lights: "PWR", "SYS", "SIM", "Online", "ETH", "Signal Strength".

Indicator Light	State	Introduction
PWR	ON	Router is powered on
	OFF	Router is powered off
SYS	BLINK	System works properly
	OFF	System does not work

SIM	ON	SIM/UIM true
	OFF	SIM/UIM fail
Online	ON	Router has logged on network
	OFF	Router hasn't logged on network
ETH	OFF	The corresponding interface of switch is not connected
	ON / BLINK	The corresponding interface of switch is connected /Communicating
Signal Strength	One Light ON	Signal strength is weak(<-90dbm)
	Two Lights ON	Signal strength is medium(-70dbm~-90dbm)
	Three Lights ON	Signal strength is good(>-70dbm)

## 2.6 Reset Button Introduction


The router has a “Reset” button to restore it to its original factory default settings. When user press the “Reset” button for up to 15s, the router will restore to its original factory default settings and restart automatically.

## Chapter 3 Configuration and Management

This chapter describes how to configure and manage the router.

### 3.1 Configuration Connection

Before configuration, you should connect the router and your configuration PC with the supplied network cable. Plug the cable's one end into the Local Network port of the router, and another end into your configure PC's Ethernet port. The connection diagram is as following:

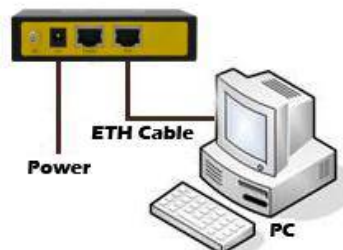

Please modify the IP address of PC as the same network segment address of the router, for instance, 192.168.1.9. Modify the mask code of PC as 255.255.255.0 and set the default gateway of PC as the router's IP address (192.168.1.1).

### 3.2 Access the Configuration Web Page

The chapter is to present main functions of each page. Users visit page tool via web browser after connect users' PC to the router. There are eleven main pages: Setting, Wireless, Service, VPN, Security, Access Restrictions, NAT, QoS Setting, Applications, Management and Status. Users enable to browse slave pages by click one main page.

Users can open IE or other explorers and enter the router's default IP address of 192.168.1.1 on address bar, then press the botton of Enter to visit page Web management tool of the router. The users login in the web page at the first name, there will display a page shows as blow to tip users to modify the default user name and password of the router. Users have to click "change password" to make it work if they modify user name and password.

## Router Management


**Your Router is currently not protected and uses an unsafe default username and password combination, please change it using the following dialog!**

## Router Password

Router Username	<input type="text" value="admin"/>
Router Password	<input type="password" value="••••"/>
Re-enter to confirm	<input type="password" value="••••"/>

Change Password

After access to the information main page

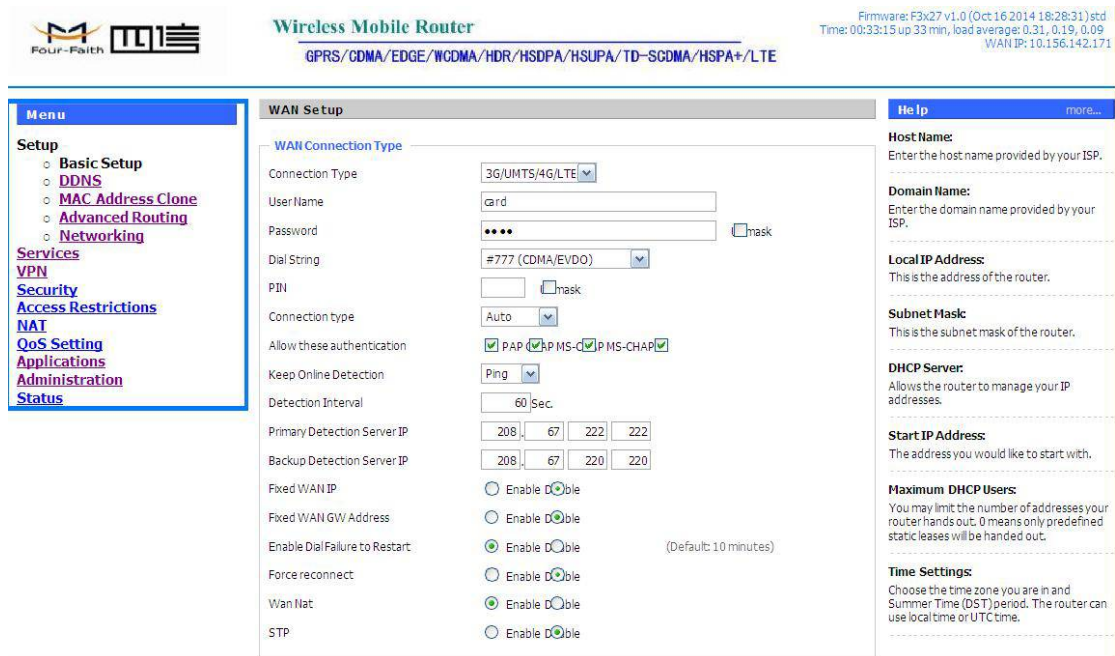

The image shows the 'Wireless Mobile Router' configuration page. At the top, it displays the Four-Faith logo and the router model 'F3X27 v1.0'. The page is divided into three main sections: a left sidebar menu, a central configuration area, and a right sidebar with help information.

**Left Sidebar Menu:**

- Menu
- Setup
  - Basic Setup
  - DDNS
  - MAC Address Clone
  - Advanced Routing
  - Networking
- Services
- VPN
- Security
- Access Restrictions
- NAT
- QoS Setting
- Applications
- Administration
- Status

**Central Configuration Area (WAN Setup):**

**WAN Connection Type**

Connection Type: 3G/UMTS/4G/LTE

User Name: card

Password: ••••

Dial String: #777 (CDMA/EVDO)

PIN:

Connection type: Auto

Allow these authentication: ☒ PAP ☒ MP MS-CHAP ☒ P MS-CHAP

Keep Online Detection: Ping

Detection Interval: 60 Sec.

Primary Detection Server IP: 208.67.222.222

Backup Detection Server IP: 208.67.220.220

Fixed WAN IP: ☐ Enable ☒ Disable

Fixed WAN GW Address: ☐ Enable ☒ Disable

Enable Dial Failure to Restart: ☒ Enable ☐ Disable (Default: 10 minutes)

Force reconnect: ☐ Enable ☒ Disable

Wan Nat: ☒ Enable ☐ Disable

STP: ☐ Enable ☒ Disable

**Right Sidebar (Help):**

**Host Name:** Enter the host name provided by your ISP.

**Domain Name:** Enter the domain name provided by your ISP.

**Local IP Address:** This is the address of the router.

**Subnet Mask:** This is the subnet mask of the router.

**DHCP Server:** Allows the router to manage your IP addresses.

**Start IP Address:** The address you would like to start with.

**Maximum DHCP Users:** You may limit the number of addresses your router hands out. 0 means only predefined static leases will be handed out.

**Time Settings:** Choose the time zone you are in and Summer Time (DST) period. The router can use local time or UTC time.

Users need to input user name and password if it is their first time to login.



Input correct user name and password to visit relevant menu page. Default user name is admin, password is admin. (available to modify user name and password on management page, then click submit)

## 3.3 Management and configuration

### 3.3.1 Setting

The Setup screen is the first screen users will see when accessing the router. Most users will be able to configure the router and get it work properly using only the settings on this screen. Some Internet Service Providers (ISPs) will require users to enter specific information, such as User Name, Password, IP Address, Default Gateway Address, or DNS IP Address. These information can be obtained from your ISP, if required.

#### 3.3.1.1 Basic Setting

WAN Connection Type

Seven Ways: Disabled, 3G/UNMTS/4G/LTE

**Disabled**

Connection Type Disabled

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 21 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

Forbid the setting of WAN port connection type

### 3G/UMTS/4G/LTE

Connection Type	<input type="text" value="3G/UMTS/4G/LTE"/>	
User Name	<input type="text"/>	
Password	<input type="password"/>	<input type="checkbox"/> Unmask
Dial String	<input type="text" value="*99***1# (UMTS/3G/3.5G)"/>	
APN	<input type="text"/>	
PIN	<input type="text"/>	<input type="checkbox"/> Unmask

**User Name:** login users' ISP(Internet Service Provider)

**Password:** login users' ISP

**Dial String:** dial number of users' ISP

**APN:** access point name of users' ISP

**PIN:** PIN code of users' SIM card

### dhcp-4G: High-rate communication's 4G devices suggest use this settings

Connection Type	<input type="text" value="dhcp-4G"/>	
User Name	<input type="text" value="root"/>	
Password	<input type="password" value="...."/>	<input type="checkbox"/> Unmask
APN	<input type="text" value="3gnet"/>	

**User Name:** login users' ISP(Internet Service Provider)

**Password:** login users' ISP

**Dial String:** dial number of users' ISP

**APN:** access point name of users' ISP

### Connection type

Connection type	<input type="text" value="Auto"/>
-----------------	-----------------------------------

**Connection type:** Auto, Force 3G, Force 2G, Prefer 3G, Prefer 2G options. If using 4G module, there has 4G network option. Users select different mode depending on their need

### Keep Online

Keep Online Detection	Ping <input type="button" value="v"/>
Detection Interval	60 Sec.
Primary Detection Server IP	166 . 111 . 8 . 238
Backup Detection Server IP	202 . 119 . 32 . 102

This function is used to detect whether the Internet connection is active, if users set it and when the router detect the connection is inactive, it will redial to users' ISP immediately to make the connection active.

#### Detection Method:

**None:** do not set this function

**Ping:** Send ping packet to detect the connection, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

**Route:** Detect connection with route method, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

**PPP:** Detect connection with PPP method, when choose this method, users should also configure "Detection Interval" item.

**Detection Interval:** time interval between two detections, unit is second

**Primary Detection Server IP:** the server used to response the router's detection packet. This item is only valid for method "Ping" and "Route".

**Backup Detection Server IP:** the server used to response the router's detection packet. This item is valid for method "Ping" and "Route".

**Note:** When users choose the "Route" or "Ping" method, it's quite important to make sure that the "Primary Detection Server IP" and "Backup Detection Server IP" are usable and stable, because they have to response the detection packet frequently.

Force reconnect	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Time	00 : 00

**Force reconnect:** this option schedules the pppoe or 3G reconnection by killing the pppd daemon and restart it.

**Time:** needed time to reconnect

#### STP

STP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
-----	---

STP (Spaning Tree Protocol) can be applied to loop network. Through certain algorithm achieves path redundancy, and loop network cuts to tree-based network without loop in the meantime, thus to avoid the hyperplasia and infinite circulation of a message in the

[Xiamen Four-Faith Communication Technology Co.,Ltd.](#)

Page 23 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

loop network

### Optional Configuration

Router Name	Four-Faith
Host Name	
Domain Name	
MTU	Auto <input type="button" value="v"/> 1500

**Router Name:** set router name

**Host Name:** ISP provides

**Domain Name:** ISP provides

**MTU:** auto (1500) and manual (1200-1492 in PPPOE/PPTP/L2TP mode, 576-16320 in other modes)

### Router Internal Network Settings

#### Router IP

Local IP Address	192	.	168	.	1	.	1
Subnet Mask	255	.	255	.	255	.	0
Gateway	0	.	0	.	0	.	0
Local DNS	0	.	0	.	0	.	0

**Local IP Address:** IP address of the router

**Subnet Mask:** the subnet mask of the router

**Gateway:** set internal gateway of the router. If default, internal gateway is the address of the router

**Local DNS:** DNS server is auto assigned by network operator server. Users enable to use their own DNS server or other stable DNS servers, if not, keep it default

### Network Address Server Settings (DHCP)

These settings for the router's Dynamic Host Configuration Protocol (DHCP) server functionality

configuration. The Router can serve as a network DHCP server. DHCP server automatically assigns an IP address for each computer in the network. If they choose to enable the router's DHCP server option, users can set all the computers on the LAN to automatically obtain an IP address and DNS, and make sure no other DHCP server in the network.

DHCP Type	<input type="text" value="DHCP Server"/>
DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Start IP Address	192.168.1. <input type="text" value="100"/>
Maximum DHCP Users	<input type="text" value="50"/>
Client Lease Time	<input type="text" value="1440"/> minutes
Static DNS 1	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Static DNS 2	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Static DNS 3	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
WINS	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Use DNSMasq for DHCP	<input checked="" type="checkbox"/>
Use DNSMasq for DNS	<input checked="" type="checkbox"/>
DHCP-Authoritative	<input checked="" type="checkbox"/>

#### DHCP Type: DHCP Server and DHCP Forwarder

Enter DHCP Server if set DHCP Type to DHCP Forwarder as blow:

DHCP Type	<input type="text" value="DHCP Forwarder"/>
DHCP Server	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

**DHCP Server:** keep the default Enable to enable the router's DHCP server option. If users have already have a DHCP server on their network or users do not want a DHCP server, then select Disable

**Start IP Address:** enter a numerical value for the DHCP server to start with when issuing IP addresses. Do not start with 192.168.1.1 (the router's own IP address).

**Maximum DHCP Users:** enter the maximum number of PCs that users want the DHCP server to assign IP addresses to. The absolute maximum is 253 if 192.168.1.1 is users' starting IP address.

**Client Lease Time:** the Client Lease Time is the amount of time a network user will be allowed connection to the router with their current dynamic IP address. Enter the amount of time, in minutes, that the user will be "leased" this dynamic IP address.

**Static DNS (1-3):** the Domain Name System (DNS) is how the Internet translates domain or website names into Internet addresses or URLs. Users' ISP will provide them with at least one DNS Server IP address. If users wish to utilize another, enter that IP address in one of these fields. Users can enter up to three DNS Server IP addresses here. The router will utilize them for quicker access to functioning DNS servers.

**WINS:** the Windows Internet Naming Service (WINS) manages each PC's interaction with the Internet. If users use a WINS server, enter that server's IP address here. Otherwise, leave it blank.

**DNSMasq:** users' domain name in the field of local search, increase the expansion of the

host option, to adopt DNSMasq can assign IP addresses and DNS for the subnet, if select DNSMasq, dhcpd service is used for the subnet IP address and DNS.

### Time Settings

Select time zone of your location. To use local time, leave the checkmark in the box next to Use local time.

NTP Client	<input checked="" type="checkbox"/> Enable <input type="checkbox"/> Disable
Time Zone	UTC+08:00 ▼
Summer Time (DST)	last Sun Mar - last Sun Oct ▼
Server IP/Name	<input type="text"/>

**NTP Client:** Get the system time from NTP server

**Time Zone:** Time zone options

**Summer Time (DST):** set it depends on users' location

**Server IP/Name:** IP address of NTP server, up to 32 characters. If blank, the system will find a server by default

### Adjust Time

Time	<input type="text" value="2012"/> - <input type="text" value="3"/> - <input type="text" value="15"/> <input type="text" value="9"/> : <input type="text" value="16"/> : <input type="text" value="20"/> <input type="button" value="Get"/> <input type="button" value="Set"/>
------	---

To adjust time by the system and refresh to get the time of the web, user can set to modify the time of the system. They can change to adjust time by manual to achieve adjust time by the system if the system fails to get NTP server

## 3.3.1.2 Dynamic DNS

If user's network has a permanently assigned IP address, users can register a domain name and have that name linked with their IP address by public Domain Name Servers (DNS). However, if their Internet account uses a dynamically assigned IP address, users will not know in advance what their IP address will be, and the address can change frequently. In this case, users can use a commercial dynamic DNS service, which allows them to register their domain to their IP address, and will forward traffic directed at their domain to their frequently-changing IP address.

**DDNS Service:** Four-Faith router currently support DynDNS, freedns, Zoneedit, NO-IP, 3322, easyDNS, TZO, DynSIP and Custom based on the user.

DDNS Service	3322.org ▼
--------------	------------

User Name	<input type="text"/>	
Password	<input type="password"/>	<input type="checkbox"/> Unmask
Host Name	<input type="text"/>	
Type	Dynamic ▼	
Wildcard	<input type="checkbox"/>	
Do not use external ip check	<input checked="" type="radio"/> Yes <input type="radio"/> No	

**User Name:** users register in DDNS server, up to 64 characteristic

**Password:** password for the user name that users register in DDNS server, up to 32 characteristic

**Host Name:** users register in DDNS server, no limited for input characteristic for now

**Type:** depends on the server

**Wildcard:** support wildcard or not, the default is OFF. ON means \*.host.3322.org is equal to host.3322.org

**Do not use external ip check:** enable or disable the function of 'do not use external ip check'

Force Update Interval	<input type="text" value="10"/>	(Default: 10 Days, Range: 1 - 60)
-----------------------	---------------------------------	-----------------------------------

**Force Update Interval:** unit is day, try forcing the update dynamic DNS to the server by setted days

## Status

### DDNS Status

```

Fri Nov 25 13:58:32 2011: INADYN: Started 'INADYN Advanced version 1.96-ADV' - dynamic DNS updater.
Fri Nov 25 13:58:32 2011: INADYN: IP read from cache file is '192.168.8.222'. No update required.
Fri Nov 25 13:58:32 2011: I:INADYN: IP address for alias 'testsixin.3322.org' needs update to '192.168.8.38'
Fri Nov 25 13:58:33 2011: I:INADYN: Alias 'testsixin.3322.org' to IP '192.168.8.38' updated successfully.
  
```

DDNS Status shows connection log information

### 3.3.1.3 Clone MAC Address

Some ISP need the users to register their MAC address. The users can clone the router MAC address to their MAC address registered in ISP if they do not want to re-register their MAC address

☒ Enable ☐ Disable

Clone LAN MAC

Clone WAN MAC

[Get Current PC MAC Address](#)

Clone Wireless MAC

**Clone MAC address** can clone three parts: Clone LAN MAC, Clone WAN MAC, Clone Wireless MAC.

**Noted** that one MAC address is 48 characteristic, can not be set to the multicast address, the first byte must be even. And MAC address value of network bridge br0 is determined by the smaller value of wireless MAC address and LAN port MAC address.

### 3.3.1.4 Advanced Router

**Operating Mode:** Gateway and Router

[Operating Mode](#)

Operating Mode

Gateway ▼

If the router is hosting users' Internet connection, select Gateway mode. If another router exists on their network, select Router mode.

### Dynamic Routing

[Dynamic Routing](#)

Interface

Disable ▼

Dynamic Routing enables the router to automatically adjust to physical changes in the network's layout and exchange routing tables with other routers. The router determines the network packets' route based on the fewest number of hops between the source and destination.

To enable the Dynamic Routing feature for the WAN side, select WAN. To enable this feature for the LAN and wireless side, select LAN&WLAN. To enable the feature for both the WAN and LAN, select Both. To disable the Dynamic Routing feature for all data transmissions, keep the default setting, Disable.

**Note:** Dynamic Routing is not available in Gateway mode

### Static Routing

[Xiamen Four-Faith Communication Technology Co.,Ltd.](#)

Page 28 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

### Static Routing

Select set number

1 ( )

Delete

Route Name

Metric

0

Destination LAN NET

0.0.0.0

Subnet Mask

0.0.0.0

Gateway

0.0.0.0

Interface

LAN & WLAN

Show Routing Table

**Select set number:** 1-50

**Route Name:** defined routing name by users, up to 25 characters

**Metric:** 0-9999

**Destination LAN NET:** the Destination IP Address is the address of the network or host to which users want to assign a static route

**Subnet Mask:** the Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion

**Gateway:** IP address of the gateway device that allows for contact between the router and the network or host.

**Interface:** indicate users whether the Destination IP Address is on the LAN & WLAN (internal wired and wireless networks), the WAN (Internet), or Loopback (a dummy network in which one PC acts like a network, necessary for certain software programs)

**Show Routing Table**

Routing Table Entry List			
Destination LAN NET	Subnet Mask	Gateway	Interface
192.168.1.1	255.255.255.255	0.0.0.0	WAN
192.168.1.0	255.255.255.0	0.0.0.0	LAN & WLAN
192.168.1.0	255.255.255.0	0.0.0.0	WAN
169.254.0.0	255.255.0.0	0.0.0.0	WAN
0.0.0.0	0.0.0.0	192.168.1.1	LAN & WLAN

Refresh

Close

### 3.3.1.5 Networking

**Bridging**

Create Bridge

Bridge 0
 

Add

br0

STP

Off

▼

U

32768

1500

Assign to Bridge

Add

Current Bridging Table

Bridge Name	STP enabled	Interfaces
br0	no	vlan1

Auto-Refresh is On

**Bridging-Create Bridge:** creates a new empty network bridge for later use. STP means Spanning Tree Protocol and with PRIO users are able to set the bridge priority order. The lowest number has the highest priority.

**Bridging - Assign to Bridge:** allows users to assign any valid interface to a network bridge. Consider setting the Wireless Interface options to Bridged if they want to assign any Wireless Interface here. Any system specific bridge setting can be overridden here in this field.

**Current Bridging Table:** shows current bridging table

#### Create steps as below:

Click 'Add' to create a new bridge, configuration is as below:

Create Bridge

Bridge 0
 

Add

br0

STP

Off

▼

Prio 32768

MTU 1500

Bridge 1
 

Delete

br1

STP

On

▼

Prio 32768

MTU 1500

Create bridge option: the first br0 means bridge name. STP means to on/off spanning tree protocol. Prio means priority level of STP, the smaller the number, the higher the level. MTU means maximum transfer unit, default is 1500, delete if it is not need. And then click 'Save' or 'Add'. Bride properties is as below:

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 30 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

Create Bridge

Bridge 0	br0	STP	Off	Prio	32768	MTU	1500	Delete
Bridge 1	br1	STP	On	Prio	32768	MTU	1500	Delete
IP Address	0.0.0.0							
Subnet Mask	0.0.0.0							
Add								

Enter relevant bridge IP address and subnet mask, click 'Add' to create a bridge.

Note: Only create a bridge can apply it.

Assign to Bridge

Assignment 0	none	Interface	ra0	Prio	63	Delete
Add		<div> <div>none</div> <div>br0</div> <div>br1</div> </div>				

Assign to Bridge option: to assign different ports to created bridge.

To make br1 bridge has the same function with DHCP assigned address, users need to set multiple DHCP function, see the introduction of multi-channel DHCPD:

Port Setup

Port Setup

Network Configuration eth2	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration vlan1	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration br0	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default

**Port Setup:** Set the port property, the default is not set

Network Configuration ra0	<input checked="" type="radio"/> Unbridged	<input type="radio"/> Default
MTU	1500	
Multicast forwarding	<input type="radio"/> Enable	<input checked="" type="radio"/> Disable
Masquerade / NAT	<input checked="" type="radio"/> Enable	<input type="radio"/> Disable
IP Address	0.0.0.0	
Subnet Mask	0.0.0.0	

Choose not bridge to set the port's own properties, detailed properties are as below:

MTU: maximum transfer unit

Multicast forwarding: enable or disable multicast forwarding

Masquerade/NAT: enable or disable Masquerade/NAT

IP Address: set ra0's IP address, and do not conflict with other ports or bridge

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 31 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

Subnet Mask: set the port's subnet mask

**Multiple DHCP Server**

DHCP 0	ra0	On	Start	100	Max	50	Leasetime	3600
<input type="button" value="Delete"/> <input type="button" value="Add"/>								

Multiple DHCPD: using multiple DHCP service. Click 'Add' in multiple DHCP server to appear relevant configuration. The first means the name of port or bridge (do not be configured as eth0), the second means whether to on DHCP. Start means start address, Max means maximum assigned DHCP clients, Leasetime means the client lease time, the unit is second, click 'Save' or 'Apply' to put it into effect after setting.

Note: Only configure and click 'Save' can configure the next, can not configure multiple DHCP at the same time.

## 3.3.2 Services

### 3.3.2.1 Services

DHCP Client

**DHCP Client**

Set Vendorclass	<input type="text"/>
Request IP	<input type="text"/>

**Set Vendorclass:** the DHCP server can automatically identify the specific identifier of the computer running certain operating systems to send, such as the DHCP server can identify the DHCP client running the operating system is Windows 2000 or Windows 98. Identification identifier DHCP option can be assigned to DHCP clients based on specific operating system.

**Request IP:** IP address of the request

### DHCP Server

DHCPd assigns IP addresses to users local devices. While the main configuration is on the setup page users can program some nifty special functions here.

**DHCP Server**

Use JFFS2 for client lease DB (Not mounted)

Use NVRAM for client lease DB ☐

Used Domain WAN

LAN Domain

Additional DHCPd Options

Static Leases

MAC Address	Host Name	IP Address	Client Lease Time
			minutes

Add Remove

**Use NVRAM for client lease DB:** users can store data to the system NVRAM area is enabled

**Used domain:** users can select here which domain the DHCP clients should get as their local domain. This can be the WAN domain set on the Setup screen or the LAN domain which can be set here.

**LAN Domain:** users can define here their local LAN domain which is used as local domain for DNSmasq and DHCP service if chose above.

**Static Leases:** if users want to assign certain hosts a specific address then they can define them here. This is also the way to add hosts with a fixed address to the router's local DNS service (DNSmasq).

**Additional DHCPd Options:** some extra options users can set by entering them

## DNSMasq

DNSmasq is a local DNS server. It will resolve all host names known to the router from dhcp (dynamic and static) as well as forwarding and caching DNS entries from remote DNS servers. Local DNS enables DHCP clients on the LAN to resolve static and dynamic DHCP hostnames.

**DNSMasq**

DNSMasq ☒ Enable ☐ Disable

Local DNS ☐ Enable ☒ Disable

No DNS Rebind ☒ Enable ☐ Disable

Additional DNSMasq Options

**Local DNS:** enables DHCP clients on the LAN to resolve static and dynamic DHCP hostnames

**No DNS Rebind:** when enabled, it can prevent an external attacker to access the router's internal Web interface. It is a security measure

**Additional DNSMasq Options:** some extra options users can set by entering them in Additional DNS Options.

**For example:**

**static**

**allocation:**

dhcp-host=AB:CD:EF:11:22:33,192.168.0.10,myhost,myhost.domain,12h

**max lease number:** dhcp-lease-max=2

**DHCP server IP range:** dhcp-range=192.168.0.110,192.168.0.111,12h

## SNMP

**SNMP**

SNMP	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Location	Unknown
Contact	root
Name	four-faith
RO Community	public
RW Community	private

**Location:** equipment location

**Contact:** contact this equipment management

**Name:** device name

**RO Community:** SNMP RO community name, the default is public, Only to read.

**RW Community:** SNMP RW community name, the default is private, Read-write permissions

## SSHD

Enabling SSHd allows users to access the Linux OS of their router with an SSH client

**Secure Shell**

SSHd	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH TCP Forwarding	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Password Login	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Port	22 (Default: 22)
Authorized Keys	

**SSH TCP Forwarding:** enable or disable to support the TCP forwarding

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 34 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

**Password Login:** allows login with the router password (username is admin)

**Port:** port number for SSHd (default is 22)

**Authorized Keys:** here users paste their public keys to enable key-based login (more secure than a simple password)

### System log

Enable Syslogd to capture system messages. By default they will be collected in the local file /var/log/messages. To send them to another system, enter the IP address of a remote syslog server.

**System Log**

Syslogd	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Syslog Out Mode	<input checked="" type="radio"/> Net <input type="radio"/> Console
Remote Server	<input type="text"/>

**Syslog Out Mode:** two log mode

**Net:** the log information output to a syslog server

**Console:** the log information output to console port

**Remote Server:** if choose net mode, users should input a syslog server's IP Address and run a syslog server program on it.

### Telnet

**Telnet**

Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
--------	---

**Telnet:** enable a telnet server to connect to the router with telnet. The username is admin and the password is the router's password.

**Note:** If users use the router in an untrusted environment (for example as a public hotspot), it is strongly recommended to use SSHd and deactivate telnet.

### WAN Traffic Counter

**WAN Traffic Counter**

ttraff Daemon	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
---------------	---

**Ttraff Daemon:** enable or disable wan traffic counter function

## 3.3.3 VPN

### 3.3.3.1 PPTP

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 35 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

## PPTP Server

**PPTP Server**

PPTP Server
☒ Enable
☐ Disable

Broadcast support
☐ Enable
☒ Disable

Force MPPE Encryption
☒ Enable
☐ Disable

DNS1

DNS2

WINS1

WINS2

Server IP

Client IP(s)

CHAP-Secrets

**Broadcast support:** enable or disable broadcast support of PPTP server

**Force MPPE Encryption:** enable or disable force MPPE encryption of PPTP data

**DNS1/DNS2/WINS1/WINS2:** set DNS1/DNS2/WINS1/WINS2

**Server IP:** input IP address of the router as PPTP server, differ from LAN address

**Client IP(s):** IP address assigns to the client, the format is xxx.xxx.xxx.xxx-xxx

**CHAP Secrets:** user name and password of the client using PPTP service

**Note:** client IP must be different with IP assigned by router DHCP.

The format of CHAP Secrets is user \* password \*.

## PPTP Client

**PPTP Client**

PPTP Client Options
☒ Enable
☐ Disable

Server IP or DNS Name

Remote Subnet

Remote Subnet Mask

MPPE Encryption
 mppe required

MTU
 1450 (Default: 1450)

MRU
 1450 (Default: 1450)

NAT
☒ Enable
☐ Disable

User Name
 DOMAIN\Username

Password
☐ Unmask

**Server IP or DNS Name:** PPTP server's IP Address or DNS Name

**Remote Subnet:** the network of the remote PPTP server

**Remote Subnet Mask:** subnet mask of remote PPTP server

**MPPE Encryption:** enable or disable Microsoft Point-to-Point Encryption.

**MTU:** maximum Transmission Unit

**MRU:** maximum Receive Unit


**NAT:** network Address Translation

**User Name:** user name to login PPTP Server.

**Password:** password to log into PPTP Server.

### 3.3.3.2 L2TP

#### L2TP Server

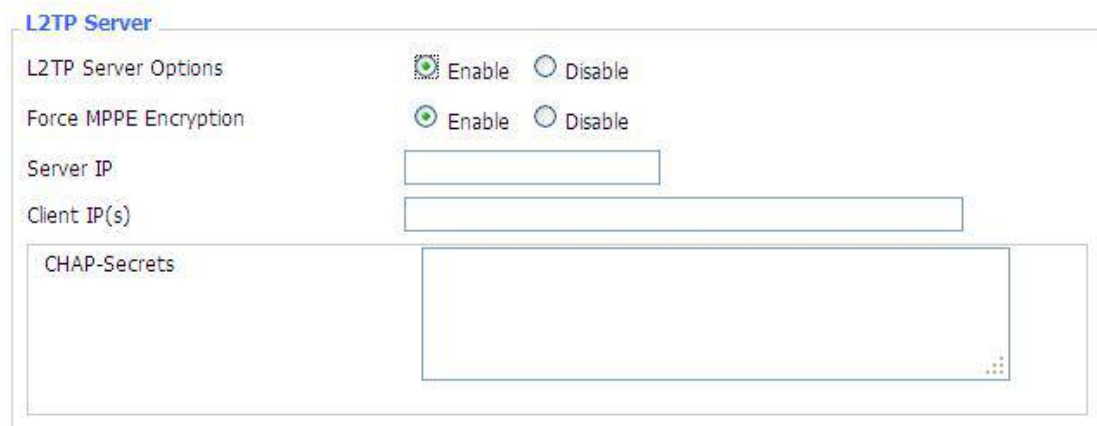

**Force MPPE Encryption:** enable or disable force MPPE encryption of L2TP data

**Server IP:** input IP address of the router as PPTP server, differ from LAN address

**Client IP(s):** IP address assigns to the client, the format is xxx.xxx.xxx.xxx-xxx.xxx.xxx.xxx

**CHAP Secrets:** user name and password of the client using L2TP service

**Note:** client IP must be different with IP assigned by router DHCP.

The format of CHAP Secrets is user \* password \*.

#### L2TP Client

**L2TP Client**

L2TP Client Options ☒ Enable ☐ Disable

User Name

Password  ☐ Unmask

Gateway (L2TP Server)

Remote Subnet

Remote Subnet Mask

MPPE Encryption

MTU  (Default: 1450)

MRU  (Default: 1450)

NAT ☒ Enable ☐ Disable

Require CHAP ☒ Yes ☐ No

Refuse PAP ☒ Yes ☐ No

Require Authentication ☒ Yes ☐ No

**Gateway(L2TP Server):** L2TP server's IP Address or DNS Name

**Remote Subnet:** the network of remote PPTP server

**Remote Subnet Mask:** subnet mask of remote PPTP server

**MPPE Encryption:** enable or disable Microsoft Point-to-Point Encryption

**MTU:** maximum transmission unit

**MRU:** maximum receive unit

**NAT:** network address translation

**User Name:** user name to login L2TP Server

**Password:** password to login L2TP Server

**Require CHAP:** enable or disable support chap authentication protocol

**Refuse PAP:** enable or disable refuse to support the pap authentication

**Require Authentication:** enable or disable support authentication protocol

**Use LZO Compression:** enable or disable use LZO compression for data transfer

**NAT:** enable or disable NAT through function

**Bridge TAP to br0:** enable or disable bridge TAP to br0

**Local IP Address:** set IP address of local OPENVPN client

**TUN MTU Setting:** set MTU value of the tunnel

**TCP MSS:** mss of TCP data

### 3.3.3.3 IPSEC

#### Connect Status and Control

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 38 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

Show IPSEC connection and status of current router on IPSEC page.

Connection status and control				
Name	Type	Common Name	status	Action
<a href="#">Add</a>				

**Name:** the name of IPSEC connection

**Type:** The type and function of current IPSEC connection

**Common name:** local subnet, local address, opposite end address and opposite end subnet of current connection

**Status:** connection status: closed, negotiating, establish

**Closed:** this connection does not launch a connection request to opposite end

**Negotiating:** this connection launch a request to opposite end, is under negotiating, the connection has not been established yet

**Establish:** the connection has been established, enabled to use this tunnel

**Action:** the action of this connection, current is to delete, edit, reconnect and enable

**Delete:** to delete the connection, also will delete IPSEC if IPSEC has set up

**Edit:** to edit the configure information of this connection, reload this connection to make the configuration effect after edit

**Reconnect:** this action will remove current tunnel, and re-launch tunnel establish request

**Enable:** when the connection is enable, it will launch tunnel establish request when the

system reboot or reconnect, otherwise the connection will not do it

**Add:** to add a new IPSEC connection

## Add IPSEC connection or edit IPSEC connection

**Type:** to choose IPSEC mode and relevant functions in this part, supports tunnel mode client, tunnel mode server and transfer mode currently

Type	
Type	Net-to-Net Virtual Private Network
IPSEC role	<input checked="" type="radio"/> Client <input type="radio"/> Server

**Connection:** this part contains basic address information of the tunnel

Connection			
Name	<input type="text"/>	Enabled	<input checked="" type="checkbox"/>
Local WAN Interface	vlan1 <input type="button" value="v"/>	Remote Host address	<input type="text"/>
Local Subnet	<input type="text"/>	Remote subnet	<input type="text"/>
Local Id	<input type="text"/>	Remote ID	<input type="text"/>

**Name:** to indicate this connection name, must be unique

**Enabled:** If enable, the connection will send tunnel connection request when it is reboot or re-connection, otherwise it is no need if disable

**Local WAN Interface:** local addresss of the tunnel

**Remote Host Address:** IP/domain name of end opposite; this option can not fill in if using tunnel mode server

**Local Subnet:** IPSec local protects subnet and subnet mask, i.e. 192.168.1.0/24; this option can not fill in if using transfer mode

**Remote Subnet:** IPSec opposite end protects subnet and subnet mask, i.e.192.168.7.0/24; this option can not fill in if using transfer mode

**Local ID:** tunnel local end identification, IP and domain name are available

**Remote ID:** tunnel opposite end identification, IP and domain name are available

**Detection:** this part contains configure information of connection detection

Detection			
Enable DPD Detection	<input checked="" type="checkbox"/>		
Time Interval	60	(S) Timeout	60 (S) Action hold <input type="button" value="v"/>
Enable Connection Detection	<input checked="" type="checkbox"/>		

**Enable DPD Detection:** enable or disable this function, tick means enable

**Time Interval:** set time interval of connect detection (DPD)

**Timeout:** set the timeout of connect detection

**Action:** set the action of connect detection

**Advanced Settings:** this part contains relevant setting of IKE, ESP, negotiation mode, etc.

**Advanced Settings**

Enable advanced settings ☒

IKE Encryption 3DES
IKE Integrity MD5
IKE Groupype MODP-8192

IKE Lifetime 0 hours

ESP Encryption 3DES
ESP Integrity MD5

ESP Keylife 0 hours

☐ IKE+ESP: Use only proposed settings.

☐ IKE aggressive mode allowed. Avoid if possible (preshared key is transmitted in clear text)!

☒ Perfect Forward Secrecy (PFS)

☐ Negotiate payload compression

**Enable Advanced Settings:** enable to configure 1<sup>st</sup> and 2<sup>nd</sup> phase information, otherwise it

will automic negotiation according to opposite end

**IKE Encryption:** IKE phased encryption mode

**IKE Integrity:** IKE phased integrity solution

**IKE Groupype:** DH exchange algorithm

**IKE Lifetime:** set IKE lifetime, current unit is hour, the default is 0

**ESP Encryption:** ESP encryption type

**ESP Integrity:** ESP integrity solution

**ESP Keylife:** set ESP keylife, current unit is hour, the default is 0

**IKE aggressive mode allowed:** negotiation mode adopt aggressive mode if tick; it is main

mode if non-tick

**Negotiate payload compression:** Tick to enable PFS, non-tick to diable PFS

**Authentication:** choose use share encryption option or certificate authentication option. Current is only to choose use share encryption option.

**Authentication**

☒ Use a Pre-Shared Key:

☐ Generate and use the X.509 certificate

### 3.3.3.4 GRE

GRE (Generic Routing Encapsulation, Generic Routing Encapsulation) protocol is a network layer protocol (such as IP and IPX) data packets are encapsulated, so these encapsulated data packets to another network layer protocol (IP)transmission. GRE Tunnel (tunnel) technology, Layer Two Tunneling Protocol VPN (Virtual Private Network).

## GRE Tunnel

GRE Tunnel ☐ Enable ☒ Disable

**GRE Tunnel:** enable or disable GRE function

Number	1 (fff) <input type="button" value="Delete"/>
Status	Enable <input type="button" value="v"/>
Name	fff
Through	PPP <input type="button" value="v"/>
Peer Wan IP Addr	120.42.46.98
Peer Subnet	192.168.5.0/24 (eg:192.168.1.0/24)
Peer Tunnel IP	200.200.200.1
Local Tunnel IP	200.200.200.5
Local Netmask	255.255.255.0

**Number:** Switch on/off GRE tunnel app

**Status:** Switch on/off someone GRE tunnel app

**Name:** GRE tunnel name

**Through:** The GRE packet transmit interface

**Peer Wan IP Addr:** The remote WAN address

**Peer Subnet:** The remote gateway local subnet, eg: 192.168.1.0/24

**Peer Tunnel IP:** The remote tunnel ip address

**Local Tunnel IP:** The local tunnel ip address

**Local Netmask:** Netmask of local network

Keepalive	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Retry times	<input type="text"/>
Interval	<input type="text"/>
Fail Action	Hold <input type="button" value="v"/>

**Keepalive:** Enable or disable GRE Keepalive function

**Retry times:** GRE keepalive detect fail retries

**Interval:** The time interval of GRE keepalive packet sent

**Fail Action:** The action would be exec after keeping alive failed

Click on "**View GRE tunnels**" keys can view the information of GRE

## GRE Tunnels list

 
Number	Name	Enable	Through	Peer Wan IP Addr	Peer Subnet	Peer Tunnel IP	Local Tunnel IP	Local Netmask	Keepalive	Retry times	Interval	Fail Action
1	fff	Yes	PPP	120.42.46.98	192.168.5.0/24	200.200.200.1	200.200.200.5	255.255.255.0	No	0	0	Hold

## 3.3.4 Security

### 3.3.4.1 Firewall

You can enable or disable the firewall, filter specific Internet data types, and prevent anonymous Internet requests, ultimately enhance network security.


#### Firewall Protection



The screenshot shows the 'Firewall Protection' section of the router's web interface. It features a title bar 'Firewall Protection' and a sub-section 'SPI Firewall'. Below this, there are two radio buttons: 'Enable' (which is selected) and 'Disable'.

Firewall enhance network security and use SPI to check the packets into the network. To use firewall protection, choose to enable otherwise disabled. Only enable the SPI firewall, you can use other firewall functions: filtering proxy, block WAN requests, etc.

#### Additional Filters

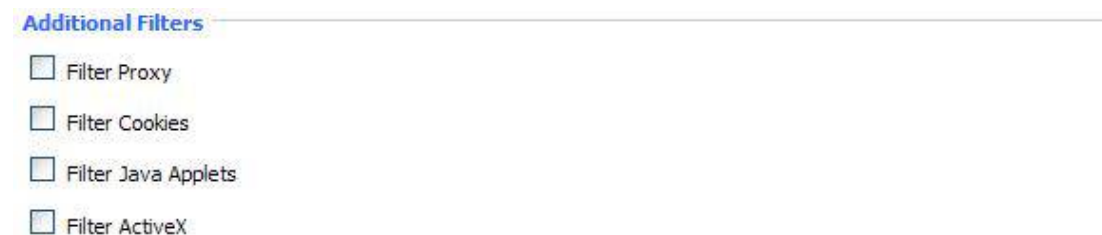

The screenshot shows the 'Additional Filters' section. It has a title bar 'Additional Filters' and a list of four checkboxes, all of which are currently unchecked: 'Filter Proxy', 'Filter Cookies', 'Filter Java Applets', and 'Filter ActiveX'.


**Filter Proxy:** Wan proxy server may reduce the security of the gateway, Filtering Proxy will refuse any access to any wan proxy server. Click the check box to enable the function otherwise disabled.

**Filter Cookies:** Cookies are the website of data the data stored on your computer. When you interact with the site, the cookies will be used. Click the check box to enable the function otherwise disabled.

**Filter Java Applets:** If refuse to Java, you may not be able to open web pages using the Java programming.. Click the check box to enable the function otherwise disabled.

**Filter ActiveX:** If refuse to ActiveX, you may not be able to open web pages using the ActiveX programming. Click the check box to enable the function otherwise disabled.

#### Prevent WAN Request

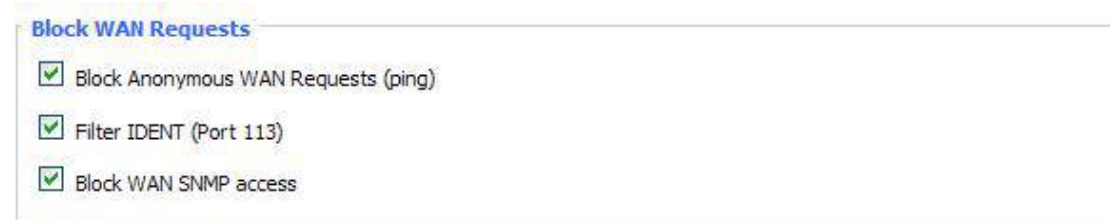

The screenshot shows the 'Block WAN Requests' section. It has a title bar 'Block WAN Requests' and a list of three checkboxes, all of which are currently checked: 'Block Anonymous WAN Requests (ping)', 'Filter IDENT (Port 113)', and 'Block WAN SNMP access'.

**Block Anonymous WAN Requests (ping):** By selecting “Block Anonymous WAN Requests (ping)” box to enable this feature, you can prevent your network from the Ping or detection of other Internet users. so that make More difficult to break into your network.

The default state of this feature is enabled ,choose to disable allow anonymous Internet requests.

**Filter IDENT (Port 113):** Enable this feature can prevent port 113 from being scanned from outside. Click the check box to enable the function otherwise disabled.

**Block WAN SNMP access:** This feature prevents the SNMP connection requests from the WAN.

After Complete the changes, click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

### Impede WAN DoS/Bruteforce

**Impede WAN DoS/Bruteforce**

☐ Limit SSH Access

☐ Limit Telnet Access

☐ Limit PPTP Server Access

☐ Limit L2TP Server Access

**Limit ssh Access:** This feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

**Limit Telnet Access:** This feature limits the access request from the WAN by Telnet, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

**Limit PPTP Server Access:** When build a PPTP Server in the router,this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP . Any new access request will be automatically dropped.

**Limit L2TP Server Access:** When build a L2TP Server in the router, this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

### Log Management

The router can keep logs of all incoming or outgoing traffic for your Internet connection.

**Log**

Log ☐ Enable ☒ Disable

**Log:** To keep activity logs, select Enable. To stop logging, select Disable. When select enable, the following page will appear.

Log

☒ Enable
☐ Disable

Log Level

High

Options

Dropped

Disable

Rejected

Enable

Accepted

Enable

**Log Level:** Set this to the required log level. Set Log Level higher to log more actions.

**Options:** When select Enable, the corresponding connection will be recorded in the journal, the disabled are not recorded.

**Incoming Log:** To see a temporary log of the Router's most recent incoming traffic, click the Incoming Log button.

Incoming Log Table

Source IP	Protocol	Destination Port Number	Rule
-----------	----------	-------------------------	------

Refresh

Close

**Outgoing Log:** To see a temporary log of the Router's most recent outgoing traffic, click the Outgoing Log button.

Outgoing Log Table				
LAN IP	Destination URL/IP	Protocol	Service/Port Number	Rule
192.168.1.164	223.203.188.56	TCP	www	Accepted
192.168.1.164	183.60.16.200	UDP	8000	Accepted
192.168.1.164	183.60.48.60	UDP	8000	Accepted
192.168.1.164	112.95.240.183	UDP	8000	Accepted
192.168.1.164	183.60.49.245	UDP	8000	Accepted
192.168.1.164	119.147.32.204	UDP	8000	Accepted
192.168.1.164	112.90.86.244	UDP	8000	Accepted
192.168.1.164	119.147.45.157	UDP	8000	Accepted
192.168.1.164	183.60.49.15	UDP	8000	Accepted
192.168.1.164	183.60.16.70	UDP	8000	Accepted
192.168.1.164	183.60.16.200	UDP	8000	Accepted

Click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

## 3.3.5 Access Restrictions

### 3.3.5.1 WAN Access

Use access restrictions, you can block or allow specific types of Internet applications.

You can set specific PC-based Internet access policies. This feature allows you to customize up to ten different Internet Access Policies for particular PCs, which are identified by their IP or MAC addresses.

Access Policy

Policy

1 ( )

Delete

Summary

Status

☐ Enable
 ☒ Disable

Policy Name

PCs

Edit List of clients

☐ Deny
 ☒ Filter

Internet access during selected days and hours.

Two options in the default policy rules: "Filter" and "reject". If select "Deny", you will deny specific computers to access any Internet service at a particular time period. If you choose to "filter", It will block specific computers to access the specific sites at a specific time period. You can set up 10 Internet access policies filtering specific PCs access Internet services at a particular time period.

**Access Policy:** You may define up to 10 access policies. Click Delete to delete a policy or Summary to see a summary of the policy.

**Status:** Enable or disable a policy.

**Policy Name:** You may assign a name to your policy.

**PCs:** The part is used to edit client list, the strategy is only effective for the PC in the list.

Days

Everyday

Sun

Mon

Tue

Wed

Thu

Fri

Sat

☒
☐
☐
☐
☐
☐
☐
☐

Times

24 Hours

☒

From

☐

0:00

To

0:00

**Days:** Choose the day of the week you would like your policy to be applied.

**Times:** Enter the time of the day you would like your policy to be applied.

#### Website Blocking by URL Address

<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>

#### Website Blocking by Keyword

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

**Website Blocking by URL Address:** You can block access to certain websites by entering their URL.

**Website Blocking by Keyword:** You can block access to certain website by the keywords contained in their webpage

List of clients	
Enter MAC Address of the clients in this format: xx:xx:xx:xx:xx:xx	
MAC 01	<input type="text" value="00:AA:BB:CC:DD:EE"/>
MAC 02	<input type="text" value="00:00:00:00:00:00"/>
MAC 03	<input type="text" value="00:00:00:00:00:00"/>
MAC 04	<input type="text" value="00:00:00:00:00:00"/>
MAC 05	<input type="text" value="00:00:00:00:00:00"/>
MAC 06	<input type="text" value="00:00:00:00:00:00"/>
MAC 07	<input type="text" value="00:00:00:00:00:00"/>
MAC 08	<input type="text" value="00:00:00:00:00:00"/>
Enter the IP Address of the clients	
IP 01	192.168.1. <input type="text" value="15"/>
IP 02	192.168.1. <input type="text" value="0"/>
IP 03	192.168.1. <input type="text" value="0"/>
IP 04	192.168.1. <input type="text" value="0"/>
IP 05	192.168.1. <input type="text" value="0"/>
IP 06	192.168.1. <input type="text" value="0"/>
Enter the IP Range of the clients	
IP Range 01	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="19"/> ~ <input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="30"/>
IP Range 02	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> ~ <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

#### set up Internet access policy

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 47 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

1. Select the policy number (1-10) in the drop-down menu.
2. For this policy is enabled, click the radio button next to "Enable"
3. Enter a name in the Policy Name field.
4. Click the Edit List of PCs button.
5. On the List of PCs screen, specify PCs by IP address or MAC address. Enter the appropriate IP addresses into the IP fields. If you have a range of IP addresses to filter, complete the appropriate IP Range fields. Enter the appropriate MAC addresses into the MAC fields.
6. Click the Apply button to save your changes. Click the Cancel button to cancel your unsaved changes. Click the Close button to return to the Filters screen.
7. If you want to block the listed PCs from Internet access during the designated days and time, then keep the default setting, Deny. If you want the listed PCs to have Internet filtered during the designated days and time, then click the radio button next to Filter.
8. Set the days when access will be filtered. Select Everyday or the appropriate days of the week.
9. Set the time when access will be filtered. Select 24 Hours, or check the box next to From and use the drop-down boxes to designate a specific time period.
10. Click the Add to Policy button to save your changes and active it.
11. To create or edit additional policies, repeat steps 1-9.
12. To delete an Internet Access Policy, select the policy number, and click the Delete button.

**Note:**

- 1) The default factory value of policy rules is "filtered". If the user chooses the default policy rules for "refuse", and editing strategies to save or directly to save the settings. If the strategy edited is the first, it will be automatically saved into the second, if not the first, keep the original number.
- 2) Turn off the power of the router or reboot the router can cause a temporary failure. After the failure of the router, if can not automatically synchronized NTP time server, you need to recalibrate to ensure the correct implementation of the relevant period control function.

### 3.3.5.2 Packet Filter

To block some packets getting Internet access or block some Internet packets getting local network access, you can configure filter items to block these packets.

#### Packet Filter

Packet filter function is realized based on IP address or port of packets.



**Enable Packet Filter:** Enable or disable "packet filter" function

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 48 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

**Policy:** The filter rule's policy, you can choose the following options

Discard The Following--Discard packets conform to the following rules, Accept all other packets

Only Accept The Following-- Accept only the data packets conform to the following rules, Discard all other packets

Add Filter Rule	
Direction	OUTPUT
Protocol	TCP/UDP
Source Ports	1 - 65535
Destination Ports	1 - 65535
Source IP	0. 0. 0. 0 / 0
Destination IP	0. 0. 0. 0 / 0
	Add

#### Direction

**input:** packet from WAN to LAN

**output:** packet from LAN to WAN

**Protocol:** packet protocol type

**Source Ports:** packet's source port

**Destination Ports:** packet's destination port

**Source IP:** packet's source IP address

**Destination IP:** packet's destination IP address

Note: "Source Port" ,"Destination Port" ,"Source IP" ,"Destination IP" could not be all empty ,you have to input at least one of these four parameters.

## 3.3.6 NAT

### 3.3.6.1 Port Forwarding

Port Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the router will forward those requests to the appropriate PC. If you want to forward a whole range of ports, see [Port Range Forwarding](#).

**Forwards**

Application	Protocol	Source Net	Port from	IP Address	Port to	Enable
web	TCP	192.168.8.11	8000	192.168.1.12	80	<input checked="" type="checkbox"/>
ftp	Both	192.168.8.12	24	192.168.1.12	21	<input checked="" type="checkbox"/>

**Application:** Enter the name of the application in the field provided.

**Protocol:** Chose the right protocol TCP,UDP or Both. Set this to what the application requires.

**Source Net:** Forward only if sender matches this ip/net (example 192.168.1.0/24).

**Port from:** Enter the number of the external port (the port number seen by users on the Internet).

**IP Address:** Enter the IP Address of the PC running the application.

**Port to:** Enter the number of the internal port (the port number used by the application).

**Enable:** Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

### 3.3.6.2 Port Range Forward

Port Range Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the router will forward those requests to the appropriate PC. If you only want to forward a single port, see [Port Forwarding](#).

**Port Range Forward**

**Forwards**

Application	Start	End	Protocol	IP Address	Enable
web-tftp	800	8100	Both	192.168.1.16	<input checked="" type="checkbox"/>
game	9000	10000	Both	192.168.1.16	<input checked="" type="checkbox"/>

**Application:** Enter the name of the application in the field provided.

**Start:**Enter the number of the first port of the range you want to seen by users on the Internet and forwarded to your PC.

**End:** Enter the number of the last port of the range you want to seen by users on the Internet and forwarded to your PC.

**Protocol:** Chose the right protocol TCP,UDP or Both. Set this to what the application requires.

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 50 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735


**IP Address:** Enter the IP Address of the PC running the application.

**Enable:** Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

### 3.3.6.3 DMZ

The DMZ (DeMilitarized Zone) hosting feature allows one local user to be exposed to the Internet for use of a special-purpose service such as Internet gaming or videoconferencing. DMZ hosting forwards all the ports at the same time to one PC. The Port Forwarding feature is more secure because it only opens the ports you want to have opened, while DMZ hosting opens all the ports of one computer, exposing the computer so the Internet can see it.

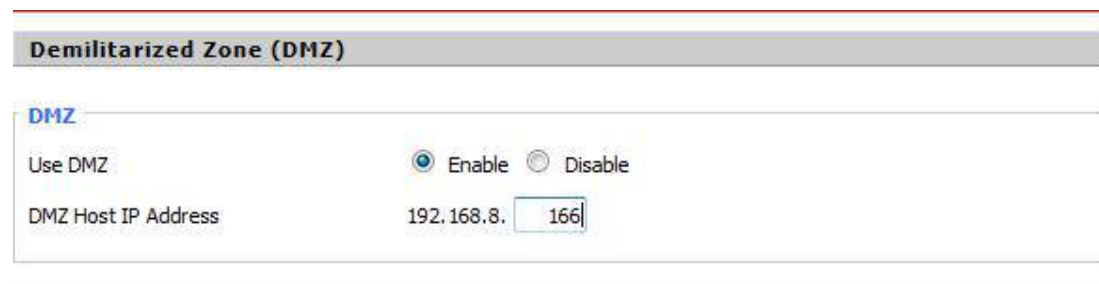

Any PC whose port is being forwarded must should have a new static IP address assigned to it because its IP address may change when using the DHCP function.

**DMZ Host IP Address:** To expose one PC to the Internet, select Enable and enter the computer's IP address in the DMZ Host IP Address field. To disable the DMZ, keep the default setting: Disable

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

## 3.3.7 QoS Setting

### 3.3.7.1 Basic

Bandwidth management prioritizes the traffic on your router. Interactive traffic (telephony, browsing, telnet, etc.) gets priority and bulk traffic (file transfer, P2P) gets low priority. The main goal is to allow both types to live side-by side without unimportant traffic disturbing more critical things. All of this is more or less automatic.

QoS allows control of the bandwidth allocation to different services, netmasks, MAC addresses and the four LAN ports.

**Main WAN QoS Settings**

Start QoS
☐ Enable
☒ Disable

Port
WAN

Packet Scheduler
HTB

Uplink (kbps)
0

Downlink (kbps)
0

**Bkup WAN QoS Settings**

Start QoS
☐ Enable
☒ Disable

Port
WAN

Packet Scheduler
HTB

Uplink (kbps)
0

Downlink (kbps)
0

**Uplink (kbps):** In order to use bandwidth management (QoS) you must enter bandwidth values for your uplink. These are generally 80% to 90% of your maximum bandwidth.

**Downlink (kbps) :** In order to use bandwidth management (QoS) you must enter bandwidth values for your downlink. These are generally 80% to 90% of your maximum bandwidth.

### 3.3.7.2 Classify

#### Netmask Priority

**Netmask Priority**

Delete	IP/Mask	Priority
<input type="checkbox"/>	192.168.1.1/24	Exempt
<input type="checkbox"/>	192.168.2.3/24	Standard
<input type="checkbox"/>	192.168.3.4/32	Express
<input type="checkbox"/>	192.168.4.5/32	Bulk

Add

You may specify priority for all traffic from a given IP address or IP Range.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

## 3.3.8 Applications

### 3.3.8.1 Serial Applications

There is a console port on Four-Faith router. Normally, this port is used to debug the router. This port can also be used as a serial port. The router has embedded a serial to TCP program. The data sent to the serial port is encapsulated by TCP/IP protocol stack and then is sent to the destination server. This function can work as a Four-Faith DTU (Data Terminal Unit). Please refer [www.four-faith.com](http://www.four-faith.com) for more information about this product.

Serial Applications
☒ Enable
☐ Disable

Baudrate
115200

Databit
8

Stopbit
1

Parity
None

Flow Control
None

Protocol
TCP(DTU)

Server Address
120.42.46.98

Server Port
55501

Device Number
12345678901

Device Id
12345678

Heartbeat Interval
60

**Baudrate:** Baud rate indicates the number of bytes per second transported by device, commonly used baud rate is 115200, 57600, 38400, 19200.

**Databit:** the data bits can be 4, 5, 6, 7, 8, constitute a character. The ASCII code is usually used. Starting from the most significant bit is transmitted,.

**Stopbit:** it marks the end of a character data. It is a high level of 1, 1.5, 2.

**Parity:** use a set of data to check the data error .

**Flow control:** including the hardware part and software part in two ways.

**Enable Serial TCP Function:** Enable the serial to TCP function

**Protocol Type:** The protocol type to transmit data.

UDP(DTU) – Data transmit with UDP protocol , work as a Four-Faith IP

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 53 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

MODEM device which has application protocol and hear beat mechanism.

Pure UDP -- Data transmit with standard UDP protocol.

TCP(DTU) -- Data transmit with TCP protocol , work as a Four-Faith P MODEM device which has application protocol and hear beat mechanism.

Pure TCP -- Data transmit with standard TCP protocol, router is the client.

TCP Server -- Data transmit with standard TCP protocol, router is the server.

TCST -- Data transmit with TCP protocol, Using a custom data

**Server Address:** The data service center's IP Address or domain name.

**Server Port:** The data service center's listening port.

**Device ID:** The router's identity ID.

**Device Number:** The router's phone number.

**Heartbeat Interval:** The time interval to send heart beat packet. This item is valid only when you choose UDP(DTU) or TCP(DTU) protocol type.

**TCP Server Listen Port:** This item is valid when Protocol Type is "TCP Server"

**Custom Heartbeat Packet :** This item is valid when Protocol Type is "TCST"

**Custom Registration Packets:** This item is valid when Protocol Type is "TCST"

## 3.3.9 Administration

### 3.3.9.1 Management

The Management screen allows you to change the router's settings. On this page you will find most of the configurable items of the router code.

**Router Password**

Router Username	<input type="password"/>
Router Password	<input type="password"/>
Re-enter to confirm	<input type="password"/>

The new password must not exceed 32 characters in length and must not include any spaces. Enter the new password a second time to confirm it.

**Note:**

Default username is admin.

It is strongly recommended that you change the factory default password of the router, which is admin. All users who try to access the router's web-based utility or Setup

Wizard will be prompted for the router's password.

## Web Access

This feature allows you to manage the router using either HTTP protocol or the HTTPS protocol. If you choose to disable this feature, a manual reboot will be required. You can also activate or not the router information web page. It's now possible to password protect this page (same username and password than above).

**Web Access**

Protocol	<input checked="" type="checkbox"/> HTTP <input type="checkbox"/> HTTPS
Auto-Refresh (in seconds)	<input type="text" value="3"/>
Enable Info Site	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Info Site Password Protection	<input type="checkbox"/> Enabled

**Protocol:** This feature allows you to manage the router using either HTTP protocol or the HTTPS protocol

**Auto-Refresh:** Adjusts the Web GUI automatic refresh interval. 0 disables this feature completely

**Enable Info Site:** Enable or disable the login system information page

**Info Site Password Protection:** Enable or disable the password protection feature of the system information page

**Remote Access**

Web GUI Management	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Use HTTPS	<input type="checkbox"/>
Web GUI Port	<input type="text" value="8080"/> (Default: 8080, Range: 1 - 65535)
SSH Management	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH Remote Port	<input type="text" value="22"/> (Default: 22, Range: 1 - 65535)
Telnet Management	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

**Remote Access:** This feature allows you to manage the router from a remote location, via the Internet. To disable this feature, keep the default setting, Disable. To enable this feature, select Enable, and use the specified port (default is 8080) on your PC to remotely manage the router. You must also change the router's default password to one of your own, if you haven't already.

To remotely manage the router, enter `http://xxx.xxx.xxx.xxx:8080` (the x's represent the router's Internet IP address, and 8080 represents the specified port) in your web browser's address field. You will be asked for the router's password.

If you use https you need to specify the url as `https://xxx.xxx.xxx.xxx:8080` (not all firmwares does support this without rebuilding with SSL support).

**SSH Management:** You can also enable SSH to remotely access the router by Secure Shell. Note that SSH daemon needs to be enable in Services page.

## Note:

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 55 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

If the Remote Router Access feature is enabled, anyone who knows the router's Internet IP address and password will be able to alter the router's settings.

**Telnet Management:** Enable or disable remote Telnet function

**Cron**

Cron ☒ Enable ☐ Disable

Additional Cron Jobs

**Cron:** The cron subsystem schedules execution of Linux commands. You'll need to use the command line or startup scripts to actually use this.

**Routing**

Routing ☒ Enable ☐ Disable

**Routing:** Routing enables the OSPF and RIP routing daemons if you have set up OSPF or RIP routing in the Advanced Routing page.

**Language Selection**

Language English

**Language:** Set up the router page shows the type of language, including simplified Chinese and English.

**IP Filter Settings (adjust these for P2P)**

TCP Congestion Control	<span>vegas</span>	
Maximum Ports	<input type="text" value="4096"/>	(Default: 4096, Range: 256 - 4096)
TCP Timeout (in seconds)	<input type="text" value="3600"/>	(Default: 3600, Range: 1 - 86400)
UDP Timeout (in seconds)	<input type="text" value="120"/>	(Default: 120, Range: 1 - 86400)

**IP Filter Settings (adjust these for P2P) :** If you have any peer-to-peer (P2P) applications running on your network please increase the maximum ports and lower the TCP/UDP timeouts. This is necessary to maintain router stability because peer-to-peer applications open many connections and don't close them properly. Consider using these:

**Maximum Ports:** 4096

**TCP Timeout:** 3600 sec

**UDP Timeout:** 120 sec

### 3.3.9.2 Keep Alive

#### Schedule Reboot

#### Schedule Reboot

Schedule Reboot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Interval (in seconds)	<input checked="" type="radio"/> <input type="text" value="3600"/>
At a set Time	<input type="radio"/> <input type="text" value="00"/> : <input type="text" value="00"/> <input type="text" value="Sunday"/>

**You can schedule regular reboots for the router :**

Regularly after xxx seconds.

At a specific date time each week or everyday.

#### Schedule Boot&Shutdown

##### Schedule Boot&Shutdown

Schedule Boot&Shutdown	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Match	<input checked="" type="radio"/> Day <input type="radio"/> Weekday <input type="radio"/> Days <input type="radio"/> Weekdays
Shutdown Time	<input type="text" value="00"/> : <input type="text" value="00"/>
Shutdown Date	<input type="text" value="*"/> - <input type="text" value="01"/> <input type="text" value="Sunday"/> - <input type="text" value="Sunday"/>
Boot Time	<input type="text" value="00"/> : <input type="text" value="00"/>
Boot Date	<input type="text" value="*"/> - <input type="text" value="01"/> <input type="text" value="Sunday"/> - <input type="text" value="Sunday"/>

The user can set the startup or shutdown time:

For example, the user want to set the start time at 8:07 and boot time at 9:07.

##### Schedule Boot&Shutdown

Schedule Boot&Shutdown	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Match	<input checked="" type="radio"/> Day <input type="radio"/> Weekday <input type="radio"/> Days <input type="radio"/> Weekdays
Shutdown Time	<input type="text" value="08"/> : <input type="text" value="07"/>
Shutdown Date	<input type="text" value="*"/> - <input type="text" value="01"/> <input type="text" value="Sunday"/> - <input type="text" value="Sunday"/>
Boot Time	<input type="text" value="09"/> : <input type="text" value="07"/>
Boot Date	<input type="text" value="*"/> - <input type="text" value="01"/> <input type="text" value="Sunday"/> - <input type="text" value="Sunday"/>

#### Note:

For date based reboots Cron must be activated. See Management for Cron activation.

### 3.3.9.3 Commands

**Commands:** You are able to run command lines directly via the Webinterface.

Command Shell

Commands

Run Commands

Save Startup

Save Shutdown

Save Firewall

Save Custom Script

**Run Command:** You can run command lines via the web interface. Fill the text area with your command and click Run Commands to submit.

**Startup:** You can save some command lines to be executed at startup's router. Fill the text area with commands (only one command by row) and click Save Startup.

**Shutdown:** You can save some command lines to be executed at shutdown's router. Fill the text area with commands (only one command by row) and click Save Shutdown.

**Firewall:** Each time the firewall is started, it can run some custom iptables instructions. Fill the text area with firewall's instructions (only one command by row) and click Save Firewall.

**Custom Script:** Custom script is stored in /tmp/custom.sh file. You can run it manually or use cron to call it. Fill the text area with script's instructions (only one command by row) and click Save Custom Script.

### 3.3.9.4 Factory Defaults

Factory Defaults

Reset router settings

Restore Factory Defaults

☐ Yes
☒ No

**Reset router settings:** Click the Yes button to reset all configuration settings to their default values. Then click the Apply Settings button.

**Note:**

Any settings you have saved will be lost when the default settings are restored. After restoring the router is accessible under the default IP address 192.168.1.1 and the default password admin.

### 3.3.9.5 Firmware Upgrade

### Firmware Upgrade

After flashing, reset to

Please select a file to upgrade

**Firmware Upgrade:** New firmware versions are posted at [www.four-faith.com](http://www.four-faith.com) and can be downloaded. If the Router is not experiencing difficulties, then there is no need to download a more recent firmware version, unless that version has a new feature that you want to use.

**Note:**

When you upgrade the Router's firmware, you lose its configuration settings, so make sure you write down the Router settings before you upgrade its firmware.

**To upgrade the Router's firmware:**

1. Download the firmware upgrade file from the website.
2. Click the Browse... button and chose the firmware upgrade file.
3. Click the Upgrade button and wait until the upgrade is finished.

**Note:**

Upgrading firmware may take a few minutes.

Do not turn off the power or press the reset button!

**After flashing, reset to:** If you want to reset the router to the default settings for the firmware version you are upgrading to, click the Firmware Defaults option.

### 3.3.9.6 Backup

**Backup Configuration**

**Backup Settings**

Click the "Backup" button to download the configuration backup file to your computer.

**Restore Configuration**

**Restore Settings**

Please select a file to restore

**WARNING**

Only upload files backed up using this firmware and from the same model of router.  
Do not upload any files that were not created by this interface!

**Backup Settings:** You may backup your current configuration in case you need to reset the router back to its factory default settings. Click the Backup button to backup your current configuration.

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 59 of 72

Add: J1-J3, 3<sup>rd</sup> Floor, No. 44, GuanRi Road, Software Park, Xiamen 361008, China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

**Restore Settings :** Click the Browse... button to browse for a configuration file that is currently saved on your PC. Click the Restore button to overwrite all current configurations with the ones in the configuration file.

**Note:**

Only restore configurations with files backed up using the same firmware and the same model of router.

## 3.3.10 Status

### 3.3.10.1 Router

System	
Router Name	Four-Faith
Router Model	Four-Faith Router
Firmware Version	FXXXX v1.0 (01/10/12) std - build 94
MAC Address	<u>00:AA:BB:CC:DD:44</u>
Host Name	
WAN Domain Name	
LAN Domain Name	
Current Time	Sat, 01 Jan 2000 00:51:29
Uptime	51 min,

**Router Name:** name of the router, setting→basic setting to modify

**Router Model:** model of the router, unavailable to modify

**Firmware Version:** software version information

**MAC Address:** MAC address of WAN, setting→Clone MAC Address to modify

**Host Name:** host name of the router, setting→basic setting to modify

**WAN Domain Name:** domain name of WAN, setting→basic setting to modify

**LAN Domain Name:** domain name of LAN, unavailable to modify

**Current Time:** local time of the system

**Uptime:** operating uptime as long as the system is powered on



**Total Available:** the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

**Free:** free memory, the router will reboot if the memory is less than 500kB

**Used:** used memory, total available memory minus free memory

**Buffers:** used memory for buffers,

**Cached:** the memory used by high-speed cache memory

**Active:** active use of buffer or cache memory page file size

**Inactive:** not often used in a buffer or cache memory page file size



**IP Filter Maximum Ports:** preset is 4096, available to re-management

**Active IP Connections:** real time monitor active IP connections of the system, click to see the table as blow:

Active IP Connections

53

No.	Protocol	Timeout (s)	Source Address	Remote Address	Service Name	Status
1	TCP	60	192.168.1.120	192.168.1.1	80	TIME_WAIT
2	TCP	30	192.168.1.120	192.168.1.1	80	TIME_WAIT
3	TCP	65	192.168.1.120	192.168.1.1	80	TIME_WAIT
4	TCP	96	192.168.1.120	192.168.1.1	80	TIME_WAIT
5	TCP	99	192.168.1.120	192.168.1.1	80	TIME_WAIT
6	TCP	70	192.168.1.120	192.168.1.1	80	TIME_WAIT
7	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT
8	TCP	115	192.168.1.120	192.168.1.1	80	TIME_WAIT
9	TCP	84	192.168.1.120	192.168.1.1	80	TIME_WAIT
10	TCP	3599	192.168.1.120	192.168.1.1	80	ESTABLISHED
11	TCP	3599	192.168.1.120	192.168.1.1	80	ESTABLISHED
12	TCP	108	192.168.1.120	192.168.1.1	80	TIME_WAIT
13	TCP	3600	192.168.1.120	192.168.1.1	80	ESTABLISHED
14	TCP	93	192.168.1.120	192.168.1.1	80	TIME_WAIT
15	TCP	102	192.168.1.120	192.168.1.1	80	TIME_WAIT
16	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT
17	TCP	3599	192.168.1.120	192.168.1.1	80	ESTABLISHED
18	TCP	15	192.168.1.120	192.168.1.1	80	TIME_WAIT
19	TCP	25	192.168.1.120	192.168.1.1	80	TIME_WAIT
20	TCP	90	192.168.1.120	192.168.1.1	80	TIME_WAIT
21	UDP	26	192.168.8.119	255.255.255.255	1947	UNREPLIED
22	TCP	77	192.168.1.120	192.168.1.1	80	TIME_WAIT
23	TCP	35	192.168.1.120	192.168.1.1	80	TIME_WAIT
24	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT
25	TCP	40	192.168.1.120	192.168.1.1	80	TIME_WAIT
26	TCP	3599	192.168.1.120	192.168.1.1	80	ESTABLISHED
27	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT
28	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT
29	TCP	4	192.168.1.120	192.168.1.1	80	TIME_WAIT
30	UDP	31	192.168.8.160	224.0.0.1	9166	UNREPLIED
31	TCP	74	192.168.1.120	192.168.1.1	80	TIME_WAIT

**Active IP Connections:** total active IP connections

**Protocol:** connection protocol

**Timeouts:** connection timeouts, unit is second

**Source Address:** source IP address

**Remote Address:** remote IP address

**Service Name:** connecting service port

**Status:** displayed status

### 3.3.10.2 WAN

Connection Type 3G/UMTS

**Connection Type:** disabled, 3G/UMTS

Connection Uptime 0:28:24

**Connection Uptime:** connecting uptime; If disconnect, display Not available

IP Address	0.0.0.0
Subnet Mask	0.0.0.0
Gateway	0.0.0.0
DNS 1	
DNS 2	
DNS 3	

**IP Address:** IP address of router WAN

**Subnet Mask:** subnet mask of router WAN

**Gateway:** the gateway of router WAN

**DNS1, DNS2, DNS3:** DNS1/DNS2/DNS3 of router WAN

Login Status	Disconnected	<input type="button" value="Connect"/>
--------------	--------------	--

**Login Status:** connection status of WAN

**Disconnection:** disconnect

**Connection:** connect

Module Type	ZTE-EVDO MODULE
	
Signal Status	-79 dBm
Network	CDMA/HDR

**Module Type:** module type in 3G/UMTS way


**Signal Status:** signal intensity of the module in 3G/UMTS way

**Network:** network type of the module in 3G/UMTS way

#### Total Traffic

Incoming (MBytes)	0
Outgoing (MBytes)	0

#### Traffic by Month

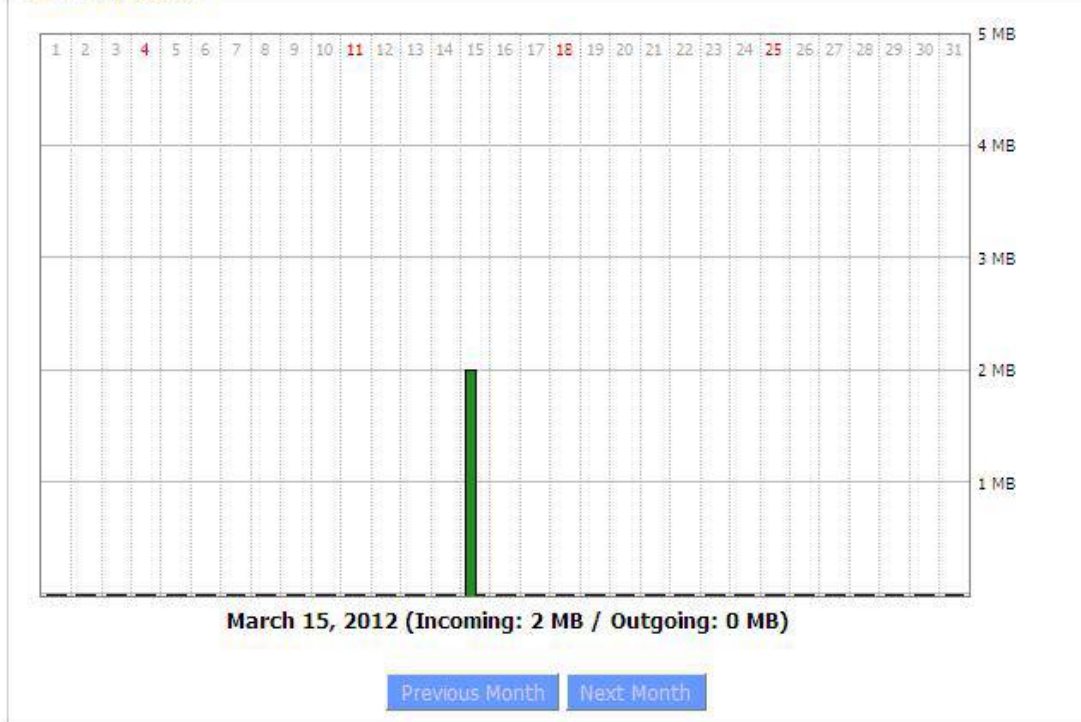

**Total Flow:** flow from power-off last time until now statistics, download and upload direction

**Monthly Flow:** the flow of a month, unit is MB

**Last Month:** the flow of last month

**Next Month:** the flow of next month

#### Data Administration

Backup	Restore	Delete
--------	---------	--------

**Backup:** backup data administration

**Restore:** restore data administration

**Delete:** delete data administration

### 3.3.10.3 LAN

### LAN Status

MAC Address	00:0C:43:30:52:77
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Gateway	0.0.0.0
Local DNS	0.0.0.0

**MAC Address:** MAC Address of the LAN port ethernet

**IP Address:** IP Address of the LAN port

**Subnet Mask:** Subnet Mask of the LAN port

**Gateway:** Gateway of the LAN port

**Local DNS:** DNS of the LAN port

### Active Clients

Host Name	IP Address	MAC Address	Conn. Count	Ratio [4096]
*	192.168.1.120	10:78:D2:98:C9:46	57	1%

**Host Name:** host name of LAN client

**IP Address:** IP address of the client

**MAC Address:** MAC address of the client

**Conn. Count:** connection count caused by the client

**Ratio:** the ratio of 4096 connection

### Dynamic Host Configuration Protocol

#### DHCP Status

DHCP Server	Enabled
DHCP Daemon	uDHCPd
Start IP Address	192.168.1.100
End IP Address	192.168.1.149
Client Lease Time	1440 minutes

**DHCP Server:** enable or disable the router work as a DHCP server

**DHCP Daemon:** the agreement allocated using DHCP including DNSMasq and uDHCPd

**Starting IP Address:** the starting IP Address of the DHCP server's Address pool

**Ending IP Address:** the ending IP Address of the DHCP server's Address pool

**Client Lease Time:** the lease time of DHCP client

#### DHCP Clients

Host Name	IP Address	MAC Address	Client Lease Time	Delete
PC-201011161332	192.168.1.142	00:21:5C:33:4D:29	1 day 00:00:00	
jack-lincw	192.168.1.117	44:37:E6:3F:45:54	1 day 00:00:00	
*	192.168.1.149	00:0C:E7:00:00:00	1 day 00:00:00	

**Host Name:** host name of LAN client

**IP Address:** IP address of the client

**MAC Address:** MAC address of the client

**Expires:** the expiry the client rents the IP address

#### Connected PPPOE Clients

Interface	User Name	Local IP	Delete
ppp0	hometest	192.168.10.10	

**Interface:** the interface assigned by dial-up system

**User Name:** user name of PPPoE client

**Local IP:** IP address assigned by PPPoE client

**Delete:** click to delete PPPoE client

#### Connected L2TP Server

Interface	Local IP	Remote IP	Delete
ppp0	172.168.8.2	172.168.8.1	

**Interface:** the interface assigned by dial-up system

**Local IP:** tunnel IP address of local L2TP

**Remote IP:** tunnel IP address of L2TP server

**Delete:** click to disconnect L2TP

#### Connected L2TP Clients

Interface	User Name	Local IP	Remote IP	Delete
ppp1	hometest	192.168.50.2	120.42.46.98	

**Interface:** the interface assigned by dial-up system

**User Name:** user name of the client

**Local IP:** tunnel IP address of L2TP client

**Remote IP:** IP address of L2TP client

**Delete:** click to delete L2TP client

#### Connected PPTP Server

Interface	Local IP	Remote IP	Delete
ppp0	172.168.8.2	172.168.8.1	

**Interface:** the interface assigned by dial-up system

**Local IP:** tunnel IP address of local PPTP

**Remote IP:** tunnel IP address of PPTP server

**Delete:** click to disconnect PPTP

#### Connected PPTP Clients

Interface	User Name	Local IP	Remote IP	Delete
ppp1	hometest	192.168.5.1	120.42.46.98	

**Interface:** the interface assigned by dial-up system


**User Name:** user name of the client

**Local IP:** tunnel IP address of PPTP client

**Remote IP:** IP address of PPTP client

**Delete:** click to delete PPTP client


### 3.3.10.4 Bandwidth

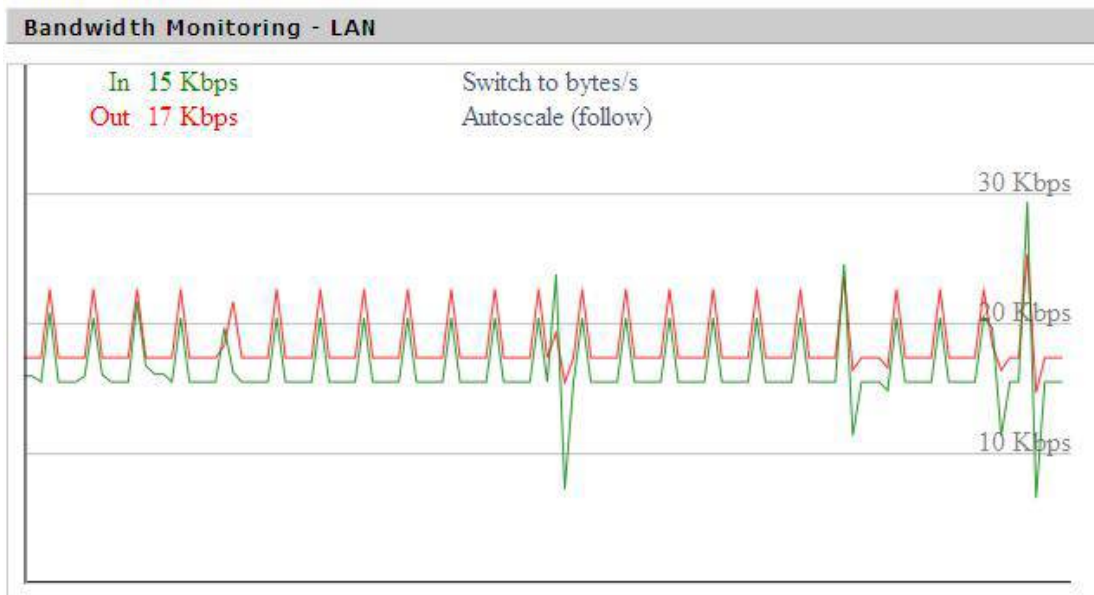

Bandwidth Monitoring-LAN Graph

**abscissa axis:** time


**vertical axis:** speed rate

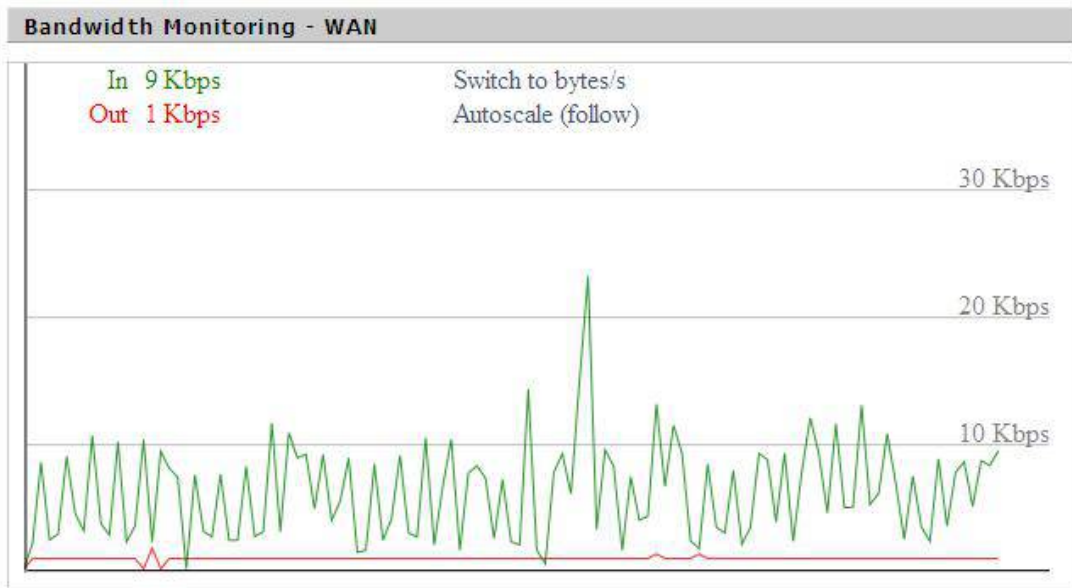

Bandwidth Monitoring-WAN Graph

**abscissa axis:** time

**vertical axis:** speed rate

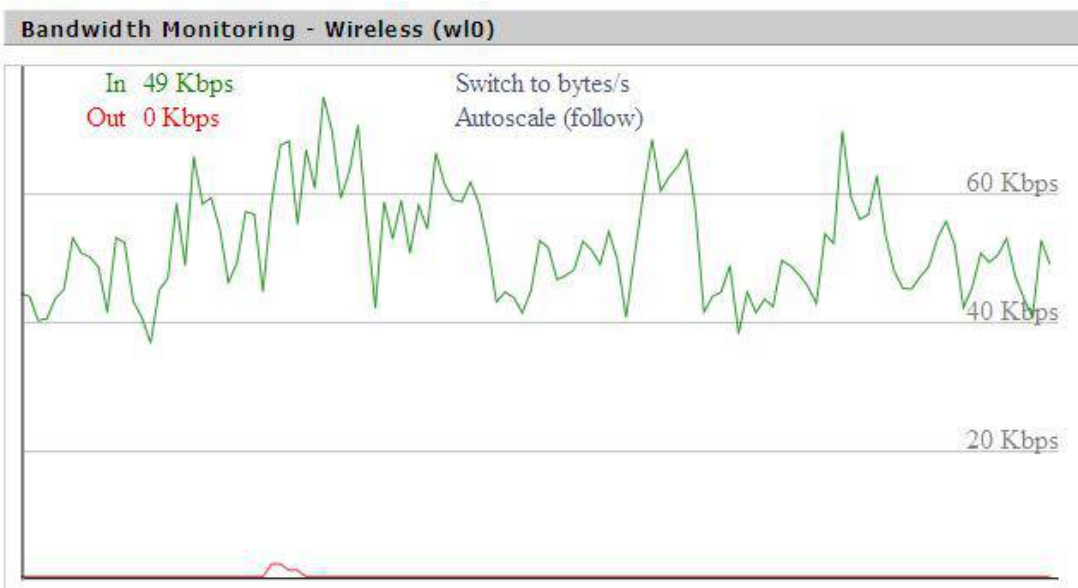

Bandwidth Monitoring-Wireless (W10) Graph

**abscissa axis:** time

**vertical axis:** speed rate

### 3.3.10.5 Sys-Info

Router	
Router Name	Router
Router Model	Four-Faith Router
LAN MAC	00:0C:43:3F:05:0B
WAN MAC	00:0C:43:3F:05:0B
WAN IP	0.0.0.0
LAN IP	192.168.1.1

**Router Name:** the name of the router

**Router Model:** the model of the router

**LAN MAC:** MAC address of LAN port

**WAN MAC:** MAC address of WAN port

**WAN IP:** IP address of WAN port

**LAN IP:** IP address of LAN port

Services	
DHCP Server	Enabled
ff-radauth	Disabled
USB Support	Disabled

**DHCP Server:** enabled or disabled

**ff-radauth:** enabled or disabled

**USB Support:** enabled or disabled

Memory	
Total Available	122.3 MB / 128.0 MB
Free	93.9 MB / 122.3 MB
Used	28.4 MB / 122.3 MB
Buffers	3.1 MB / 28.4 MB
Cached	10.4 MB / 28.4 MB
Active	9.6 MB / 28.4 MB
Inactive	6.2 MB / 28.4 MB

**Total Available:** the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

**Free:** free memory, the router will reboot if the memory is less than 500kB

**Used:** used memory, total available memory minus free memory

**Buffers:** used memory for buffers, total available memory minus allocated memory

**Cached:** the memory used by high-speed cache memory

**Active:** Active use of buffer or cache memory page file size

**Inactive:** Not often used in a buffer or cache memory page file size

DHCP			
DHCP Clients			
Host Name	IP Address	MAC Address	Expires
*	192.168.1.143	xx:xx:xx:xx:DD:45	1 day 00:00:00
four-488e1df5fa	192.168.1.125	xx:xx:xx:xx:D8:F7	1 day 00:00:00
Mycenae-PC	192.168.1.116	xx:xx:xx:xx:5E:30	1 day 00:00:00

**Host Name:** host name of LAN client

**IP Address:** IP address of the client


**MAC Address:** MAC address of the client

**Expires:** the expiry the client rents the IP address

## Appendix

The following steps describe how to setup Windows XP Hyper Terminal.

1. Press "Start"→"Programs"→"Accessories"→"Communications"→"Hyper Terminal"

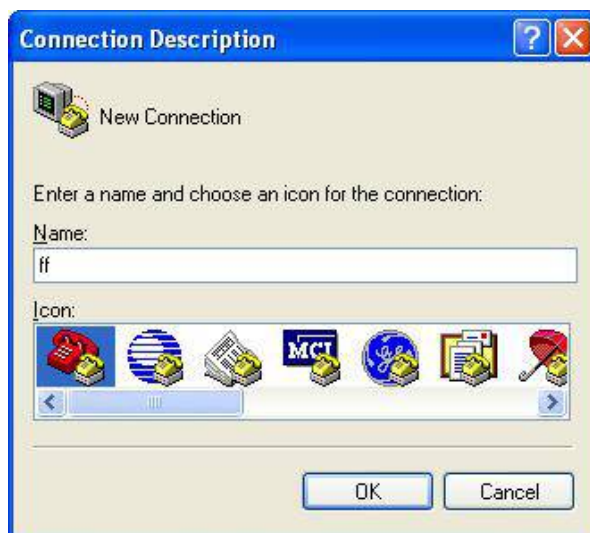

2. Input connection name, choose "OK"

3. Choose the correct COM port which connects to modem, choose "OK"



4. Configure the serial port parameters as following, choose "OK"


Bits per second: 115200

Data bits: 8

Parity: None

Stop bits: 1

Flow control: None

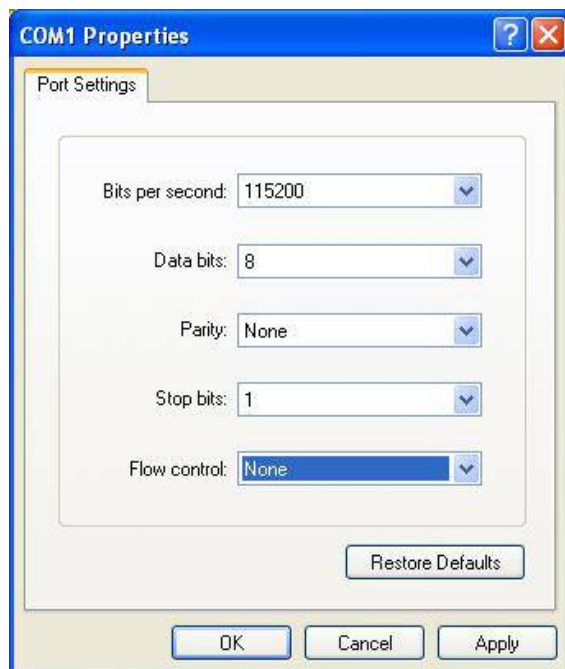


5. Complete Hyper Terminal operation, It runs as following

**Xiamen Four-Faith Communication Technology Co.,Ltd.**

Page 71 of 72

Add: J1-J3,3<sup>rd</sup>Floor,No.44,GuanRiRoad,SoftWare Park,XiaMen .361008.China

http: //www.fourfaith.com Tel: +86 592-6300326 6300325 6300324 Fax: +86 592-5912735

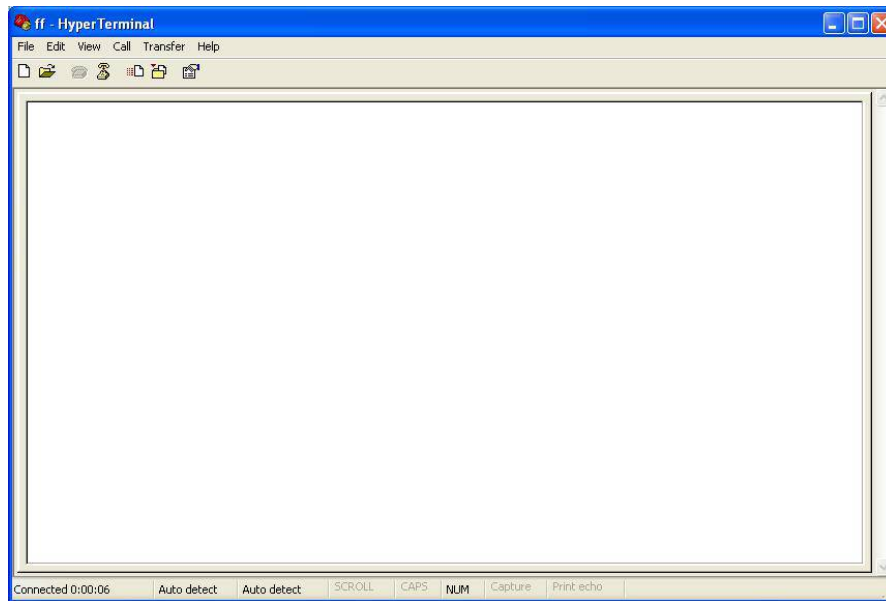

**Note:** If the user is using the win7 system, you can download a win7 super terminal on the internet. Universal serial interface or other similar software.