

# User Manual

Revision 1.001

English

## SNMP Manager / MQTT - Converters

(Order Code: HD67953-B2)

For Website information:

[www.adfweb.com?Product=HD67953-B2](http://www.adfweb.com?Product=HD67953-B2)

For Price information:

[www.adfweb.com?Price=HD67953-B2](http://www.adfweb.com?Price=HD67953-B2)

### Benefits and Main Features:

- ⊕ Power Supply 18...35V DC and 8...24 V AC
- ⊕ Temperature range: -40°C/+85°C (-40°F/+185°F)



For others MQTT products, see also the following links:

### Converter MQTT to

[www.adfweb.com?Product=HD67930](http://www.adfweb.com?Product=HD67930)  
[www.adfweb.com?Product=HD67931](http://www.adfweb.com?Product=HD67931)  
[www.adfweb.com?Product=HD67932](http://www.adfweb.com?Product=HD67932)  
[www.adfweb.com?Product=HD67933](http://www.adfweb.com?Product=HD67933)  
[www.adfweb.com?Product=HD67934](http://www.adfweb.com?Product=HD67934)  
[www.adfweb.com?Product=HD67935](http://www.adfweb.com?Product=HD67935)  
[www.adfweb.com?Product=HD67936](http://www.adfweb.com?Product=HD67936)  
[www.adfweb.com?Product=HD67937](http://www.adfweb.com?Product=HD67937)  
[www.adfweb.com?Product=HD67938](http://www.adfweb.com?Product=HD67938)  
[www.adfweb.com?Product=HD67939](http://www.adfweb.com?Product=HD67939)  
[www.adfweb.com?Product=HD67940](http://www.adfweb.com?Product=HD67940)  
[www.adfweb.com?Product=HD67941](http://www.adfweb.com?Product=HD67941)  
[www.adfweb.com?Product=HD67942](http://www.adfweb.com?Product=HD67942)  
[www.adfweb.com?Product=HD67943](http://www.adfweb.com?Product=HD67943)  
[www.adfweb.com?Product=HD67944](http://www.adfweb.com?Product=HD67944)  
[www.adfweb.com?Product=HD67945](http://www.adfweb.com?Product=HD67945)  
[www.adfweb.com?Product=HD67946](http://www.adfweb.com?Product=HD67946)  
[www.adfweb.com?Product=HD67947](http://www.adfweb.com?Product=HD67947)  
[www.adfweb.com?Product=HD67948](http://www.adfweb.com?Product=HD67948)  
[www.adfweb.com?Product=HD67949](http://www.adfweb.com?Product=HD67949)  
[www.adfweb.com?Product=HD67950](http://www.adfweb.com?Product=HD67950)  
[www.adfweb.com?Product=HD67951](http://www.adfweb.com?Product=HD67951)  
[www.adfweb.com?Product=HD67952](http://www.adfweb.com?Product=HD67952)  
[www.adfweb.com?Product=HD67954](http://www.adfweb.com?Product=HD67954)

**(Ethernet)**  
**(M-Bus)**  
**(Serial)**  
**(Modbus Master)**  
**(Modbus Slave)**  
**(Modbus TCP Master)**  
**(Modbus TCP Slave)**  
**(BACnet Master)**  
**(BACnet Slave)**  
**(CAN)**  
**(CANopen)**  
**(DALI)**  
**(DeviceNet Master)**  
**(DeviceNet Slave)**  
**(DMX)**  
**(EtherNet/IP)**  
**(J1939)**  
**(KNX)**  
**(NMEA 0183)**  
**(NMEA 2000)**  
**(PROFIBUS Master)**  
**(PROFIBUS Slave)**  
**(PROFINET)**  
**(SNMP Agent)**

Do you have an your customer protocol?

[www.adfweb.com?Product=HD67003](http://www.adfweb.com?Product=HD67003)

Do you need to choose a device? do you want help?

[www.adfweb.com?Cmd=helpme](http://www.adfweb.com?Cmd=helpme)



User Manual

## INDEX:

	Page
INDEX	2
UPDATED DOCUMENTATION	2
REVISION LIST	2
WARNING	2
TRADEMARKS	2
SECURITY ALERT	3
EXAMPLE OF CONNECTION	4
CONNECTION SCHEME	5
CHARACTERISTICS	6
CONFIGURATION	6
POWER SUPPLY	7
FUNCTION MODES	8
LEDS	9
ETHERNET	10
USE OF COMPOSITOR HD67953	11
NEW CONFIGURATION / OPEN CONFIGURATION	12
SOFTWARE OPTIONS	13
SET COMMUNICATION	15
MQTT SET TOPIC	21
SNMP MANAGER	23
UPDATE DEVICE	25
TEMPLATE STRING: DEFINITION OF MQTT PAYLOAD	27
MECHANICAL DIMENSIONS	28
ORDERING INFORMATIONS	29
ACCESSORIES	29
DISCLAIMER	30
OTHER REGULATIONS AND STANDARDS	30
WARRANTIES AND TECHNICAL SUPPORT	31
RETURN POLICY	31

## UPDATED DOCUMENTATION:

Dear customer, we thank you for your attention and we remind you that you need to check that the following document is:

- ✚ Updated
- ✚ Related to the product you own

To obtain the most recently updated document, note the “document code” that appears at the top right-hand corner of each page of this document.

With this “Document Code” go to web page [www.adfweb.com/download/](http://www.adfweb.com/download/) and search for the corresponding code on the page. Click on the proper “Document Code” and download the updates.

## REVISION LIST:

Revision	Date	Author	Chapter	Description
1.000	05/12/2017	Ff	All	First release version
1.001	26/06/2024	Ln	All	Revision

## WARNING:

ADFweb.com reserves the right to change information in this manual about our product without warning.

ADFweb.com is not responsible for any error this manual may contain.

## TRADEMARKS:

All trademarks mentioned in this document belong to their respective owners.

**SECURITY ALERT:****GENERAL INFORMATION**

To ensure safe operation, the device must be operated according to the instructions in the manual. When using the device, legal and safety regulation are required for each individual application. The same applies also when using accessories.

**INTENDED USE**

Machines and systems must be designed so the faulty conditions do not lead to a dangerous situation for the operator (i.e. independent limit switches, mechanical interlocks, etc.).

**QUALIFIED PERSONNEL**

The device can be used only by qualified personnel, strictly in accordance with the specifications. Qualified personnel are persons who are familiar with the installation, assembly, commissioning and operation of this equipment and who have appropriate qualifications for their job.

**RESIDUAL RISKS**

The device is state-of-the-art and is safe. The instruments can represent a potential hazard if they are inappropriately installed and operated by untrained personnel. These instructions refer to residual risks with the following symbol:




This symbol indicates that non-observance of the safety instructions is a danger for people that could lead to serious injury or death and / or the possibility of damage.

**CE CONFORMITY**

The declaration is made by our company. You can send an email to [support@adfweb.com](mailto:support@adfweb.com) or give us a call if you need it.

## EXAMPLE OF CONNECTION:

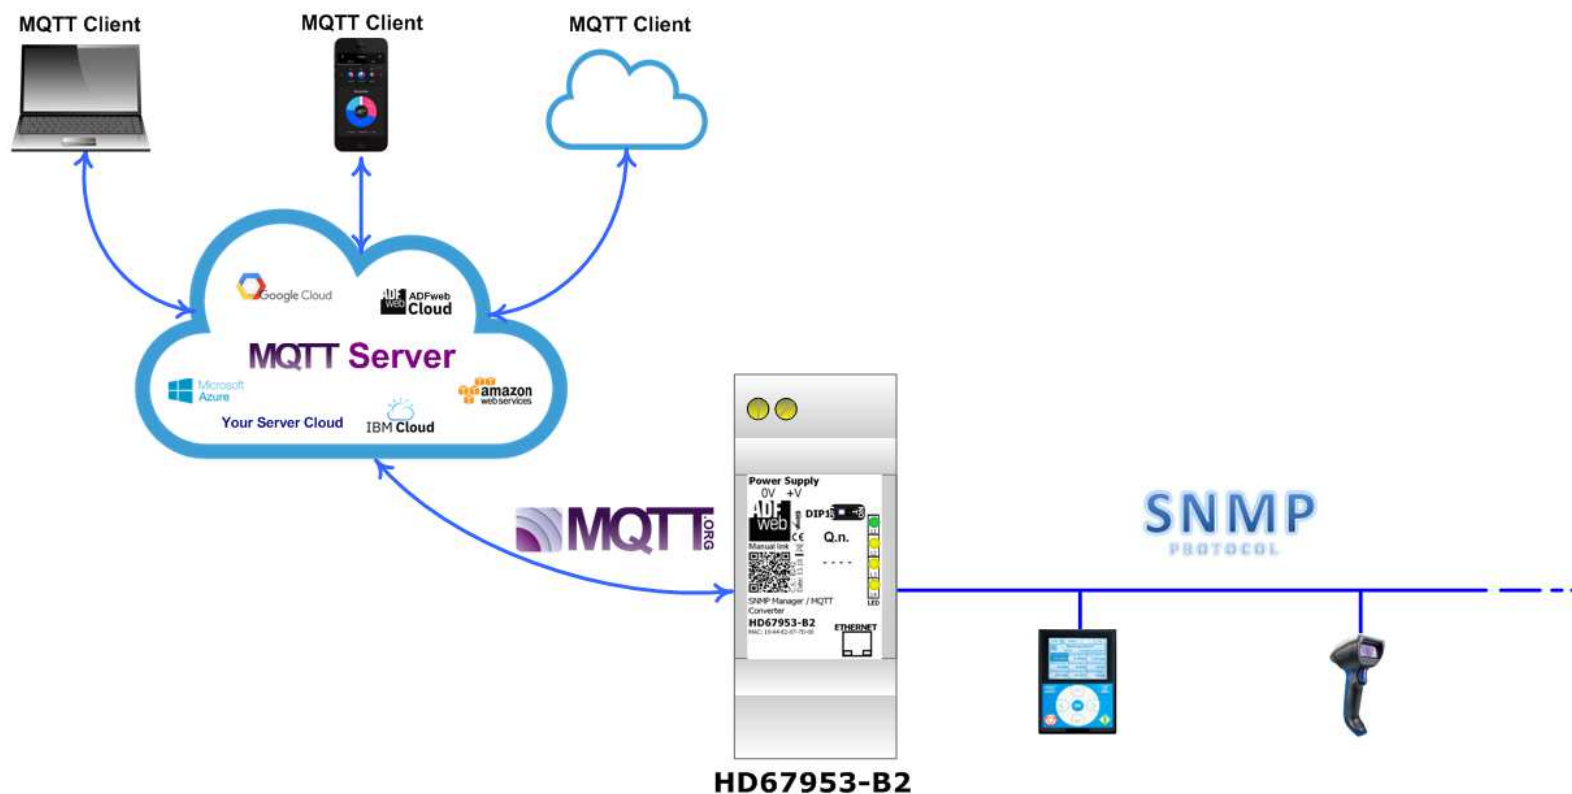

## CONNECTION SCHEME:

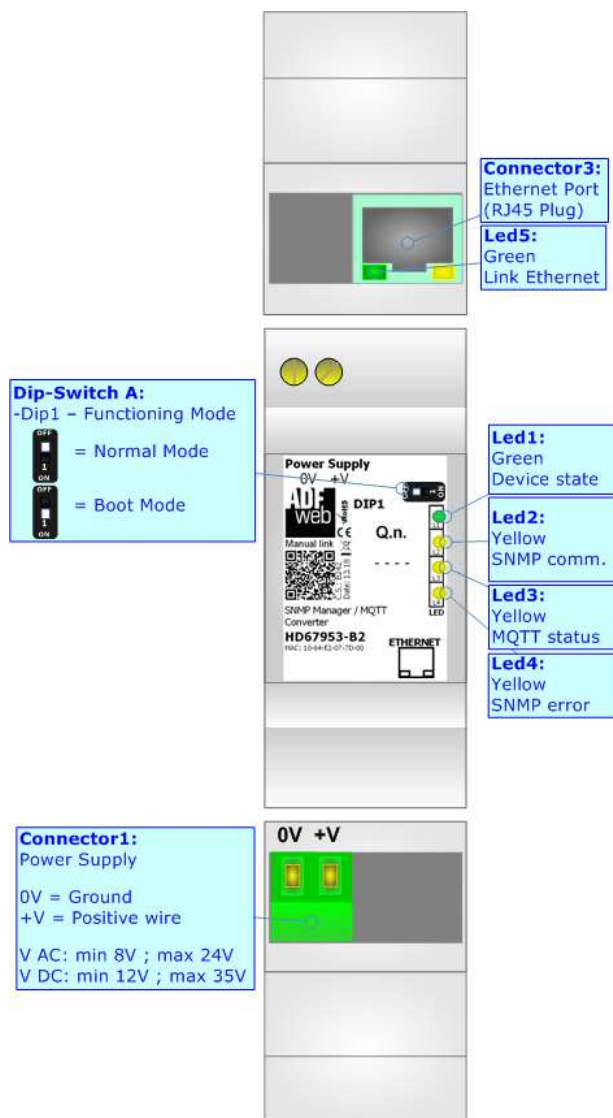


Figure 1: Connection scheme for HD67953-B2

**CHARACTERISTICS:**

The HD67953-B2 is a SNMP Manager / MQTT Converters.

It allows the following characteristics:

- Mountable on 35mm Rail DIN;
- Wide power supply input range: 18...35V DC and 8...24V AC;
- Wide temperature range: -40°C / +85°C [-40°F / +185°F].



**CONFIGURATION:**

You need Compositor SW67953 software on your PC in order to perform the following:

- Define the parameter of MQTT;
- Define the parameter of SNMP line;
- Define the MQTT topics to be published/subscribed in the MQTT Server;
- Define the list of SNMP OIDs to read/write
- Update the device.


## POWER SUPPLY:

The devices can be powered at 8...24V AC and 12...35V DC. For more details see the two tables below.


VAC 		VDC 	
Vmin	Vmax	Vmin	Vmax
8V	24V	12V	35V

Consumption at 24V DC:

Device	Consumption [W/VA]
HD67953-B2	3.5

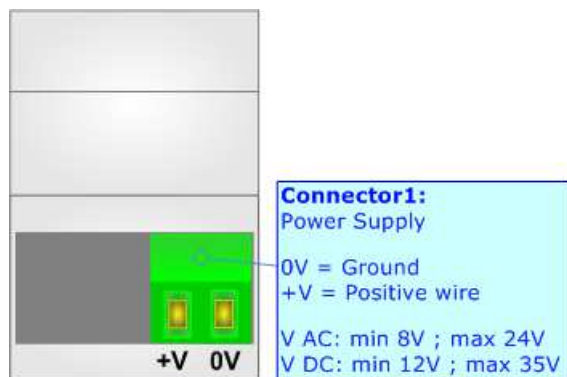

**Caution: Not reverse the polarity power**

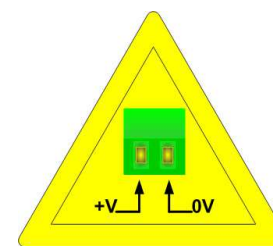

HD67953-B2


**FUNCTION MODES:**

The device has got two functions mode depending of the position of the 'Dip1 of Dip-Switch A':

- The first, with 'Dip1 of Dip-Switch A' at "OFF" position, is used for the normal working of the device.
- The second, with 'Dip1 of Dip-Switch A' at "ON" position, is used for upload the Project and/or Firmware.

For the operations to follow for the updating, see 'UPDATE DEVICE' section.

According to the functioning mode, the LEDs will have specifics functions, see 'LEDS' section.

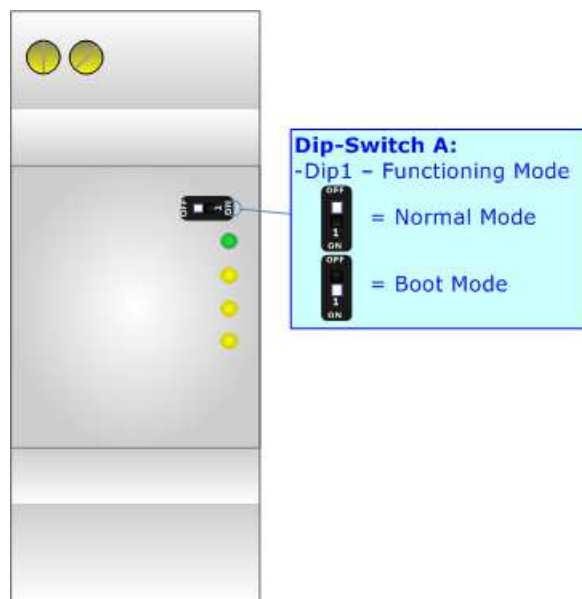




## LEDS:

The device has got five LEDs that are used to give information of the functioning status.  
The various meanings of the LEDs are described in the table below.


LED	Normal Mode	Boot Mode
1: Device State (green)	Blinks slowly ( $\sim 1\text{Hz}$ )	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (<math>\sim 0.5\text{Hz}</math>):</b> update in progress
2: SNMP Manager communication (yellow)	Blinks when SNMP Manager communication is running	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (<math>\sim 0.5\text{Hz}</math>):</b> update in progress
3: MQTT status (yellow)	<b>ON:</b> MQTT not connected <b>OFF:</b> MQTT connected <b>Blinking:</b> MQTT communication	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (<math>\sim 0.5\text{Hz}</math>):</b> update in progress
4: SNMP error (yellow)	<b>ON:</b> at least one SNMP request has not correct response <b>OFF:</b> no errors	<b>Blinks quickly:</b> Boot state <b>Blinks very slowly (<math>\sim 0.5\text{Hz}</math>):</b> update in progress
5: Ethernet Link (green)	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected	<b>ON:</b> Ethernet cable connected <b>OFF:</b> Ethernet cable disconnected

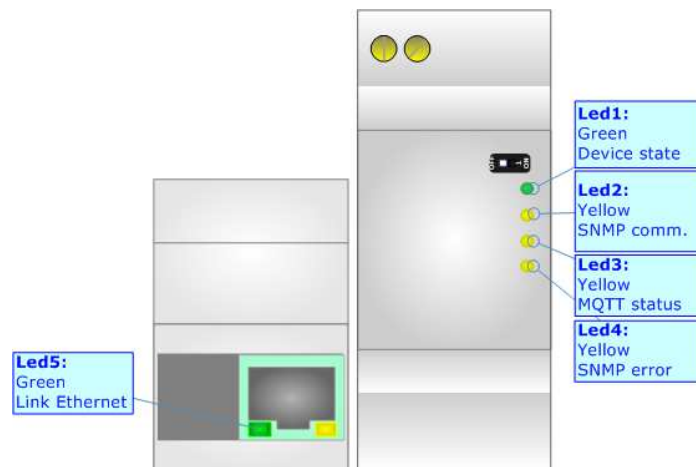

**ETHERNET:**

The Ethernet port is used for programming the device and for MQTT and SNMP communication.

The Ethernet connection must be made using Connector2 of HD67953-B2 with at least a Category 5E cable. The maximum length of the cable should not exceed 100m. The cable has to conform to the T568 norms relative to connections in cat.5 up to 100 Mbps. To connect the device to an Hub/Switch is recommended the use of a straight cable, to connect the device to a PC is recommended the use of a cross cable.

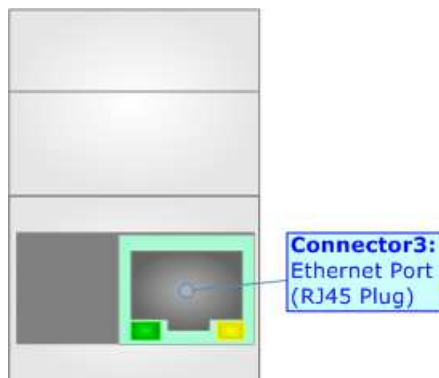

**USE OF COMPOSITOR SW67953:**

To configure the Converter, use the available software that runs with Windows called HD67953. It is downloadable on the site [www.adfweb.com](http://www.adfweb.com) and its operation is described in this document. The software works with MS Windows (XP, Vista, Seven, 8, 10 or 11; 32/64bit).

When launching the HD67953, the window below appears (Fig. 2).

**Note:**

It is necessary to have installed .Net Framework 4.


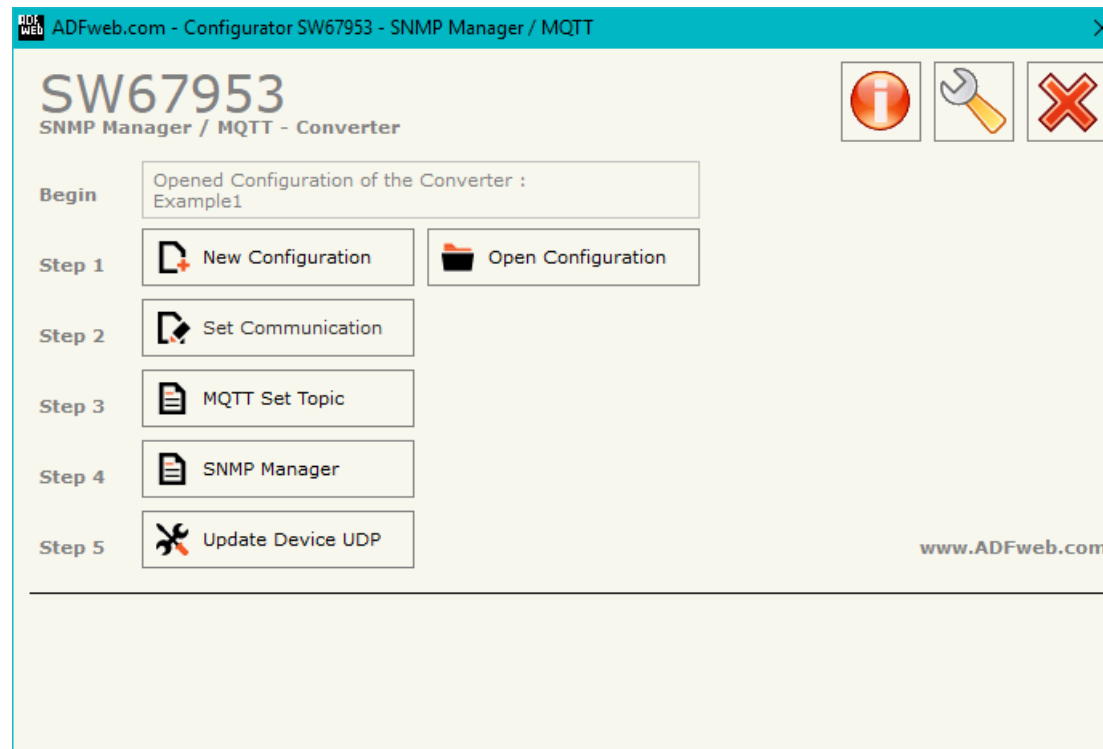


Figure 2: Main window for SW67953


**NEW CONFIGURATION / OPEN CONFIGURATION:**

The “**New Configuration**” button creates the folder which contains the entire device’s configuration.

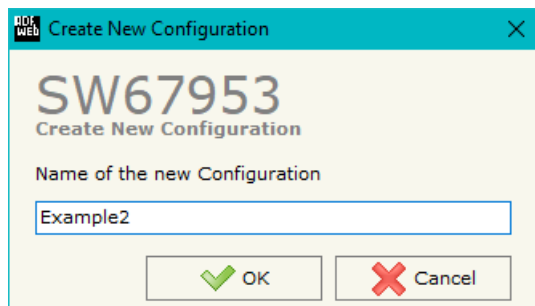


A device’s configuration can also be imported or exported:


- To clone the configurations of a Programmable “SNMP Manager / MQTT - Converter” in order to configure another device in the same manner, it is necessary to maintain the folder and all its contents;
- To clone a project in order to obtain a different version of the project, it is sufficient to duplicate the project folder with another name and open the new folder with the button “**Open Configuration**”.

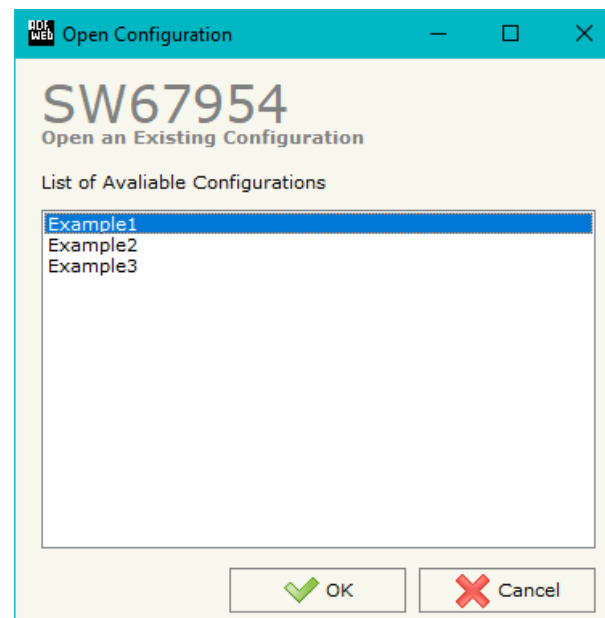


**SOFTWARE OPTIONS:**

By pressing the “**Settings**” () button there is the possibility to change the language of the software and check the updatings for the compositor.

In the section “Language” it is possible to change the language of the software.

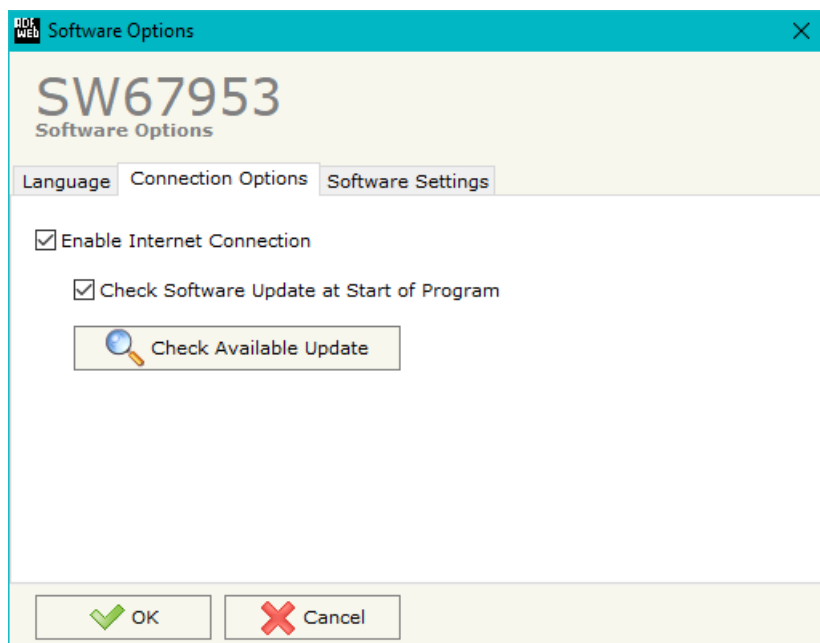

In the section “Connection Options”, it is possible to check if there are some updatings of the software compositor in ADFweb.com website. Checking the option “**Check Software Update at Start of Program**”, the HD67953 check automatically if there are updatings when it is launched.

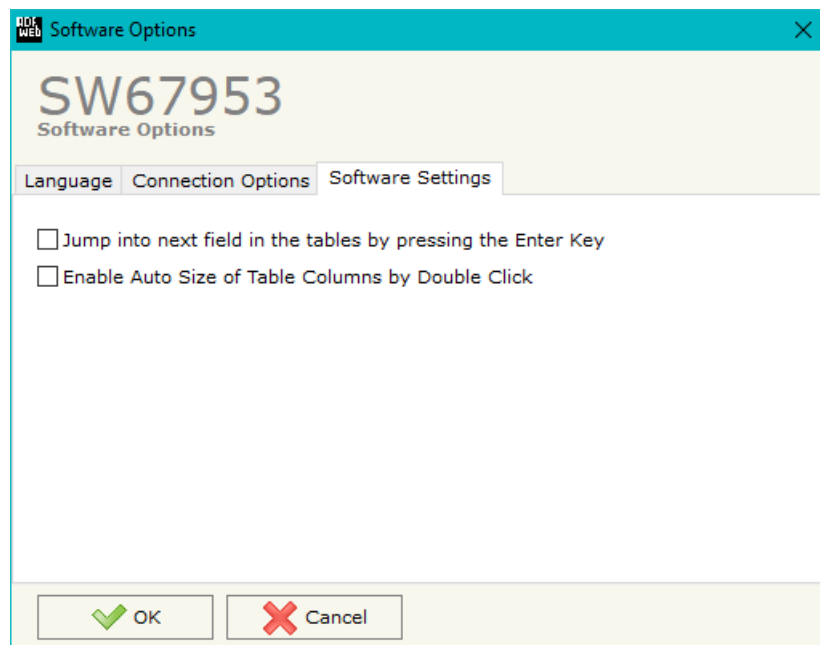

In the section “Software Settings”, it is possible to enable/disable some keyboard’s commands for an easier navigation inside the tables contained in the different sections of the software.

**SET COMMUNICATION:**

By Pressing the "**Set Communication**" button from the main window for HD67953 (Fig. 2) the window "Set Communication" appears (Fig. 3).

The window is divided in different sections in order to define the different parameters of the converter:

- Select Device
- Ethernet Connection
- SNMP Manager
- MQTT
- Ethernet
- TLS (Transport Layer Security)
- NTP (Network Time Protocol)
- Wi-Fi
- GSM / GPRS / LTE

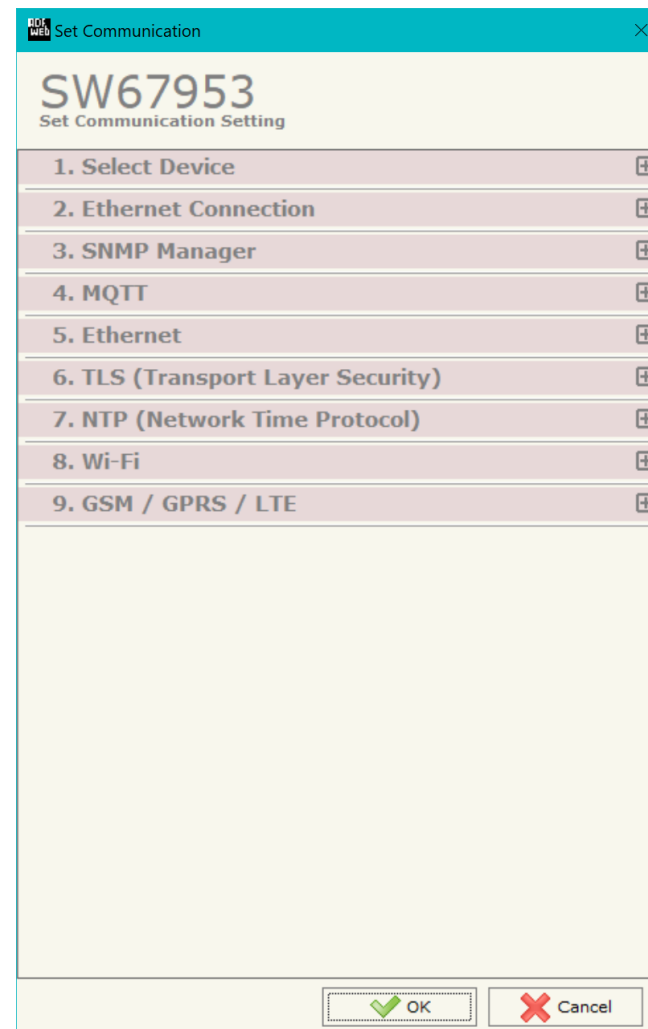


Figure 3a: "Set Communication" window

**SELECT DEVICE:**

This section is used to select the type of converter in use:

- Only Ethernet Cable: hardware with LAN only;
- Ethernet cable + Wi-Fi: hardware with LAN and Wi-Fi;
- Ethernet Cable + Mobile connection: hardware with LAN and mobile module;

**ETHERNET CONNECTION:**

This section is used to define the general parameters of Ethernet communication.

The means of the fields are:

- In the field "**Device Name (Hostname)**" the Hostname to assign to the converter is defined;
- If the field "**Obtain an IP Address Automatically (DHCP for Cable Connection)**" is checked, DHCP for LAN connection is enabled;
- If the field "**Obtain an IP Address Automatically (DHCP for Wi-Fi Connection)**" is checked, DHCP for Wi-Fi connection is enabled;
- If the field "**Enable DNS**" is checked, DNS protocol is enabled;
- In the field "**Primary DNS**" the IP Address of the primary DNS server is defined;
- In the field "**Secondary DNS**" the IP Address of the secondary DNS server is defined.

**SNMP MANAGER:**

This section is used to define the main parameters of SNMP line. The means of the fields are:


- In the field "**IP Address**" the IP address that you want to give to the SNMP side is defined;
- In the field "**SubNet Mask**" the SubNet Mask of the SNMP side is defined;
- In the field "**Gateway**" the default gateway that you want to use is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**Name of Station**" it is possible to assign a name to the SNMP node.



1. Select Device

Type: Only Ethernet Cable

Figure 3b: "Set Communication → Select Device" window

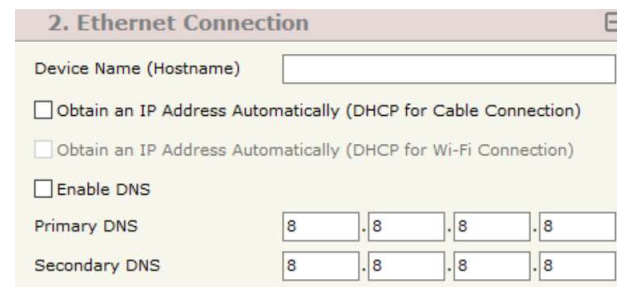

2. Ethernet Connection

Device Name (Hostname):

☐ Obtain an IP Address Automatically (DHCP for Cable Connection)


☐ Obtain an IP Address Automatically (DHCP for Wi-Fi Connection)

☐ Enable DNS

Primary DNS: 8 . 8 . 8 . 8

Secondary DNS: 8 . 8 . 8 . 8

Figure 3c: "Set Communication → Ethernet connection" window

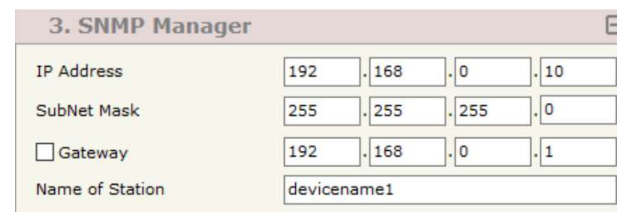

3. SNMP Manager

IP Address: 192 . 168 . 0 . 10

SubNet Mask: 255 . 255 . 255 . 0

☐ Gateway: 192 . 168 . 0 . 1

Name of Station: devicename1

Figure 3d: "Set Communication → SNMP Manager" window



**MQTT:**

This section is used to define the main parameters of MQTT line. The means of the fields are:

- In the field "**Server URL**" the URL or the IP Address of the MQTT Server is defined;
- In the field "**Server Port**" the port used for MQTT communication is defined;
- In the field "**Client ID**" the Client ID of the converter is defined (if ned);
- In the field "**Keep Alive (seconds)**" the delay with which the Keep Alive message is sent on MQTT is defined;
- If the field "**Clean Session**" is checked, the last MQTT messages are deleted by the Server and the Client in case of missing ACK. If unchecked, the Server and the Client hold the last MQTT messages and, in case of incorrect disconnection or missing ACK, they try to send again them since all the ACK messages are exchanged correctly (valid only for QoS 1 and QoS 2);
- If the field "**Will Flag**" is checked, the converter will publish the Will topic at the connection to the Server. With this feature, in case of incorrect disconnection, the Server will publish this topic to all the MQTT Clients that subscribed it;
- In the field "**Topic Name Will**" the topic used for Will message is defined;
- In the field "**Message Will**" the payload of the Will message is defined;
- In the field "**Retained Will**" the converter will send the Will message with Retain flag enabled. In this way, the Server will hold the last Will message;
- In the field "**QoS Will**" the QoS type for Will message is defined;
- If the field "**Publish Topic on Connection**" is checked, the converter will publish a topic at the connection to the Server;
- In the field "**Topic Name Connection**" the topic used for the connection message is defined;
- In the field "**Message Connection**" the payload of the connection topic is defined;
- In the field "**Retained Connection**" the converter will send the connection topic with Retain flag enabled. In this way, the Server will hold the last Connection message received;
- In the field "**Username**" the username for the connection to the MQTT server is defined;
- In the field "**Password**" the password for the connection to the MQTT server is defined.

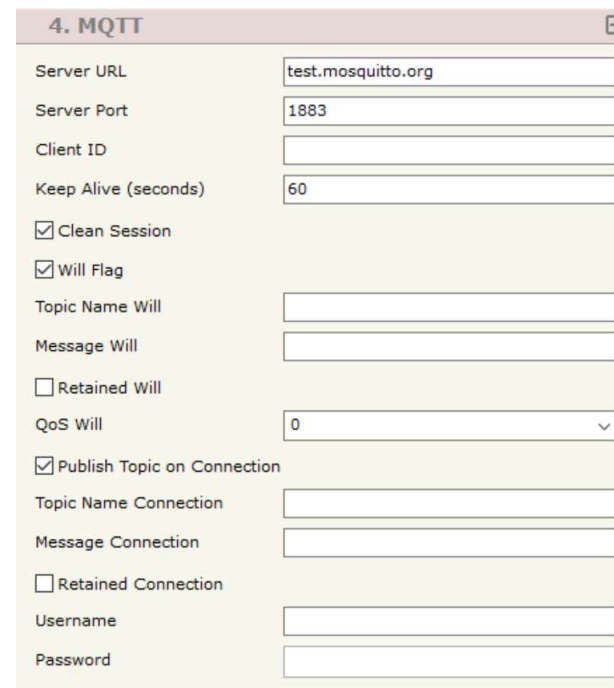


Figure 3e: "Set Communication → MQTT" window

**ETHERNET:**

This section is used to define the general parameters of Ethernet. The means of the fields are:

- In the field "**IP Address**" the IP address of the converter is defined;
- In the field "**SubNet Mask**" the Subnet Mask of the converter is defined;
- In the field "**Gateway**" the default gateway of the net is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;

**TLS (TRANSPORT LAYER SECURITY):**


This section is used to define the parameters of TLS protocol. The means of the fields are:

- If the field "**Enable TLS**" is checked, the TLS protocol for secure connection is enabled;
- If the field "**Server Authentication**" is checked, the authentication of the Server using TLS is enabled. If enabled, in the field "**Server Certificate**" the certificate from the Server is defined;
- If the field "**Client Authentication**" is checked, the authentication of the Client using TLS is enabled. If enabled:
  - in the field "**Client Certificate**" the certificate from the Client is defined;
  - in the field "**Client Key**" the private key of the Client is defined;
  - in the field "**Client Key Password**" the password for the private key of the Client is defined.

**NTP (NETWORK TIME PROTOCOL):**

This section is used to define the parameters of NTP protocol. The means of the fields are:

- In the field "**Server URL**" the URL or the IP Address of the NTP Server is defined;
- In the field "**Poll Time (seconds)**" the polling time for the time synchronization is defined.

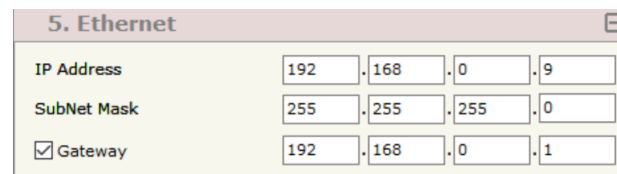

5. Ethernet				
IP Address	192	168	0	9
SubNet Mask	255	255	255	0
<input checked="" type="checkbox"/> Gateway	192	168	0	1

Figure 3f: "Set Communication → Ethernet" window



6. TLS (Transport Layer Security)	
<input checked="" type="checkbox"/> Enable TLS	
<input checked="" type="checkbox"/> Server Authentication	
Server Certificate	
<input checked="" type="checkbox"/> Client Authentication	
Client Certificate	
Client Key	
Client Key Password	

Figure 3g: "Set Communication → TLS" window



7. NTP (Network Time Protocol)	
Server URL	pool.ntp.org
Poll Time (seconds)	1000

Figure 3h: "Set Communication → NTP" window

**Wi-Fi:**

This section is used to define the general parameters of Wi-Fi. It is possible to defined the type of Wi-Fi communication:

- Access Point;
- Station.

The means of the fields for Access Point configuration are:

- In the field "**IP Address**" the IP address of the converter is defined;
- In the field "**Subnet Mask**" the SubNet Mask of the converter is defined;
- In the field "**GATEWAY**" the default gateway of the net is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**SSID**" the name of the Wi-Fi network to create is defined;
- In the field "**Password**" the password used for Wi-Fi connection is defined;
- In the field "**Secure Type**" the type of security protocol used by the Wi-Fi network is defined;
- If the field "**Enable DHCP**" is checked, the converter acts as DHCP Server for the Clients connected. If the option is enabled, in the fields "**DHCP First IP Address**" and "**DHCP SUBNET Mask**" the IP Addresses range used for DHCP is defined. In the field "**Lease Time (seconds)**" the required time for the renewing of the IP Address assigned to the Client is defined;
- In the field "**Max Client**" the maximum number of Wi-Fi Clients accepted is defined;
- In the field "**Channel**" the channel for Wi-Fi communication is defined.

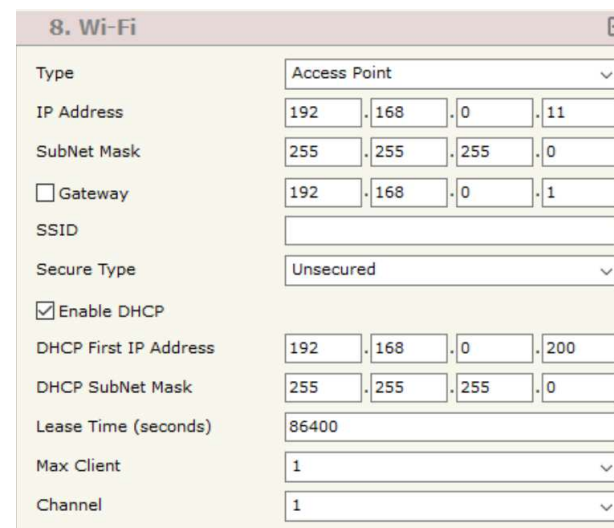


Figure 3i: "Set Communication → Wi-Fi" window

The means of the fields for Station configuration are:

- In the field "**IP Address**" the IP address for of the converter is defined;
- In the field "**Subnet Mask**" the SubNet Mask for of the converter is defined;
- In the field "**GATEWAY**" the default gateway of the net is defined. This feature can be enabled or disabled pressing the Check Box field. This feature is used for going out of the net;
- In the field "**SSID**" the name of the Wi-Fi network to connect is defined;
- In the field "**Password**" the password used to connect to the Wi-Fi network is defined.

### **GSM / GPRS / LTE:**

This section is used to define the parameters of GPRS connection. The means of the fields are:

- In the field "**PIN**" the PIN for the SIM card (if ned) is defined;
- In the field "**APN**" the APN for the mobile operator used is defined;
- In the field "**Authentication Type**" the type of the authentication to the mobile network is defined;
- In the field "**Username**" the username for the authentication is defined;
- In the field "**Password**" the password for the authentication is defined;

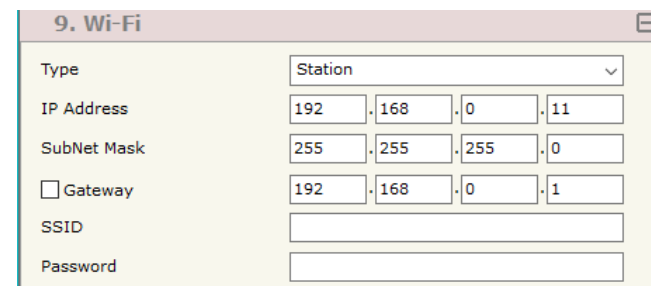


Figure 3l: "Set Communication → Wi-Fi" window

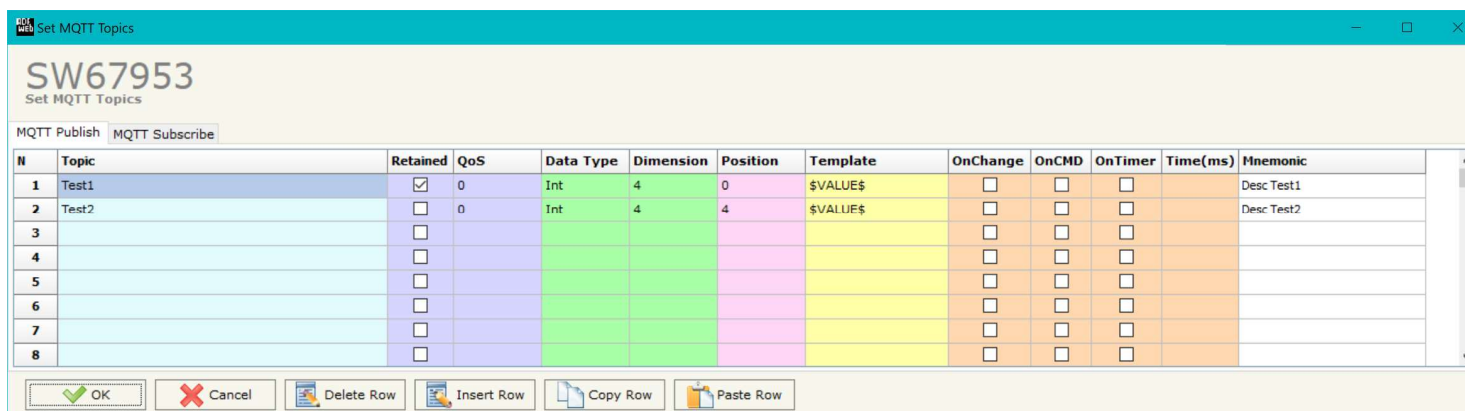


Figure 3m: "Set Communication → GSM / GPRS / LTE" window

## MQTT SET TOPIC:

By Pressing the **"MQTT Set Topic"** button from the main window for HD67953 (Fig. 2) the window "Set MQTT Topics" appears (Fig. 4). This section is used to define the MQTT topics where the converter will publish the data from SNMP and the topic that the converter will subscribes for writing the data to SNMP.

## MQTT PUBLISH




N	Topic	Retained	QoS	Data Type	Dimension	Position	Template	OnChange	OnCMD	OnTimer	Time(ms)	Mnemonic
1	Test1	<input checked="" type="checkbox"/>	0	Int	4	0	\$VALUE\$	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		Desc Test1
2	Test2	<input type="checkbox"/>	0	Int	4	4	\$VALUE\$	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>		Desc Test2
3		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
4		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
5		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
6		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
7		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
8		<input type="checkbox"/>						<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		

Figure 4a: "Set MQTT Topics → MQTT Publish" window

The means of the fields are:

- In the field **"Topic"** the MQTT topic is defined;
- If the field **"Retained"** is defined, the retained flag is enabled. The MQTT server will hold the last topic published;
- In the field **"QoS"** the QoS level is defined;
- In the field **"Data Type"** the type of data to use is defined;
- In the field **"Dimension"** the dimension in byte of the data is defined;
- In the field **"Position"** the starting byte of the internal memory array where taking the data is defined;
- In the field **"Template"** the structure of the MQTT payload is defined. With a double click on it, it is possible to open a window for editing it;
- If the field **"On Change"** is checked, the converter publishes the topic when the data from SNMP are changed;
- If the field **"On CMD"** is checked, the converter publishes the topic when a new response from SNMP is received;
- If the field **"On Timer"** is checked, the converter publishes the topic cyclically with the delay defined in the field **"Time (ms)"**;
- In the field **"Mnemonic"** a description of the topic is defined.

## **MQTT SUBSCRIBE**

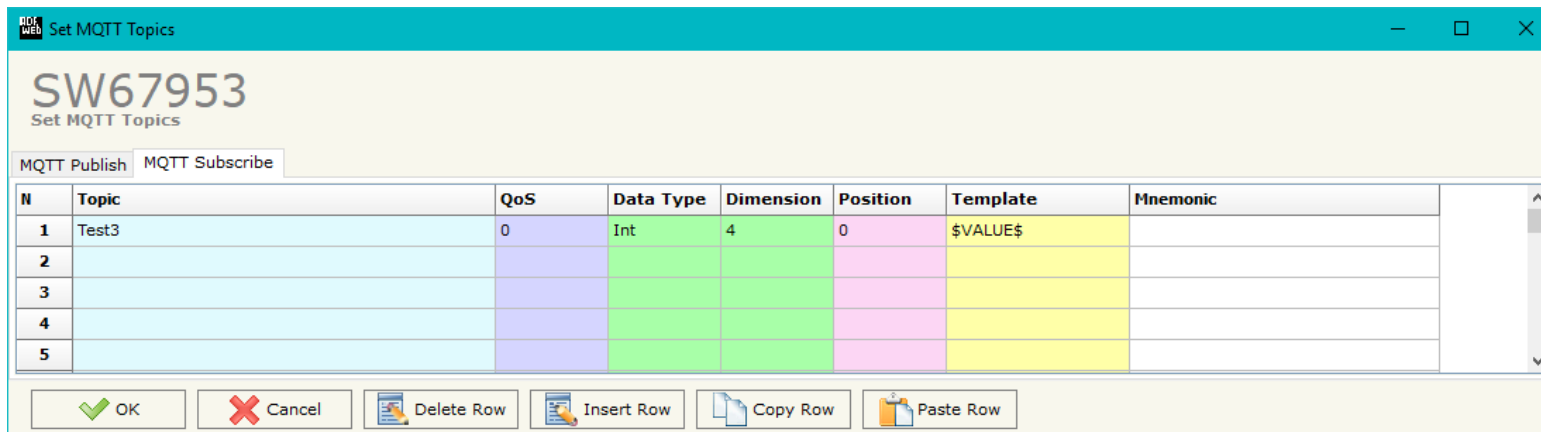


N	Topic	QoS	Data Type	Dimension	Position	Template	Mnemonic
1	Test3	0	Int	4	0	\$VALUE\$	
2							
3							
4							
5							

Figure 4b: "Set MQTT Topics → MQTT Subscribe" window

The means of the fields are:

- In the field "**Topic**" the MQTT topic is defined;
- In the field "**QoS**" the QoS level is defined;
- In the field "**Data Type**" the type of data to use is defined;
- In the field "**Dimension**" the dimension in byte of the data is defined;
- In the field "**Position**" the starting byte of the internal memory array where placing the data is defined;
- In the field "**Template**" the structure of the MQTT payload is defined. With a double click on it, it is possible to open a window for editing it;
- In the field "**Mnemonic**" a description of the topic is defined.

## SNMP MANAGER:

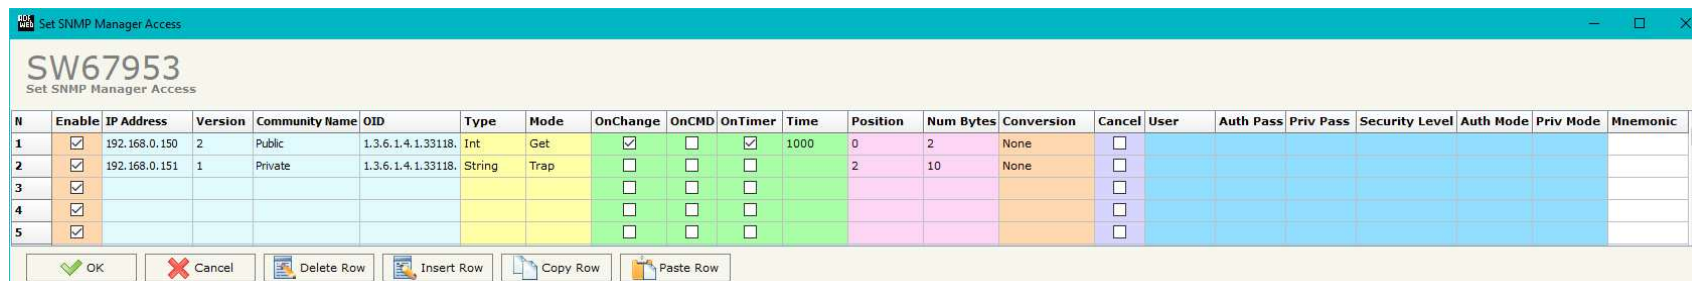

N	Enable	IP Address	Version	Community Name	OID	Type	Mode	OnChange	OnCMD	OnTimer	Time	Position	Num Bytes	Conversion	Cancel	User	Auth Pass	Priv Pass	Security Level	Auth Mode	Priv Mode	Mnemonic
1	<input checked="" type="checkbox"/>	192.168.0.150	2	Public	1.3.6.1.4.1.33118	Int	Get	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	1000	0	2	None	<input type="checkbox"/>							
2	<input checked="" type="checkbox"/>	192.168.0.151	1	Private	1.3.6.1.4.1.33118	String	Trap	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		2	10	None	<input type="checkbox"/>							
3	<input checked="" type="checkbox"/>							<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					<input type="checkbox"/>							
4	<input checked="" type="checkbox"/>							<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					<input type="checkbox"/>							
5	<input checked="" type="checkbox"/>							<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					<input type="checkbox"/>							

Figure 5: "Set SNMP Manager Access" window

By Pressing the **"SNMP Manager"** button from the main window for SW67953 (Fig. 2) the window "Set SNMP Manager Access" appears (Fig. 5).

The meaning of the fields in the window are the follows:

- If the field **"Enable"** is checked, the SNMP request is enabled;
- In the field **"IP Address"** the address of the SNMP Agent device to read/write is defined;
- In the field **"Version"** the SNMP version used to send the SNMP request is defined;
- In the field **"Community Name"** the Community Name used for the SNMP request is defined (selectable or editable manually);
- In the field **"OID"** the OID to read/write from/to the SNMP Agent device is defined;
- In the field **"Type"** the type of data to read/write ('String' or 'Int') is defined;
- In the field **"Mode"** the type of SNMP request used ('Get', 'Set' or 'Trap') is defined;
- By checking the field **"On Change"** the SNMP request (only for 'Set' Mode) is made only if MQTT data are changed;
- If the field **"On Timer"** is checked, the SNMP request is sent cyclically;
- In the field **"Time"** the delay in ms between two SNMP requests is defined (if "On Timer" is checked);
- In the field **"Position"** it is possible to select the position where take/save the data from/to the internal memory array;
- In the field **"Num Bytes"** it is possible to select define the dimension of the SNMP data;
- In the field **"Conversion"** it is possible to select the conversion to apply to the data read/written from/to the SNMP Agent;
- If the field **"Cancel"** is checked, if the answer to the SNMP request is missing, the data on MQTT side are set to '0';

- ✦ If SNMP version is set to '3', the following fields must be set:
  - In the field "**User**" the user for the SNMP authentication is defined;
  - In the field "**Auth Pass**" the password for the SNMP authentication is defined;
  - In the field "**Priv Pass**" the password for Privacy authentication is defined;
  - In the field "**Security Level**" the type of security used is defined;
  - In the field "**Auth Mode**" the mode used for the authentication is defined;
  - In the field "**Priv Mode**" the mode used for Privacy is defined;
- ✦ In the field "**Mnemonic**" a description of the data inserted in the row is defined.

**Note:**

If the field "On change" and "On Timer" is checked and the "Poll Time" is different from 0, the converter sends the SNMP writing request cyclically and also when the data is changed.

**Note:**

If the "Trap" mode is used, the fields "On Change" and "On Timer" must be disabled.



## UPDATE DEVICE:

By pressing the **"Update Device"** button, it is possible to load the created Configuration into the device; and also the Firmware, if necessary. This by using the Ethernet port.

If you don't know the actual IP address of the device you have to use this procedure:

- Turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in ON position;
- Turn ON the device
- Connect the Ethernet cable;
- Insert the IP **"192.168.2.205"**;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" turn OFF the Device;
- Put Dip1 of 'Dip-Switch A' in OFF position;
- Turn ON the device.

If you know the actual IP address of the device, you have to use this procedure:

- Turn ON the Device with the Ethernet cable inserted;
- Insert the actual IP of the Converter;
- Select which operations you want to do;
- Press the **"Execute update firmware"** button to start the upload;
- When all the operations are "OK" the device automatically goes at Normal Mode.

At this point the configuration/firmware on the device is correctly updated.

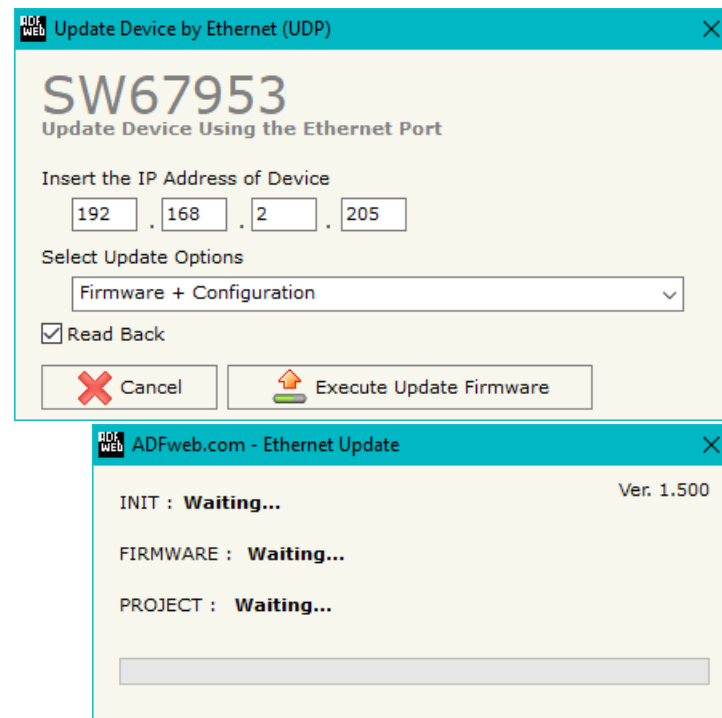


Figure 6: "Update device" windows


**Note:**

When you receive the device, for the first time, you also have to update the Firmware in the HD67953 device.


**Warning:**

If Fig. 7 appears when you try to do the Update try these points before seeking assistance:

- Check if the serial COM port selected is the correct one;
- Check if the serial cable is connected between the PC and the device;
- Try to repeat the operations for the updating;
- Try with another PC;
- Try to restart the PC;
- Check the LAN settings;
- If you are using the program inside a Virtual Machine, try to use in the main Operating System;
- If you are using Windows Seven, Vista, 8, 10 or 11 make sure that you have the administrator privileges;
- In case you have to program more than one device, using the "UDP Update", you have to cancel the ARP table every time you connect a new device on Ethernet. For do this you have to launch the "Command Prompt" and write the command "arp -d". Pay attention that with Windows Vista, Seven, 8, 10 or 11 you have to launch the "Command Prompt" with Administrator Rights;
- Pay attention at Firewall lock.

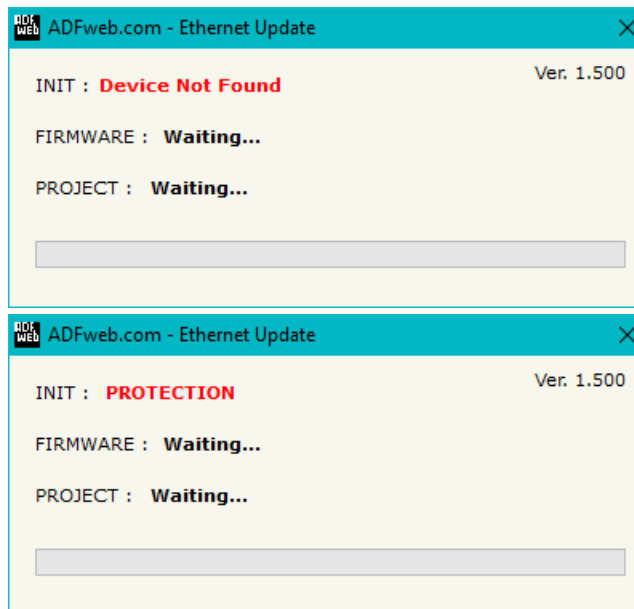


Figure 7: "Error" window


**Warning:**

In the case of HD67953 you have to use the software "HD67953": [www.adfweb.com/download/filefold/HD67953.zip](http://www.adfweb.com/download/filefold/HD67953.zip).

**TEMPLATE STRING: DEFINITION OF MQTT PAYLOAD**

In the section "Set Communication" of the SW67953, it is possible to define a Template string for the MQTT messages. The template is necessary in order to define the structure of the payload of the MQTT message and the info contained. It is possible to have a simple text format or a JSON format.


The definition of the template can be done using Key words, used to link a specific information from/to SNMP. The key words used and their meanings are:

- VALUE: value of the SNMP data
- TIME: date and time of the MQTT message
- DESC: description of the message

**Warning:**

The key words must be defined between "\$" chars in order to be recognized (Ex.: \$VALUE\$).

## MECHANICAL DIMENSIONS:

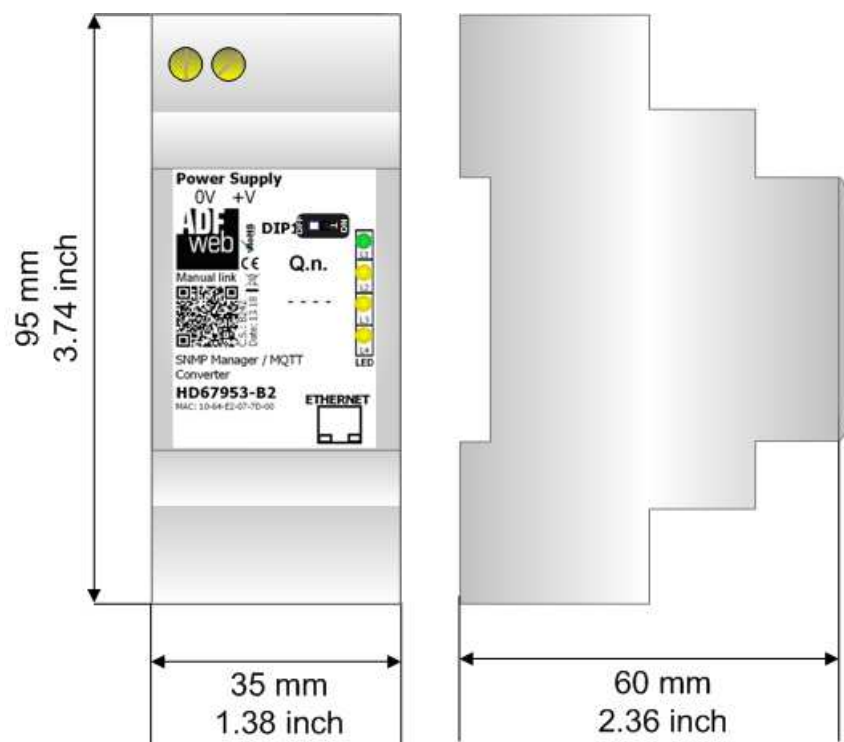


Housing: PVC  
Weight: 200g  
(Approx)

Figure 8: Mechanical dimensions scheme for HD67953-B2

## ORDERING INFORMATION:

The ordering part number is formed by a valid combination of the following:

### **HD67953- B 2**

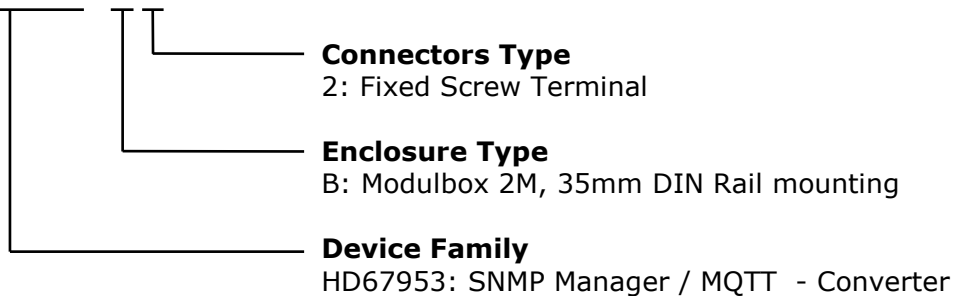

Order Code: **HD67953-B2** - SNMP Manager / MQTT - Converter

## ACCESSORIES:

Order Code: **AC34011** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 12 V DC

Order Code: **AC34012** - 35mm Rail DIN - Power Supply 220/240V AC 50/60Hz – 24 V DC

**DISCLAIMER:**

All technical content within this document can be modified without notice. The content of the document is a under continual renewal. For losses due to fire, earthquake, third party access or other accidents, or intentional or accidental abuse, misuse, or use under abnormal conditions repairs are charged to the user. ADFweb.com S.r.l. will not be liable for accidental loss of use or inability to use this product, such as loss of business income. ADFweb.com S.r.l. shall not be liable for consequences of improper use.

**OTHER REGULATIONS AND STANDARDS:****WEEE INFORMATION**

Disposal of old electrical and electronic equipment (as in the European Union and other European countries with separate collection systems).

■ This symbol on the product or on its packaging indicates that this product may not be treated as household rubbish. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. If the product is disposed correctly, you will help prevent potential negative environmental factors and impact of human health, which could otherwise be caused by inappropriate disposal. The recycling of materials will help to conserve natural resources. For more information about recycling this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

**RESTRICTION OF HAZARDOUS SUBSTANCES DIRECTIVE**

The device respects the 2002/95/EC Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment (commonly referred to as Restriction of Hazardous Substances Directive or RoHS).

**CE MARKING**

The product conforms with the essential requirements of the applicable EC directives.

**WARRANTIES AND TECHNICAL SUPPORT:**

For fast and easy technical support for your ADFweb.com SRL products, consult our internet support at [www.adfweb.com](http://www.adfweb.com). Otherwise contact us at the address [support@adfweb.com](mailto:support@adfweb.com)

**RETURN POLICY:**

If while using your product you have any problem and you wish to exchange or repair it, please do the following:

- Obtain a Product Return Number (PRN) from our internet support at [www.adfweb.com](http://www.adfweb.com). Together with the request, you need to provide detailed information about the problem.
- Send the product to the address provided with the PRN, having prepaid the shipping costs (shipment costs billed to us will not be accepted).

If the product is within the warranty of twelve months, it will be repaired or exchanged and returned within three weeks. If the product is no longer under warranty, you will receive a repair estimate.



**ADFweb.com S.r.l.**  
Via Strada Nuova, 17  
IT-31010 Mareno di Piave  
TREVISO (Italy)  
Phone +39.0438.30.91.31  
Fax +39.0438.49.20.99  
[www.adfweb.com](http://www.adfweb.com)

