

# **HXSP-1001**

**RS-232/485/422 serial device server**

**user manual**

## 【 Summarize 】

HXSP-1001 is a serial device server which can connect with network fast. it provides one RS-232/485/422 (RS-232: DB9M; RS-484/422: 4 bits terminal block) and 1 10Base-T Ethernet port, it can manage the disperse serial device or host computer by network, easily and convenience. setting or software upgrade by serial program group in apply, support TCP, UDP, ARP, ICM and DHCP protocol, support Windows Native COM and auto-connect function once the network intermit.

In addition, HXSP-1001 provide the management collocate tools that based Windows flat roof. it can lead the user manage and configure facility step by step, all of the setting can be done by network or serial. Support pass gateway and router, easily for user to set IP address, Server and Client mode, size of data and so on, Can realize the serial device connect with network by simply setting.

Its outside design support DIN-Rail and Wall mounting. apply to project easily .

## 【 Feature 】

- Support RS-232/RS-485/RS-422
- Support Socket application.
- Support Sever and Client mode.
- Support Windows/Linux COM serial driver mode.
- Support TCP, UDP, ARP, ICMP and DHCP protocol
- Support all of Windows Native COM and auto-contact function once the network blackout .
- Support pass gateway and router.
- Easy-to-use windows utilty for mass installation
- All of the setting can be done by network and serial
- Proper Serial auto-connection (On-the-fly)

## 【 Capability index 】

### **Ethernet**

Standard: 10Base-T

Protocol; support TCP 、 UDP 、 APR 、 ICMP and DHCP protocol

Signal: Rx+, Rx-, Tx+, Tx-

Speed: 10Mbps

Working: full or half of duplex

Work mode: support Server and Client mode

Port memory: 512 byte  
Transmit distance: 100m  
Interface protection: 1.5KV ESD  
Interface type: RJ-45

### Serial

NO.of ports: RS-232,RS-422/485 4 bits terminal block  
RS-232 signal: TxD, RXD, RTS, CTS, DTR, DSR, DCD, GND  
RS-422 signal: Tx+, Tx-, Rx+, Rx-,GND  
RS-485 signal: Data+, Data-,GND  
Parity: None, Even, Odd, Space, Mark  
Data bit: 7bit,8bit  
Stop bit: 1, 1.5, 2  
Transmission speed: 1200bps ~ 115200bps  
Flow control: support RTS/CTS flow control or not flow control.  
RS485 data direction: ADDC (Auto data direction Control).  
Loading: RS-485/422 side support 32 nodes (optional 128 nodes)  
Transfer distance: RS-485/422 side: 1200m, RS-232 side: less than 15m  
Port protect: 1500W surge protect,15KV ESD Protect  
Port type: RS-232 DB-9 male · RS-485/422 4bit terminal

### Power supply

Power supply input: 9VDC  
Consumption: 300mA

### Environmental


Operating temperature: -20°C ~ 60°C, 5 ~ 95% RH  
Storage temperature: -25°C ~ 85°C, 5 ~ 95% RH

### Appearance

Color: blue and white  
L×W×H: 100mm×69mm×22mm  
Material: Iron  
Weight: 230g

### 【 Interface and LED 】

#### 10Base-T Ethernet port

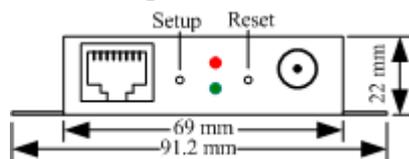


Device connected to Ethernet: Red LED flash

Ethernet port has data transfer: Green LED flash

The 10/100BaseT(X) ports located on HXSP-1001 front panel. The pin of RJ45 port display as below. Connect by UTP or STP. The connect distance is no more than 100m. 100Mbps is used

100Ω of UTP, 10Mbps is used 100Ω of UTP 3,4,5

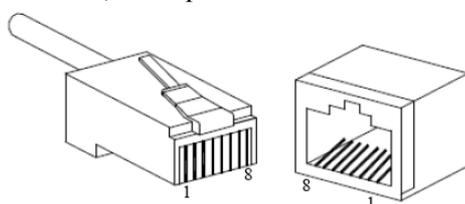


RJ 45 port support automatic MDI/MDI-X operation. can connect the PC , Server, Converter and HUB by straight-through cable wiring . Pin 1, 2, 3, 6 Corresponding connection in MDI. 1→3, 2→6, 3→1, 6→2 are used as cross wiring in the MDI-X port of Converter and HUB. 10Base-T are used in MDI/MDI-X, the define of Pin in the table as below.


pin	MDI signal	MDI-X signal
1	TX+	RX+
2	TX-	RX-
3	RX+	TX+
6	RX-	TX-
4, 5, 7, 8	—	—

Note : “TX±” transmit data± · “RX±” receive data± · “—”not use °


MDI(Straight-through cable):

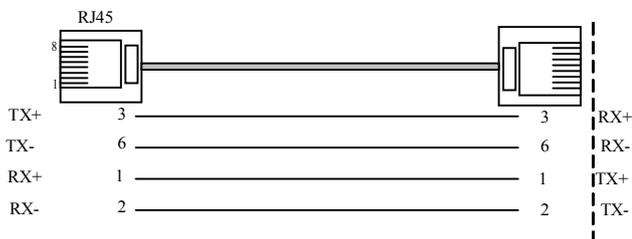

MDI-X (Cross-over cable)

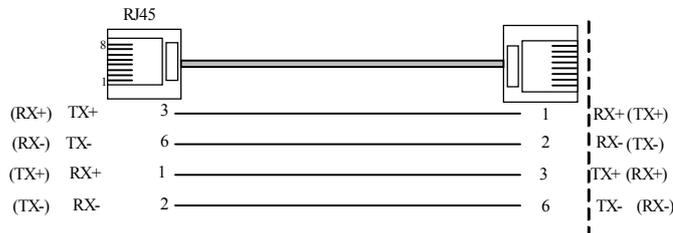

RS-232/485/422 port

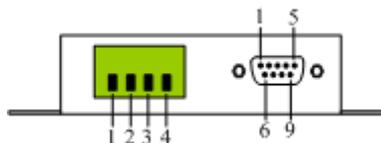


RS-485/422 ( 4 bit terminal block)

- 1 T+/Data+    2 T-/Data-
- 3 R+            4 R-

RS-232 , DB9M (male, pin)

- 1 DCD    2 RxD    3 TxD    4 DTR
- 5 GND    6 DSR    7 RTS    8 CTS

Obverse:

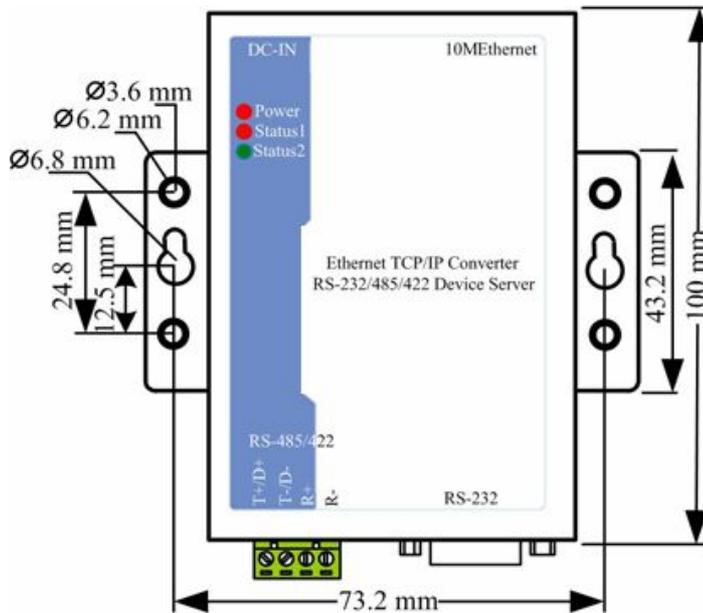

LED indicator show:

- Electrify input:** Status1 and Status2 blinking 3 times
- Main mode undiscover target facility:** Status2 blinking, 1 /sec
- Data transmit:** Status2 off
- No data transmit:** Status2 on
- Setting error:** Status1 blinking, 1/sec
- data buffer full:** Status1 on

### 【Simply use setting】

Introduction the equipment simple use as following (visit the facility by create a dummy serial port).

Running the serial connection wizard, interface display as below. Setting step by step.

**Note:** Create a Virtual serial port to visit the facility, need to close the firewall before install link guide process. Especially the Windows XP system.


**Suggestion:** Hold the default parameter of system during the installation. The user may also according to the environment need choice device appropriate working pattern and other options.



Step 1: Click on “Next”




Step 2: Select the first item (create a link between a virtual serial port and a device server). And then click on “Next”

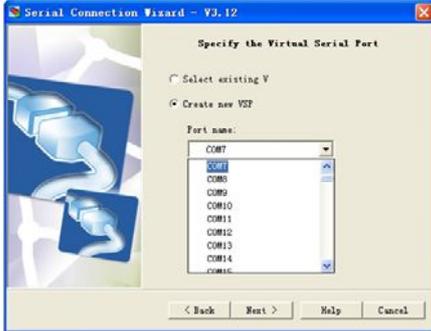

Step 3: Default Item , select the create a new VSP (COM) . Then click “Next”



Step 4: Default Item, and then click “Select from the list”

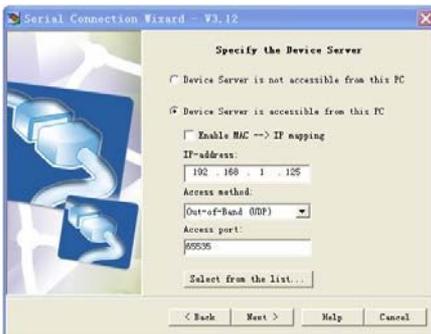


Step 5: Select your target corresponding IP from list, click “Select”



Step 6: After select the target, back to interface. Click “Next”




Step 7: Select the working mode. and then click

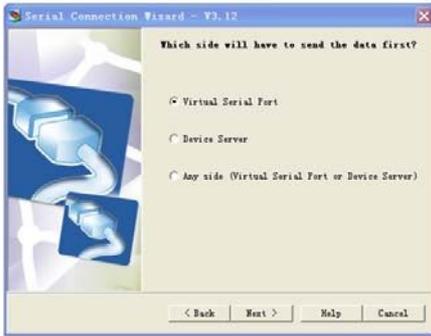

client server mode ( 2 ) serve mode ( 3 ) free choice mode



Step 8: click on “Next”.

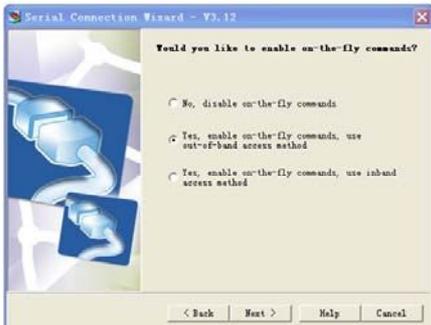

Step 9: Select the TCP/IP transport protocol suppose the listening port on the device serve is a default port (1001), click “Next”.



Step 10: Select the “Yes, enable on-the fly commands, use out-of-band access”. Click “Next”.

Step 11: Click “Next”



Step 12: Click “Finish”

Continue click the “**finish**” in the next step.

**Note:** Advance setting steps and methods refer to the user manual document in CD.

### **【Device Installation】**

Pay attention to the questions as below :

- (1) Make sure the power adapter is 9V ;
- (2) Use the cross-over cable if the devices connect to the PC.
- (3) Use the straight-through cable if the devices connect to the HUB.

Note: Cable (blue) with the product is a straight-through cable.

### **【Application】**

#### **Project**

##### **1. Based COM corresponding application and device communicate on PC**

In this project, create a dummy serial and facility communicate by dummy serial software .  
dummy serial locate on client server.

Note: Communications bottom API OF dummy serial is based TCP/IP and UDP .

##### **2. Based on Socket corresponding application and device communicate on PC.**

In this project, application should based WinSocket. If PC application of PC locate on client server. then NP312 must locate on server.

**Note:** Communications bottom API OF dummy serial is based TCP/IP and UDP .

### **【AFQ】**

DS Manager program can not find facility during the using. The problems and the ways how to solve as below:

1. No power supply, no network or error network  
**Answer:** Using the adapter (9VDC). Can use straight-through cable connect to HUB and switch .use the cross-cover cable connect to PC .
2. Firewall on PC  
**Answer: Close the Firewall.**
3. IP address conflict  
**Answer:** redistribute IP address.
4. Double network cards on PC  
**Answer:** Remain LAN, uninstall another. LAN forbid. Restart.
5. contact with PC by cross-over wiring ,IP address display (DHCP)  
**Answer:** set the IP address of PC to static address.
6. Search equipment's PC machine and equipment not in identical webpage  
**Answer:** Need to designate search facility at DS Manager process. operate methods refer to CD
7. MAC address binding  
**Answer:** Forbidding network card of PC, restart, PC can find the facility. PC also can find

the facility after waiting 20 minutes.

**MAC address bind** :When PC carries on the correspondence with some equipment, If discovered that this equipment's IP the address was been already obsolete by other equipment use · PC

machine will think that this equipment IP address existence conflict is unable with this equipment to carry on the normal correspondence °

### **【operate in application】**

In the search, establishes in equipment's process, involves operates as follows :

#### **1. How to forbid network card**

The first method: Click the icon  on the right of taskbar by right key on the mouse.

select the “**forbid**”

The second method: click on “**network neighborhood**” on the desktop of PC by right key on the mouse, select “**attribute**” item, enter the “**network connections**”

Click on the LAN network card icon , select the “**Forbid**” from menu

#### **2. How to start network card**

“**Network neighborhood**”, “**select attribute**” item in menu, enter the network

connections interface click on LAN network card icon , select the “**using**”item.

#### **3. How to judge PC have double network card ?**

Click the “**start**” menu, input the “**ipconfig**” in “**Run dialog**”, click “**Confirm**” If the PC

have double IP address and MAC address. Need to remain the LAN, The others uninstall