

F3936 Router User Manual	Documentation No.	Product Version	Page
		V1.0	
	Product Name: F3936		Total:77

F3936 Router User Manual

Files Revised Record

Date	Version	Remark	Author
2014-9-28	V1.00	Initial version	wonder
2015-3-26	V1.10	Modified	wonder



Contents

Chapter 1 Brief Introduction of Product.....	6
1.1 General.....	6
1.2 Features and Benefits.....	6
1.3 Working Principle.....	9
1.4 Product Specifications.....	9
Chapter 2 Installation Introduction.....	12
2.1 General.....	12
2.2 Encasement List.....	12
2.3 Installation and Cable Connection.....	12
2.4 Power.....	14
2.5 Indicator Lights Introduction.....	15
2.6 Reset Button Introduction.....	16
Chapter 3 Configuration and Management.....	17
3.1 Configuration Connection.....	17
3.2 Access the Configuration Web Page.....	17
3.3 Management and configuration.....	19
3.3.1 Setting.....	19
3.3.1.1 Basic Setting.....	19
3.3.1.2 Dynamic DNS.....	26
3.3.1.3 Clone MAC Address.....	27
3.3.1.4 Advanced Router.....	27
3.3.1.5 VLANs.....	29
3.3.1.6 Networking.....	30
3.3.2 Wireless.....	33
3.3.2.1 Basic Settings.....	33
3.3.2.2 Wireless Security.....	35
3.3.3 Services.....	37
3.3.3.1 USB.....	40
3.3.3.2 FTP Server.....	40
3.3.3.3 Hotspot.....	41
3.3.4 Security.....	43
3.3.4.1 Firewall.....	43
3.3.5 Access Restrictions.....	45
3.3.5.1 WAN Access.....	45
3.3.5.2 Packet Filter.....	48
3.3.6 NAT.....	49
3.3.6.1 Port Forwarding.....	49
3.3.6.2 Port Range Forward.....	50
3.3.6.3 DMZ.....	51
3.3.7 QoS Setting.....	51
3.3.7.1 Basic.....	51
3.3.8 Applications.....	52

3.3.8.1	Serial Applications.....	52
3.3.8.2	GPS Settings(Optional).....	54
3.3.9	Administration.....	55
3.3.9.1	Management.....	55
3.3.9.2	Keep Alive.....	58
3.3.9.3	Commands.....	59
3.3.9.4	Factory Defaults.....	59
3.3.9.5	Firmware Upgrade.....	60
3.3.9.6	Backup.....	60
3.3.10	Status.....	61
3.3.10.1	Router.....	61
3.3.10.2	WAN.....	63
3.3.10.3	LAN.....	66
3.3.10.4	Wireless.....	68
3.3.10.5	Device Management.....	70
3.3.10.6	Bandwidth.....	71
3.3.10.7	Sys-Info.....	72
	Appendix.....	75


Chapter 1 Brief Introduction of Product

1.1 General

F3936 is a vehicle WIFI new media operating terminal and it integrates the advanced 3G/4G/WIFI communication GPS/beidou(optional) positioning technology, local large-capacity storage and multimedia advertising push technology. The passengers can use smart phones, PAD and notebook to enjoy freely the local videos, news, music, games, and quickly connecting the Internet, etc. And media operators may carry out more value added services.

F3936 has been already widely used in public transportation, tourism, finance and medical industries, such as urban public transport, customized bus, bus stations, tour bus, long-distance passenger bus, tourist attractions, bank, hospital and so on.

Application Topology

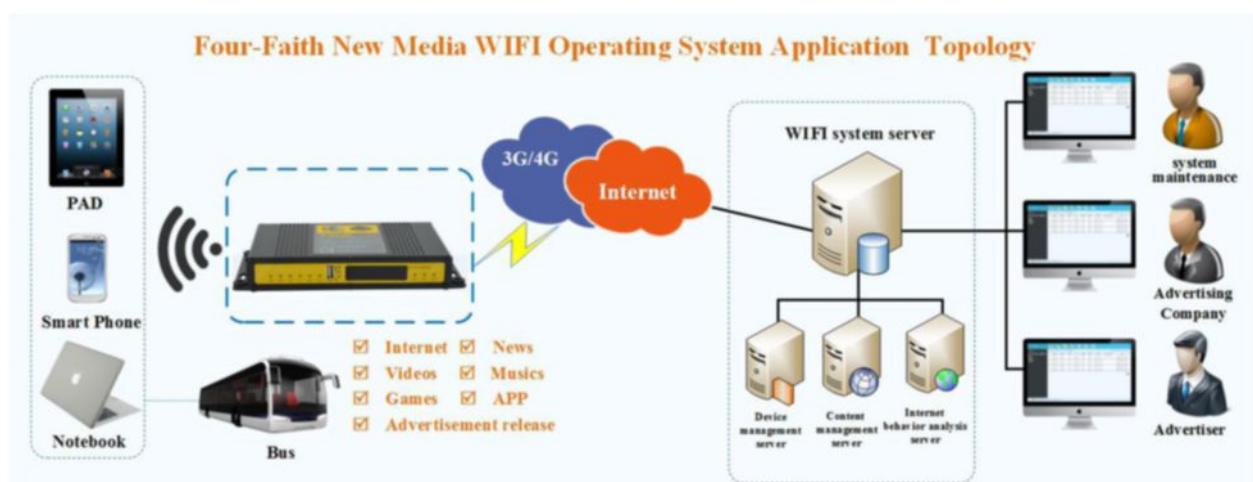

1.2 Features and Benefits

Design for Vehicle Application

- High-powered 32bits CPU
- Vehicle power supply design, support under-voltage, over-voltage, over-current, reverse connection, short circuit, surge protection
- Wide Power range: DC 9~36V
- Wide Operating Temperature(-35~+75°C)
- Aviation plug for power input
- Metal shell, high heat radiating and anti collision performance

- Shockproof design,suitable for vehicle vibrating environment
- Security structure design for TF/SIM card

Stability and Reliability

- Support hardware and software WDT to ensure the stability of the system
- Support auto recovery mechanism, including online detect, auto redial when offline to make router always online
- Data storage with SSD, ensure the data security and stability on high speed read and write
- Ethernet port: 1.5KV magnetic isolation protection
- RS232/RS485/RS422 port: 15KV ESD protection
- SIM/UIM port: 15KV ESD protection
- Antenna port: lightning protection(optional)

Standard and Convenience

- Support all kinds of the Intelligent WIFI terminals
- Smart data terminal, enter into communication state automatically when powered
- Provides standard wired network and wireless 3G/4G network
- Small size device,rapid establishment of wireless network to use
- Provide powerful business platform for equipment management, content management and release, report management, user behavior statistics analysis, authority management, alarm management, billing system (optional) and other functions


High-performance

- Support website redirection, local captive portal, remote captive portal(optional)
- Support various authentication ways, including mobile phone number authentication, Wechat authentication, Weibo authentication, QQ authentication and without authentication.
- Support WIFI channel hopping for anti-interference
- Support English SSID
- Support SSD(Solid State Disk) and TF card for local storage(TF card is optional)
- WIFI TX power is configurable for optimized wireless coverage
- Support WEB server. Supports PHP, XML, and database storage(optional)

- Support WIFI inspector
- Support black/white list of URL, account, IP address, MAC address
- Support traffic statistics. Support monitoring of device traffic, user traffic and online duration monitoring.
- Support user's surfing behavior record, local PV/UV statistics and transmit these data to server at real time for data statistics analysis.
- Support real time log auditing based on user's URL access
- Local information contains advertisement, news, APP, video, music, etc. Support various video formats and streaming media delivery
- Local information update support whole update and incremental update, support grouping update, support break-point resume and outage resume, support A/B backup, support update via 3G/4G, FTP, station WIFI(optional) and U disk upgrades(optional)
- Support remote firmware upgrade, including upgrade on single device, devices in patch and automatic upgrade(optional), support break-point resume, outage resume(optional), U disk upgrades (optional)
- Support remote terminal parameters configuration, can be a single, batch configuration, custom configuration, at the same time support online/offline equipment configuration and U disk field configuration (optional)
- Support monitoring device status at real time, including CPU, memory, signal strength, network status, storage and alarm
- Supports completed functionality of router
- Support SPI firewall, access restriction, URL filter, QoS, NAT, etc
- Support NTP, schedule reboot and schedule boot/shutdown with in built RTC
- Support various WAN connection types, including static IP, DHCP, PPPoE, 3G / 4G, etc
- Support 3G/4G network and Ethernet WAN for backup(optional)
- Support VPN client and VPN server(PPTP, L2TP, OPENVPN, IPSEC and GRE(only VPN version supports)
- Support the GPS/beidou positioning function (optional)

1.3 Working Principle

The principle chart of the router is as following:

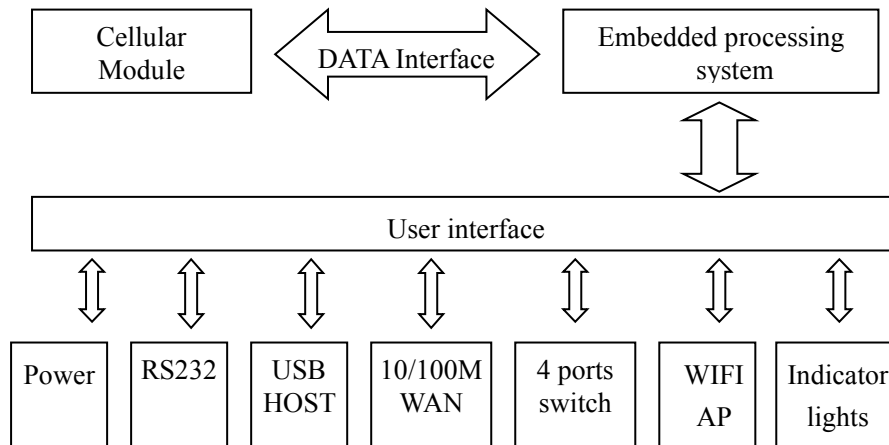

1.4 Product Specifications

Cellular Specification

Item	Content
Cellular Module	High-performance cellular module (optional single module, double module or no module)
Standard	Can support: TDD-LTE/FDD-LTE/EVDO/WCDMA/TD-SCDMA/CDMA1X/GPRS/EDGE Optional support:single-mode,multi-mode or All network communication
Bandwidth	FDD LTE(DL:100Mbps,UL:50Mbps) TDD LTE(DL:61Mbps,UL:18Mbps) CDMA2000 1X EVDO Rev A (DL:3.1Mbps,UL:1.8Mbps) WCDMA(DL:42Mbps,UL:5.76Mbps) TD-SCDMA(DL:4.2Mbps,UL:2.2Mbps)
TX power	<24dBm
RX sensitivity	<-109dBm

GPS Specification

Item	Content
GPS Module	Industrial GPS module(optional beidou module)
Receiver Type	50-channle GPS L1(1575.42MHz)C/A code SBAS: WAAS,EGNOS,MSAS,GAGAN

Max. update rate	5 Hz
Accuracy	Position: 2.5m CPE SBAS: 2.0m CPE
Sensitivity	Tracking: -160dBm Reacquisition: -160dBm Cold starts: -146dBm

WIFI Specification

Item	Content
Standard	IEEE802.11b/g/n, 2.4G, 2*2 MIMO, AP model, Station model(optional)
Bandwidth	IEEE802.11b/g: 108Mbps (max) IEEE802.11n: 300Mbps (max)
Security	WEP, WPA, WPA2, etc. WPS (optional)
TX power	20dBm (11n), 21.5dBm (11g), 26dBm (11b)
RX sensitivity	<-75dBm@54Mbps

Hardware System

Item	Content
CPU	High-performance 32bits CPU
FLASH	32MB(Extendable to 64MB)
DDR2	256MB
SSD	128GB(optional, Extendable to 2TB)
TF	32GB(optional)

Interface Type

Item	Content
WAN	1 10/100 Mbps WAN port(RJ45), auto MDI/MDIX, 1.5KV magnetic isolation protection
LAN	1 10/100 Mbps Ethernet ports(RJ45), auto MDI/MDIX, 1.5KV magnetic isolation protection
Serial	1 RS232(or RS485/RS422) port, 15KV ESD protection Data bits: 8(optional 5, 6, 7) Stop bits: 1, 1.5(optional), 2 Parity: none, even, odd, space(optional), mark(optional) Baud rate: 2400~115200 bps
Indicator	“PWR”、“SYS”、“SIM”、“GPS”、“Online”、“SSD”、“TF”、“LAN”、“WAN”、“WIFI”, "Signal Strength"(Indicator according to the configuration)
Antenna	Cellular: Standard SMA female interface, 50 ohm, lightning protection(optional one, two or not) GPS: One standard SMA female interface, 50 ohm, lightning protection(optional)

	WIFI: Two standard SMA male interface, 50 ohm, lightning protection
SIM/UIM	Standard 3V/1.8V user card interface, 15KV ESD protection
USB	Standard A type USB host interface, support USB 2.0 High-speed
TF	Standard TF card interface
Power	Aviation plug or vehicle power jack, reverse-voltage and overvoltage protection
Reset	Restore the router to its original factory default settings



Power Supply

Item	Content	
Standard Power	DC 12V/1.5A	
Power range	DC 9~36V	
Working current	3G : <750mA (12V)	4G : <850mA (12V)
Standby current	3G : <450mA (12V)	4G : <500mA (12V)

Physical Characteristics

Item	Content
Housing	Metal shell, shock proof design
Dimensions	244x139x36 mm
Weight	940g

Other Specification

Item	Content
Operating Temperature	-35~+75°C (-31~+167°F)
Storage Temperature	-40~+85°C (-40~+185°F)
Operating Humidity	95% (unfreezing)

Chapter 2 Installation Introduction

2.1 General

The router must be installed correctly to make it work properly.

Warning: Forbid to install the router when powered!

2.2 Encasement List


Name	Quantity	Remark
Router host	1	
Cellular antenna (Male SMA)	1(Note 1)	
GPS antenna (Male SMA)	1	optional
WIFI antenna (Female SMA)	2	
Aviation plug power cord	1	
Network cable	1	
Console cable	1	optional
Power adapter	1	optional
Manual CD	1	
Certification card	1	
Maintenance card	1	

Note1: Cellular antenna (Male SMA) 1 pcs for 3G configuration and 2 pcs for 4G configuration.

2.3 Installation and Cable Connection

Overall dimensions:

The dimensions below. (unit: mm)

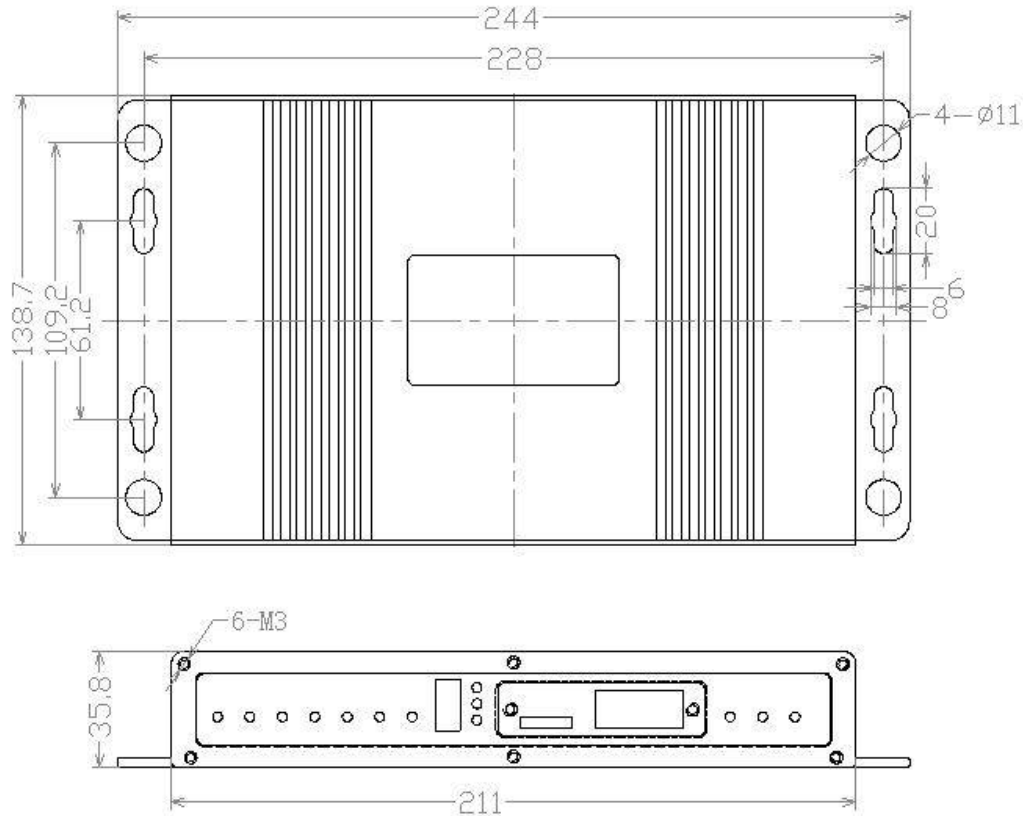

Installation of antenna:

Screw the SMA male pin of the cellular antenna to the female SMA interface of the router with sign “ANT-M”, “ANT-A” or “ANT”.

Screw the SMA male pin of the GPS antenna to the female SMA interface of the router with sign “GPS”.

Screw the SMA female pin of the WIFI antenna to the male SMA interface of the router with sign “WIFI”.

Warning: The cellular antenna, The GPS antenna and the WIFI antenna can not be connected wrongly. And the antennas must be screwed tightly, or the signal quality of antenna will be influenced!

Installation of SIM/UM card:

Firstly power off the router, and press the out button of the SIM/UM card outlet with a needle object. Then the SIM/UM card sheath will flick out at once. Put SIM/UM card into the card sheath (Pay attention to put the side which has metal point outside), and insert card sheath back to the SIM/UM card outlet.

Warning: Forbid to install SIM/UM card when powered!

Installation of cable:

Insert one end of the network cable into the switch interface with sign “Local Network”, and insert the other end into the Ethernet interface of user’s device. The signal connection of network

direct cable is as follows:

RJ45-1	RJ45-2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Insert the RJ45 end of the console cable into the RJ45 outlet with sign “console”, and insert the DB9F end of the console cable into the RS232 serial interface of user’s device.

The signal connection of the console cable is as follows:

RJ45	DB9F
1	8
2	6
3	2
4	1
5	5
6	3
7	4
8	7

The signal definition of the DB9F serial communication interface is as follows:

Pin	RS232 signal name	The direction for Router
1	DCD	output
2	RXD	output
3	TXD	input
4	DTR	input
5	GND	
6	DSR	output
7	RTS	input
8	CTS	output

2.4 Power

The power range of the router is DC 9~36V.

Warning: When we use other power, we should make sure that the power can supply power above 7W.

We recommend user to use the standard DC 12V/1.5A power.

2.5 Indicator Lights Introduction

The router provides following indicator lights: “PWR”, “SYS”, “SIM”, “GPS”, “Online”, “SSD”, “TF”, “LAN”, “WAN”, “WIFI”, “Signal Strength”.

Indicator Light	State	Introduction
PWR	ON	Router is powered on
	OFF	Router is powered off or in the shutdown period of schedule boot&shutdown
SYS	BLINK	System works properly
	OFF	System does not work
SIM	ON	Router identification to SIM card
	OFF	Router has not identification to SIM card
GPS	ON	GPS interface connected/is data communication
	OFF	GPS interface does not connected
Online	ON	Router has logged on network
	BLINK	Router not connected on the network platform
	OFF	Router hasn't logged on network
SSD	ON	Router identification to hard disk
	BLINK	Router reading or writing hard disk data
	OFF	Router has not identified to hard disk
TF	ON	Router identification to TF card
	OFF	Router has not identification to TF card
LAN	OFF	The corresponding interface of switch is not connected
	BLINK	The corresponding interface of switch is communication
	ON / BLINK	The corresponding interface of switch is connected /communicating
WAN	OFF	The interface of WAN is not connected
	BLINK	The interface of WAN is communicating
	ON	The interface of WAN is connected /communicating
WIFI	OFF	WIFI is not active
	ON	WIFI is active
Signal Strength	One Light ON	Signal strength is weak

	Two Lights ON	Signal strength is medium
	Three Lights ON	Signal strength is good

2.6 Reset Button Introduction


The router has a “Reset” button to restore it to its original factory default settings. When user press the “Reset” button for up to 15s, the router will restore to its original factory default settings and restart automatically.

Chapter 3 Configuration and Management

This chapter describes how to configure and manage the router.

3.1 Configuration Connection

Before configuration, you should connect the router and your configuration PC with the supplied network cable. Plug the cable's one end into the Local Network port of the router, and another end into your configure PC's Ethernet port. The connection diagram is as following:

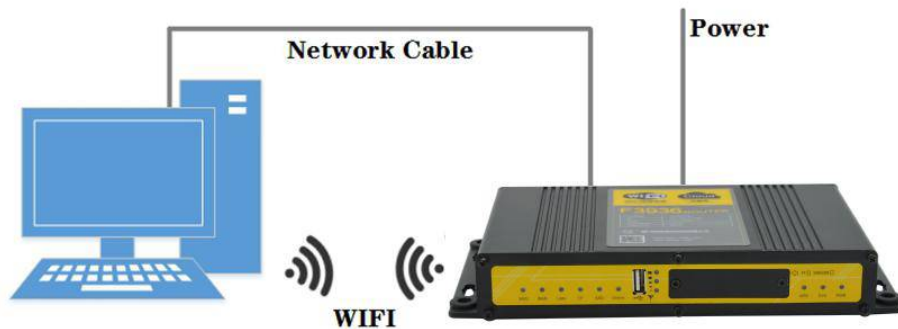

Please modify the IP address of PC as the same network segment address of the router, for instance, 192.168.1.9. Modify the mask code of PC as 255.255.255.0 and set the default gateway of PC as the router's IP address (192.168.1.1).

3.2 Access the Configuration Web Page

The chapter is to present main functions of each page. Users visit page tool via web browser after connect users' PC to the router. There are eleven main pages: Setting, Wireless, Service, VPN, Security, Access Restrictions, NAT, QoS Setting, Applications, Management and Status. Users enable to browse slave pages by click one main page..

Users can open IE or other explorers and enter the router's default IP address of 192.168.1.1:90 on address bar, then press the bottom of Enter to visit page Web management tool of the router. The users login in the web page at the first name, there will display a page shows as blow to tip users to modify the default user name and password of the router. Users have to click "change password" to make it work if they modify user name and password.

Router Management

Your Router is currently not protected and uses an unsafe default username and password combination, please change it using the following dialog!

Router Password

Router Username	<input type="text" value="admin"/>
Router Password	<input type="password" value="••••"/>
Re-enter to confirm	<input type="password" value="••••"/>

Change Password

After access to the information main page

Menu	System Information		Services																											
Setup Wireless Services Security NAT Access Restrictions QoS Setting Applications Administration Status	Router <table> <tr><td>Router Name</td><td>Four-Faith</td></tr> <tr><td>Router Model</td><td>Four-Faith Router</td></tr> <tr><td>LAN MAC</td><td>00:0C:43:AD:B9:16</td></tr> <tr><td>WAN MAC</td><td>00:0C:43:AD:B9:16</td></tr> <tr><td>Wireless MAC</td><td>00:0C:43:AD:B9:18</td></tr> <tr><td>WAN IP</td><td>192.168.9.99</td></tr> <tr><td>LAN IP</td><td>192.168.1.1</td></tr> </table>	Router Name	Four-Faith	Router Model	Four-Faith Router	LAN MAC	00:0C:43:AD:B9:16	WAN MAC	00:0C:43:AD:B9:16	Wireless MAC	00:0C:43:AD:B9:18	WAN IP	192.168.9.99	LAN IP	192.168.1.1	<table> <tr><td>DHCP Server</td><td>Enabled</td></tr> <tr><td>ff-radauth</td><td>Disabled</td></tr> <tr><td>USB Support</td><td>Enabled</td></tr> </table>	DHCP Server	Enabled	ff-radauth	Disabled	USB Support	Enabled								
Router Name	Four-Faith																													
Router Model	Four-Faith Router																													
LAN MAC	00:0C:43:AD:B9:16																													
WAN MAC	00:0C:43:AD:B9:16																													
Wireless MAC	00:0C:43:AD:B9:18																													
WAN IP	192.168.9.99																													
LAN IP	192.168.1.1																													
DHCP Server	Enabled																													
ff-radauth	Disabled																													
USB Support	Enabled																													
	Wireless <table> <tr><td>Radio</td><td>Radio is On</td></tr> <tr><td>Mode</td><td>AP</td></tr> <tr><td>Network</td><td>Mixed</td></tr> <tr><td>SSID</td><td>SSID</td></tr> <tr><td>Channel</td><td>10 (2457 MHz)</td></tr> <tr><td>TX Power</td><td>100 mW</td></tr> <tr><td>Rate</td><td>300 Mb/s</td></tr> </table>	Radio	Radio is On	Mode	AP	Network	Mixed	SSID	SSID	Channel	10 (2457 MHz)	TX Power	100 mW	Rate	300 Mb/s	Memory <table> <tr><td>Total Available</td><td>249.2 MB / 256.0 MB</td></tr> <tr><td>Free</td><td>184.4 MB / 249.2 MB</td></tr> <tr><td>Used</td><td>64.8 MB / 249.2 MB</td></tr> <tr><td>Buffers</td><td>37.9 MB / 64.8 MB</td></tr> <tr><td>Cached</td><td>8.3 MB / 64.8 MB</td></tr> <tr><td>Active</td><td>15.6 MB / 64.8 MB</td></tr> <tr><td>Inactive</td><td>32.9 MB / 64.8 MB</td></tr> </table>	Total Available	249.2 MB / 256.0 MB	Free	184.4 MB / 249.2 MB	Used	64.8 MB / 249.2 MB	Buffers	37.9 MB / 64.8 MB	Cached	8.3 MB / 64.8 MB	Active	15.6 MB / 64.8 MB	Inactive	32.9 MB / 64.8 MB
Radio	Radio is On																													
Mode	AP																													
Network	Mixed																													
SSID	SSID																													
Channel	10 (2457 MHz)																													
TX Power	100 mW																													
Rate	300 Mb/s																													
Total Available	249.2 MB / 256.0 MB																													
Free	184.4 MB / 249.2 MB																													
Used	64.8 MB / 249.2 MB																													
Buffers	37.9 MB / 64.8 MB																													
Cached	8.3 MB / 64.8 MB																													
Active	15.6 MB / 64.8 MB																													
Inactive	32.9 MB / 64.8 MB																													
	Wireless Packet Info <table> <tr><td>Received (RX)</td><td>0 OK, no error</td></tr> <tr><td>Transmitted (TX)</td><td>0 OK, no error</td></tr> </table>	Received (RX)	0 OK, no error	Transmitted (TX)	0 OK, no error																									
Received (RX)	0 OK, no error																													
Transmitted (TX)	0 OK, no error																													

Menu	System Information		Services																											
Setup Wireless Services Security NAT Access Restrictions QoS Setting Applications Administration Status	Router <table> <tr><td>Router Name</td><td>Four-Faith</td></tr> <tr><td>Router Model</td><td>Four-Faith Router</td></tr> <tr><td>LAN MAC</td><td>00:0C:43:AD:B9:16</td></tr> <tr><td>WAN MAC</td><td>00:0C:43:AD:B9:16</td></tr> <tr><td>Wireless MAC</td><td>00:0C:43:AD:B9:18</td></tr> <tr><td>WAN IP</td><td>192.168.9.99</td></tr> <tr><td>LAN IP</td><td>192.168.1.1</td></tr> </table>	Router Name	Four-Faith	Router Model	Four-Faith Router	LAN MAC	00:0C:43:AD:B9:16	WAN MAC	00:0C:43:AD:B9:16	Wireless MAC	00:0C:43:AD:B9:18	WAN IP	192.168.9.99	LAN IP	192.168.1.1	<table> <tr><td>DHCP Server</td><td>Enabled</td></tr> <tr><td>ff-radauth</td><td>Disabled</td></tr> <tr><td>USB Support</td><td>Enabled</td></tr> </table>	DHCP Server	Enabled	ff-radauth	Disabled	USB Support	Enabled								
Router Name	Four-Faith																													
Router Model	Four-Faith Router																													
LAN MAC	00:0C:43:AD:B9:16																													
WAN MAC	00:0C:43:AD:B9:16																													
Wireless MAC	00:0C:43:AD:B9:18																													
WAN IP	192.168.9.99																													
LAN IP	192.168.1.1																													
DHCP Server	Enabled																													
ff-radauth	Disabled																													
USB Support	Enabled																													
	Wireless <table> <tr><td>Radio</td><td>Radio is On</td></tr> <tr><td>Mode</td><td>AP</td></tr> <tr><td>Network</td><td>Mixed</td></tr> <tr><td>SSID</td><td>SSID</td></tr> <tr><td>Channel</td><td>10 (2457 MHz)</td></tr> <tr><td>TX Power</td><td>100 mW</td></tr> <tr><td>Rate</td><td>300 Mb/s</td></tr> </table>	Radio	Radio is On	Mode	AP	Network	Mixed	SSID	SSID	Channel	10 (2457 MHz)	TX Power	100 mW	Rate	300 Mb/s	Memory <table> <tr><td>Total Available</td><td>249.2 MB / 256.0 MB</td></tr> <tr><td>Free</td><td>184.4 MB / 249.2 MB</td></tr> <tr><td>Used</td><td>64.8 MB / 249.2 MB</td></tr> <tr><td>Buffers</td><td>37.9 MB / 64.8 MB</td></tr> <tr><td>Cached</td><td>8.3 MB / 64.8 MB</td></tr> <tr><td>Active</td><td>15.6 MB / 64.8 MB</td></tr> <tr><td>Inactive</td><td>32.9 MB / 64.8 MB</td></tr> </table>	Total Available	249.2 MB / 256.0 MB	Free	184.4 MB / 249.2 MB	Used	64.8 MB / 249.2 MB	Buffers	37.9 MB / 64.8 MB	Cached	8.3 MB / 64.8 MB	Active	15.6 MB / 64.8 MB	Inactive	32.9 MB / 64.8 MB
Radio	Radio is On																													
Mode	AP																													
Network	Mixed																													
SSID	SSID																													
Channel	10 (2457 MHz)																													
TX Power	100 mW																													
Rate	300 Mb/s																													
Total Available	249.2 MB / 256.0 MB																													
Free	184.4 MB / 249.2 MB																													
Used	64.8 MB / 249.2 MB																													
Buffers	37.9 MB / 64.8 MB																													
Cached	8.3 MB / 64.8 MB																													
Active	15.6 MB / 64.8 MB																													
Inactive	32.9 MB / 64.8 MB																													
	Wireless Packet Info <table> <tr><td>Received (RX)</td><td>0 OK, no error</td></tr> <tr><td>Transmitted (TX)</td><td>0 OK, no error</td></tr> </table>	Received (RX)	0 OK, no error	Transmitted (TX)	0 OK, no error																									
Received (RX)	0 OK, no error																													
Transmitted (TX)	0 OK, no error																													

Users need to input user name and password if it is their first time to login.



Input correct user name and password to visit relevant menu page. Default user name is admin, password is admin. (available to modify user name and password on management page, then click submit)

3.3 Management and configuration

3.3.1 Setting

The Setup screen is the first screen users will see when accessing the router. Most users will be able to configure the router and get it work properly using only the settings on this screen. Some Internet Service Providers (ISPs) will require users to enter specific information, such as User Name, Password, IP Address, Default Gateway Address, or DNS IP Address. These information can be obtained from your ISP, if required.

3.3.1.1 Basic Setting

WAN Connection Type

Six Ways: Disabled, Static IP, Automatic DHCP, PPPOE, 3G/UNMTS/4G/LTE(Optional),dhcp-4G(Optional).

Disabled

Connection Type Disabled

Forbid the setting of WAN port connection type

Static IP

Connection Type Static IP

WAN IP Address 0.0.0.0

Subnet Mask 0.0.0.0

Gateway 0.0.0.0

Static DNS 1 0.0.0.0

Static DNS 2 0.0.0.0

Static DNS 3 0.0.0.0

WAN IP Address: Users set IP address by their own or ISP assigns

Subnet Mask: Users set subnet mask by their own or ISP assigns

Gateway: Users set gateway by their own or ISP assigns

Static DNS1/DNS2/DNS3: Users set static DNS by their own or ISP assigns

Automatic Configuration-DHCP

Connection Type Automatic Configuration - DHCP

IP address of WAN port gets automatic via DHCP

PPPOE

Connection Type PPPoE

User Name

Password ☐ Unmask

Service Name

PPP Compression (MPPC) ☐ Enable ☒ Disable

T-Home VDSL VLAN 7/8 Tagging ☐ Enable ☒ Disable

MPPE Encryption

Single Line Multi Link ☐

User Name: login the Internet

Password: login the Internet

Service Name: provided by ISP server, if not, keep it null

PPP Compression (MPPC): provides a method to negotiation and use of compressed in PPP encapsulation link protocol

T-Home VDSL VLAN 7/8 Tagging: enable to support the front of the modem is vdsl

MPPE Encryption: Microsoft point to point encryption. It is used to encrypt the point-to-point link connection agreement of the encrypted data packet

Single Line Multi Link: enable single line link or disable multi link

3G/UMTS/4G/LTE（可选）

Connection Type	<input type="text" value="3G/UMTS/4G/LTE"/>	
User Name	<input type="text"/>	
Password	<input type="text"/>	<input type="checkbox"/> Unmask
Dial String	<input type="text" value="*99***1# (UMTS/3G/3.5G)"/>	
APN	<input type="text"/>	
PIN	<input type="text"/>	<input type="checkbox"/> Unmask

User Name: login users' ISP(Internet Service Provider)

Password: login users' ISP

Dial String: dial number of users' ISP

APN: access point name of users' ISP

PIN: PIN code of users' SIM card

Connection type

Connection type	<input type="text" value="Auto"/>
-----------------	-----------------------------------

Connection type: Auto, Force 3G, Force 2G, Prefer 3G, Prefer 2G options. If using 4G module, there has 4G network option. Users select different mode depending on their need

Keep Online

Keep Online Detection	<input type="text" value="Ping"/>
Detection Interval	<input type="text" value="60"/> Sec.
Primary Detection Server IP	<input type="text" value="166"/> . <input type="text" value="111"/> . <input type="text" value="8"/> . <input type="text" value="238"/>
Backup Detection Server IP	<input type="text" value="202"/> . <input type="text" value="119"/> . <input type="text" value="32"/> . <input type="text" value="102"/>

This function is used to detect whether the Internet connection is active, if users set it and when the router detect the connection is inactive, it will redial to users' ISP immediately to make the connection active.

Detection Method:

None: do not set this function

Ping: Send ping packet to detect the connection, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

Route: Detect connection with route method, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

PPP: Detect connection with PPP method, when choose this method, users should also configure "Detection Interval" item.

Detection Interval: time interval between two detections, unit is second

Primary Detection Server IP: the server used to response the router's detection packet. This item is only valid for method "Ping" and "Route".

Backup Detection Server IP: the server used to response the router's detection packet. This item is valid for method "Ping" and "Route".

Note: When users choose the "Route" or "Ping" method, it's quite important to make sure that the "Primary Detection Server IP" and "Backup Detection Server IP" are usable and stable, because they have to response the detection packet frequently.

Connection Strategy

Connection Strategy

☐ Connect on Demand: Max Idle Time Min.

☒ Keep Alive: Redial Period Sec.

Connection Strategy: one way is Connect on Demand, that is the link turnoff automatic under the situation that the ready link is idle and idle time meets users' configuration requirement, but it will connect again if users visit Internet. The other way is to keep alive, that is the link enable to dial again when reaching the re-dial period users set after disconnection.

Force reconnect ☒ Enable ☐ Disable

Time

Force reconnect: this option schedules the pppoe or 3G reconnection by killing the pppd daemon and restart it.

Time: needed time to reconnect

STP

STP ☐ Enable ☒ Disable

STP (Spanning Tree Protocol) can be applied to loop network. Through certain algorithm achieves path redundancy, and loop network cuts to tree-based network without loop in the meantime, thus to avoid the hyperplasia and infinite circulation of a message in the loop network

Dhcp-4G（可选）

WAN Connection Type

Connection Type	dhcp-4G		
User Name	card		
Password	<input type="password"/> <input type="checkbox"/> Unmask		
Keep Online Detection	Ping		
Detection Interval	120 Sec.		
Primary Detection Server IP	208	67	222
Backup Detection Server IP	208	67	220
Wan Nat	<input checked="" type="radio"/> Enable <input type="radio"/> Disable		
STP	<input type="radio"/> Enable <input checked="" type="radio"/> Disable		

Detection Method:

None: do not set this function

Ping: Send ping packet to detect the connection, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

Route: Detect connection with route method, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

Detection Interval: time interval between two detections, unit is second

Primary Detection Server IP: the server used to response the router's detection packet. This item is only valid for method "Ping" and "Route".

Backup Detection Server IP: the server used to response the router's detection packet. This item is valid for method "Ping" and "Route".

Optional Configuration

Router Name	Four-Faith
Host Name	
Domain Name	
MTU	<input checked="" type="radio"/> Auto <input type="radio"/> 1500

Router Name: set router name

Host Name: ISP provides

Domain Name: ISP provides

MTU: auto (1500) and manual (1200-1492 in PPPOE/PPTP/L2TP mode, 576-16320 in other modes)

Router Internal Network Settings

Router IP

Local IP Address	192	.	168	.	1	.	1
Subnet Mask	255	.	255	.	255	.	0
Gateway	0	.	0	.	0	.	0
Local DNS	0	.	0	.	0	.	0

Local IP Address: IP address of the router

Subnet Mask: the subnet mask of the router

Gateway: set internal gateway of the router. If default, internal gateway is the address of the router

Local DNS: DNS server is auto assigned by network operator server. Users enable to use their own DNS server or other stable DNS servers, if not, keep it default

Network Address Server Settings (DHCP)

These settings for the router's Dynamic Host Configuration Protocol (DHCP) server functionality configuration. The Router can serve as a network DHCP server. DHCP server automatically assigns an IP address for each computer in the network. If they choose to enable the router's DHCP server option, users can set all the computers on the LAN to automatically obtain an IP address and DNS, and make sure no other DHCP server in the network.

DHCP Type	DHCP Server
DHCP Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Start IP Address	192.168.1.100
Maximum DHCP Users	50
Client Lease Time	1440 minutes
Static DNS 1	0.0.0.0
Static DNS 2	0.0.0.0
Static DNS 3	0.0.0.0
WINS	0.0.0.0
Use DNSMasq for DHCP	<input checked="" type="checkbox"/>
Use DNSMasq for DNS	<input checked="" type="checkbox"/>
DHCP-Authoritative	<input checked="" type="checkbox"/>

DHCP Type: DHCP Server and DHCP Forwarder

Enter DHCP Server if set DHCP Type to DHCP Forwarder as blow:

DHCP Type	DHCP Forwarder ▼
DHCP Server	0 . 0 . 0 . 0

DHCP Server: keep the default Enable to enable the router's DHCP server option. If users have already have a DHCP server on their network or users do not want a DHCP server, then select Disable

Start IP Address: enter a numerical value for the DHCP server to start with when issuing IP addresses. Do not start with 192.168.1.1 (the router's own IP address).

Maximum DHCP Users: enter the maximum number of PCs that users want the DHCP server to assign IP addresses to. The absolute maximum is 253 if 192.168.1.2 is users' starting IP address.

Client Lease Time: the Client Lease Time is the amount of time a network user will be allowed connection to the router with their current dynamic IP address. Enter the amount of time, in minutes, that the user will be "leased" this dynamic IP address.

Static DNS (1-3): the Domain Name System (DNS) is how the Internet translates domain or website names into Internet addresses or URLs. Users' ISP will provide them with at least one DNS Server IP address. If users wish to utilize another, enter that IP address in one of these fields. Users can enter up to three DNS Server IP addresses here. The router will utilize them for quicker access to functioning DNS servers.

WINS: the Windows Internet Naming Service (WINS) manages each PC's interaction with the Internet. If users use a WINS server, enter that server's IP address here. Otherwise, leave it blank.

DNSMasq: users' domain name in the field of local search, increase the expansion of the host option, to adopt DNSMasq can assign IP addresses and DNS for the subnet, if select DNSMasq, dhcpd service is used for the subnet IP address and DNS.

Time Settings

Select time zone of your location. To use local time, leave the checkmark in the box next to Use local time.

NTP Client	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Time Zone	UTC+08:00 ▼
Summer Time (DST)	last Sun Mar - last Sun Oct ▼
Server IP/Name	<input type="text"/>

NTP Client: Get the system time from NTP server

Time Zone: Time zone options

Summer Time (DST): set it depends on users' location

Server IP/Name: IP address of NTP server, up to 32 characters. If blank, the system will find a server by default

Adjust Time

Time	2012 - 3 - 15 9 : 16 : 20	<input type="button" value="Get"/> <input type="button" value="Set"/>
------	---------------------------	---

To adjust time by the system and refresh to get the time of the web, user can set to modify the time of the system. They can change to adjust time by manual to achieve adjust time by the system if the system fails to get NTP server

3.3.1.2 Dynamic DNS

If user's network has a permanently assigned IP address, users can register a domain name and have that name linked with their IP address by public Domain Name Servers (DNS). However, if their Internet account uses a dynamically assigned IP address, users will not know in advance what their IP address will be, and the address can change frequently. In this case, users can use a commercial dynamic DNS service, which allows them to register their domain to their IP address, and will forward traffic directed at their domain to their frequently-changing IP address.

DDNS Service: router currently support DynDNS, freedns, Zoneedit, NO-IP, 3322, easyDNS, TZO, DynSIP and Custom based on the user.

DDNS Service	<input type="text" value="3322.org"/>	<input type="button" value="v"/>
User Name	<input type="text"/>	
Password	<input type="text"/>	<input type="checkbox"/> Unmask
Host Name	<input type="text"/>	
Type	<input type="text" value="Dynamic"/>	
Wildcard	<input type="checkbox"/>	
Do not use external ip check	<input checked="" type="radio"/> Yes <input type="radio"/> No	

User Name: users register in DDNS server, up to 64 characteristic

Password: password for the user name that users register in DDNS server, up to 32 characteristic

Host Name: users register in DDNS server, no limited for input characteristic for now

Type: depends on the server

Wildcard: support wildcard or not, the default is OFF. ON means *.host.3322.org is equal to host.3322.org

Do not use external ip check: enable or disable the function of 'do not use external ip check'

Force Update Interval	<input type="text" value="10"/>	(Default: 10 Days, Range: 1 - 60)
-----------------------	---------------------------------	-----------------------------------

Force Update Interval: unit is day, try forcing the update dynamic DNS to the server by setted days

Status

DDNS Status

```
Fri Nov 25 13:58:32 2011: INADYN: Started 'INADYN Advanced version 1.96-ADV' - dynamic DNS updater.
Fri Nov 25 13:58:32 2011: INADYN: IP read from cache file is '192.168.8.222'. No update required.
Fri Nov 25 13:58:32 2011: I:INADYN: IP address for alias 'testsixin.3322.org' needs update to '192.168.8.38'
Fri Nov 25 13:58:33 2011: I:INADYN: Alias 'testsixin.3322.org' to IP '192.168.8.38' updated successfully.
```

DDNS Status shows connection log information

3.3.1.3 Clone MAC Address

Some ISP need the users to register their MAC address. The users can clone the router MAC address to their MAC address registered in ISP if they do not want to re-register their MAC address

☒ Enable ☐ Disable

Clone LAN MAC

00 : AA : BB : CC : DD : 43

Clone WAN MAC

00 : AA : BB : CC : DD : 44

Get Current PC MAC Address

Clone Wireless MAC

00 : AA : BB : CC : DD : 45

Clone MAC address can clone three parts: Clone LAN MAC, Clone WAN MAC, Clone Wireless MAC.

Noted that one MAC address is 48 characteristic, can not be set to the multicast address, the first byte must be even. And MAC address value of network bridge br0 is determined by the smaller value of wireless MAC address and LAN port MAC address.

3.3.1.4 Advanced Router

Operating Mode: Gateway and Router

Operating Mode

Operating Mode

Gateway ▼

If the router is hosting users' Internet connection, select Gateway mode. If another router exists on their network, select Router mode.

Dynamic Routing

Dynamic Routing

Interface
Disable ▼

Dynamic Routing enables the router to automatically adjust to physical changes in the network's layout and exchange routing tables with other routers. The router determines the network packets' route based on the fewest number of hops between the source and destination.

To enable the Dynamic Routing feature for the WAN side, select WAN. To enable this feature for the LAN and wireless side, select LAN&WLAN. To enable the feature for both the WAN and LAN, select Both. To disable the Dynamic Routing feature for all data transmissions, keep the default setting, Disable.

Note: Dynamic Routing is not available in Gateway mode

Static Routing

Static Routing

Select set number
1 () ▼
Delete

Route Name

Metric

Destination LAN NET

.

.

.

Subnet Mask

.

.

.

Gateway

.

.

.

Interface
LAN & WLAN ▼

Show Routing Table

Select set number: 1-50

Route Name: defined routing name by users, up to 25 characters

Metric: 0-9999

Destination LAN NET: the Destination IP Address is the address of the network or host to which users want to assign a static route

Subnet Mask: the Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion

Gateway: IP address of the gateway device that allows for contact between the router and the network or host.

Interface: indicate users whether the Destination IP Address is on the LAN & WLAN (internal wired and wireless networks), the WAN (Internet), or Loopback (a dummy network in which one PC acts like a network, necessary for certain software programs)

Show Routing Table

Routing Table Entry List

Destination LAN NET	Subnet Mask	Gateway	Interface
192.168.1.1	255.255.255.255	0.0.0.0	WAN
192.168.1.0	255.255.255.0	0.0.0.0	LAN & WLAN
192.168.1.0	255.255.255.0	0.0.0.0	WAN
169.254.0.0	255.255.0.0	0.0.0.0	WAN
0.0.0.0	0.0.0.0	192.168.1.1	LAN & WLAN

Refresh

Close

3.3.1.5 VLANs

VLAN

VLAN	Port					Assigned To Bridge
	W	1	2	3	4	
1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	LAN ▾
2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	LAN ▾
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	LAN ▾
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	LAN ▾
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
8	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
9	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
10	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
12	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
13	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
14	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾
15	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	None ▾

VLANs function is to divide different VLAN ports by users' will. The system supports 15 VLAN port from VLAN1-VLAN15. However there is only 5 time ports (1 WAN port and 4 LAN port) divided by users themselves, and LAN port and WAN port disable to divide into one VLAN port meanwhile.

3.3.1.6 Networking

Bridging

Create Bridge

Bridge 0

[Add](#)

br0
STP Off
Prio 32768
MTU 1500

Assign to Bridge

[Add](#)

Current Bridging Table

Bridge Name	STP-enabled	Interfaces
br0	no	vlan1 ra0

[Add/Delete Bridge](#)

Bridging-Create Bridge: creates a new empty network bridge for later use. STP means Spanning Tree Protocol and with PRIO users are able to set the bridge priority order. The lowest number has the highest priority.

Bridging - Assign to Bridge: allows users to assign any valid interface to a network bridge. Consider setting the Wireless Interface options to Bridged if they want to assign any Wireless Interface here. Any system specific bridge setting can be overridden here in this field.

Current Bridging Table: shows current bridging table

Create steps as below:

Click 'Add' to create a new bridge, configuration is as below:

Create Bridge

Bridge 0

Bridge 1

[Add](#)

br0
STP Off
Prio 32768
MTU 1500

br1
STP On
Prio 32768
MTU 1500
[Delete](#)

Create bridge option: the first br0 means bridge name. STP means to on/off spanning tree protocol. Prio means priority level of STP, the smaller the number, the higher the level. MTU means maximum transfer unit, default is 1500, delete if it is not need. And then click 'Save' or 'Add'. Bridge properties is as below:

Create Bridge

Bridge 0	br0	STP	Off	Prio	32768	MTU	1500	Delete
Bridge 1	br1	STP	On	Prio	32768	MTU	1500	Delete
IP Address	0 . 0 . 0 . 0							
Subnet Mask	0 . 0 . 0 . 0							
Add								

Enter relevant bridge IP address and subnet mask, click 'Add' to create a bridge.

Note: Only create a bridge can apply it.

Assign to Bridge

Assignment 0	none	Interface	ra0	Prio	63	Delete
Add						
<div> <div>none</div> <div>br0</div> <div>br1</div> </div>						

Assign to Bridge option: to assign different ports to created bridge. For example: assign port (wireless port) is ra0 in br1 bridge as below:

Prio means priority level: work if multiple ports are within the same bridge. The smaller the number, the higher the level. Click 'Add' to take it effect.

Note: corresponding interface of WAN ports interface should not be binding, this bridge function is basically used for LAN port, and should not be binding with WAN port

If bind success, bridge binding list in the list of current bridging table is as below:

Current Bridging Table

Bridge Name	STP enabled	Interfaces
br0	no	vlan1
br1	no	ra0

Auto Refresh is On

To make br1 bridge has the same function with DHCP assigned address, users need to set multiple DHCP function, see the introduction of multi-channel DHCPD:

Port Setup

Network Configuration eth2	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration vlan1	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration ra0	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration apcli0	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration wds0	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration wds1	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration wds2	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration wds3	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default
Network Configuration br0	<input type="radio"/> Unbridged	<input checked="" type="radio"/> Default

Port Setup: Set the port property, the default is not set

Network Configuration ra0	<input checked="" type="radio"/> Unbridged	<input type="radio"/> Default
MTU	<input type="text" value="1500"/>	
Multicast forwarding	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	
Masquerade / NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
IP Address	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>	
Subnet Mask	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>	

Choose not bridge to set the port's own properties, detailed properties are as below:

MTU: maximum transfer unit

Multicast forwarding: enable or disable multicast forwarding

Masquerade/NAT: enable or disable Masquerade/NAT

IP Address: set ra0's IP address, and do not conflict with other ports or bridge

Subnet Mask: set the port's subnet mask

Multiple DHCP Server

DHCP 0	<input type="text" value="ra0"/>	<input type="text" value="On"/>	Start	<input type="text" value="100"/>	Max	<input type="text" value="50"/>	Leasetime	<input type="text" value="3600"/>
<input type="button" value="Delete"/>								
<input type="button" value="Add"/>								

Multiple DHCPD: using multiple DHCP service. Click 'Add' in multiple DHCP server to appear relevant configuration. The first means the name of port or bridge (do not be configured as eth0), the second means whether to on DHCP. Start means start address, Max means maximum assigned DHCP clients, Leasetime means the client lease time, the unit is second, click 'Save' or 'Apply' to put it into effect after setting.

Note: Only configure and click 'Save' can configure the next, can not configure multiple DHCP at the same time.

3.3.2 Wireless

3.3.2.1 Basic Settings

Wireless Physical Interface wl0 [2.4 GHz]

Wireless Network
☒ Enable ☐ Disable

Physical Interface ra0 - SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

Wireless Mode AP ▼
 Wireless Network Mode N-Only ▼
 802.11n Transmission Mode Mixed ▼
 Wireless Network Name (SSID) dd-junjinlee
 Wireless Channel 11 - 2.462 GHz ▼
 Channel Width 40 MHz ▼
 Extension Channel upper ▼
 Wireless SSID Broadcast
☒ Enable ☐ Disable

 Network Configuration
☐ Unbridged ☒ Bridged

Virtual Interfaces

Add

Save
Apply Settings
Cancel Changes

Wireless Network: “Eanble”, radio on.
 “Disable”, radio off.

Wireless Mode: AP, Client, Adhoc, Repeater, Repeater Bridge four options。

Wireless Network Mode:

Mixed: Support 802.11b, 802.11g, 802.11n wireless devices.

BG-Mixed: Support 802.11b, 802.11g wireless devices.

B-only: Only supports the 802.11b standard wireless devices.

B-only: Only supports the 802.11b standard wireless devices.

G-only: Only supports the 802.11g standard wireless devices.

NG-Mixed: Support 802.11g, 802.11n wireless devices.

N-only: Only supports the 802.11g standard wireless devices.

8021.11n Transmission Mode: In the wireless network mode to "N-only" choose to transfer its

Page 33 of 77

transmission mode.

Greenfield: When you determine the surrounding environment, there is no other 802.11a/b/g devices use the same channel, use this mode to increase throughput. Other 802.11a/b/g devices use the same channel in the environment, the information you send may generate an error, re-issued.

Mixed: This mode is contrary to the green mode, but will reduce the throughput.

Wireless Network Name(SSID): The SSID is the network name shared among all devices in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 32 alphanumeric characters, which may be any keyboard character. Make sure this setting is the same for all devices in your wireless network.。

Wireless Channel: A total of 1-13 channels to choose more than one wireless device environment, please try to avoid using the same channel with other devices.。

Channel Width: 20MHZ and 40MHZ。

Extension Channel: Channel for 40MHZ, you can choose upper or lower.

Wireless SSID Broadcast:

Enable: SSID broadcasting.

Disable: Hidden SSID.

Network Configuration:

Bridged: Bridge to the router, under normal circumstances, please select the bridge.

Unbridged: There is no bridge to the router, IP addresses need to manually configure.

Network Configuration	<input checked="" type="radio"/> Unbridged <input type="radio"/> Bridged
Multicast forwarding	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Masquerade / NAT	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
IP Address	192. 168. 1. 1
Subnet Mask	255. 255. 0. 0

Virtual Interfaces: Click Add to add a virtual interface. Add successfully, click on the remove, you can remove the virtual interface.

Virtual Interfaces

Virtual Interfaces ra1 SSID [dd-wrt_vap] HWAddr [00:AA:BB:CC:DD:16]

Wireless Network Name (SSID)	<input type="text" value="dd-wrt_vap"/>
Wireless SSID Broadcast	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
AP Isolation	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Network Configuration	<input type="radio"/> Unbridged <input checked="" type="radio"/> Bridged

AP Isolation: This setting isolates wireless clients so access to and from other wireless clients are stopped.

Note : Save your changes, after changing the "Wireless Mode", "Wireless Network Mode",

"wireless width", "broadband" option, please click on this button, and then configure the other options.

3.3.2.2 Wireless Security

Wireless security options used to configure the security of your wireless network. This route is a total of seven kinds of wireless security mode. Disabled by default, not safe mode is enabled. Such as changes in Safe Mode, click Apply to take effect immediately.

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

Security Mode Disabled

Save
Apply Settings

Wireless Security w10

Physical Interface ra0 SSID [four-faith] HWAddr [00:0C:43:30:52:79]

Security Mode WEP

Authentication Type Open Shared Key

Default Transmit Key 1 2 3 4

Encryption 64 bits 10 hex digits/5 ASCII

ASCII/HEX ASCII HEX

Passphrase 1111111111111111 Generate

Key 1 2627F68597

Key 2 15AD1DD294

Key 3 DDC4761939

Key 4 31F1ADB558

WEP: Is a basic encryption algorithm is less secure than WPA. Use of WEP is discouraged due to security weaknesses, and one of the WPA modes should be used whenever possible. Only use WEP if you have clients that can only support WEP (usually older, 802.11b-only clients).

Authentication Type: Open or shared key.

Default Transmit Key: Select the key form Key 1 - Key 4 key.

Encryption: There are two levels of WEP encryption, 64-bit (40-bit) and 128-bit. To utilize WEP, select the desired encryption bit, and enter a passphrase or up to four WEP key in hexadecimal format. If you are using 64-bit (40-bit), then each key must consist of exactly 10 hexadecimal characters or 5 ASCII characters. For 128-bit, each key must consist of exactly 26 hexadecimal

Page 35 of 77

characters. Valid hexadecimal characters are "0"-"9" and "A"-"F".

ASCII/HEX: ASCII, the keys is 5 bit ASCII characters/13bit ASCII characters.

HEX, the keys is 10bit/26 bit hex digits.

Passphrase: The letters and numbers used to generate a key.

Key1-Key4: Manually fill out or generated according to input the pass phrase.

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

Security Mode	WPA Personal ▼	
WPA Algorithms	AES ▼	
WPA Shared Key	••••••••	<input type="checkbox"/> Unmask
Key Renewal Interval (in seconds)	3600	(Default: 3600, Range: 1 - 99999)

WPA Personal/WPA2 Personal/WPA2 Person Mixed: , TKIP/AES/TKIP+AES , dynamic encryption keys. TKIP + AES, self-applicable TKIP or AES. WPA Person Mixed, allow WPA Personal and WPA2 Personal client mix.

WPA Shared Key: Between 8 and 63 ASCII character or hexadecimal digits.。

Key Renewal Interval (in seconds): 1-99999。

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

Security Mode	WPA Enterprise ▼	
WPA Algorithms	AES ▼	
Radius Auth Server Address	192.168.1.110	
Radius Auth Server Port	1812	(Default: 1812)
Radius Auth Shared Secret	••••••••	<input type="checkbox"/> Unmask
Key Renewal Interval (in seconds)	3600	

WPA Enterprise/WPA2 Enterprise/WPA2 Enterprise Mixed: WPA Enterprise uses an external RADIUS server to perform user authentication.

WPA Algorithms: AES/TKIP/TPIP+AES.

Radius Auth Sever Address: The IP address of the RADIUS server.

Radius Auth Server Port: The RADIUS Port (default is 1812)。

Radius Auth Shared Secret: The shared secret from the RADIUS server。

Key Renewal Interva(in seconds): 1-99999。

3.3.3 Services

DHCP Client

DHCP Client

Set Vendorclass

Request IP

Set Vendorclass: the DHCP server can automatically identify the specific identifier of the computer running certain operating systems to send, such as the DHCP server can identify the DHCP client running the operating system is Windows 2000 or Windows 98. Identification identifier DHCP option can be assigned to DHCP clients based on specific operating system.

Request IP: IP address of the request

DHCP Server

DHCPd assigns IP addresses to users local devices. While the main configuration is on the setup page users can program some nifty special functions here.

DHCP Server

Use JFFS2 for client lease DB

(Not mounted)

Use NVRAM for client lease DB

☐

Used Domain

WAN ▼

LAN Domain

Additional DHCPd Options

Static Leases

MAC Address	Host Name	IP Address	Client Lease Time
			minutes

Add
Remove

Use NVRAM for client lease DB: users can store data to the system NVRAM area is enabled

Used domain: users can select here which domain the DHCP clients should get as their local domain. This can be the WAN domain set on the Setup screen or the LAN domain which can be set here.

LAN Domain: users can define here their local LAN domain which is used as local domain for DNSmasq and DHCP service if chose above.

Static Leases: if users want to assign certain hosts a specific address then they can define them here. This is also the way to add hosts with a fixed address to the router's local DNS service (DNSmasq).

Additional DHCPd Options: some extra options users can set by entering them

DNSMasq

DNSmasq is a local DNS server. It will resolve all host names known to the router from dhcp (dynamic and static) as well as forwarding and caching DNS entries from remote DNS servers. Local DNS enables DHCP clients on the LAN to resolve static and dynamic DHCP hostnames.

DNSMasq

☒ Enable
 ☐ Disable

Local DNS

☐ Enable
 ☒ Disable

No DNS Rebind

☒ Enable
 ☐ Disable

Additional DNSMasq Options

Local DNS: enables DHCP clients on the LAN to resolve static and dynamic DHCP hostnames

No DNS Rebind: when enabled, it can prevent an external attacker to access the router's internal Web interface. It is a security measure

Additional DNSMasq Options: some extra options users can set by entering them in Additional DNS Options.

For example:

static allocation: dhcp-host=AB:CD:EF:11:22:33,192.168.0.10,myhost,myhost.domain,12h

max lease number: dhcp-lease-max=2

DHCP server IP range: dhcp-range=192.168.0.110,192.168.0.111,12h

SNMP

SNMP

☒ Enable
 ☐ Disable

Location

Unknown

Contact

root

Name

four-faith

RO Community

public

RW Community

private

Location: equipment location

Contact: contact this equipment management

Name: device name

RO Community: SNMP RO community name, the default is public, Only to read.

RW Community: SNMP RW community name, the default is private, Read-write permissions

SSHD

Enabling SSHd allows users to access the Linux OS of their router with an SSH client

Secure Shell

SSHd	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
SSH TCP Forwarding	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
Password Login	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Port	<input type="text" value="22"/> (Default: 22)
Authorized Keys	<div style="border: 1px solid #ccc; height: 30px;"></div>

SSH TCP Forwarding: enable or disable to support the TCP forwarding

Password Login: allows login with the router password (username is admin)

Port: port number for SSHd (default is 22)

Authorized Keys: here users paste their public keys to enable key-based login (more secure than a simple password)

System log

Enable Syslogd to capture system messages. By default they will be collected in the local file /var/log/messages. To send them to another system, enter the IP address of a remote syslog server.

System Log

Syslogd	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Syslog Out Mode	<input checked="" type="radio"/> Net <input type="radio"/> Console <input type="radio"/> Web <input type="radio"/> USB Storage
Remote Server	<input type="text"/>

Syslog Out Mode: four log mode

Net: the log information output to a syslog server

Console: the log information output to console port

Web: the log will be shown in the web page(Starus->Weblog)

USB Storage: the log will be saved in the USB device for access

Remote Server: if choose net mode, users should input a syslog server's IP Address and run a syslog server program on it.

Telnet

Telnet

Telnet	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
--------	---

Telnet: enable a telnet server to connect to the router with telnet. The username is admin and the password is the router's password.

Note: If users use the router in an untrusted environment (for example as a public hotspot), it is strongly recommended to use SSHd and deactivate telnet.

WAN Traffic Counter

WAN Traffic Counter

ttraff Daemon

☒ Enable
 ☐ Disable

Ttraff Daemon: enable or disable wan traffic counter function

3.3.3.1 USB

Enable the service to identify the U disk connected to the router, TF card or SD memory card, and use these types of storage media. Specific setup instructions screenshot below

USB Support

USB Storage Support

☒ Enable
 ☐ Disable

Storage Media Priority

TF card ▼

USB Port Status

Access Device

New Media version

STD-CH

New Media file size

108864 KBytes

Storage List

SSD

Disk Info

--- /dev/sda1

Block device, size 119.2 GiB (128034676224 bytes)

Windows 95/98/ME boot loader

FAT32 file system (hints score 5 of 5)

Volume size 119.2 GiB (127995150336 bytes, 3906102 clusters of 32 KiB)

Storage Media Priority : used to choose which storage media to storage files.

Storage List : list the storage media that the router recognized

3.3.3.2 FTP Server

Enable the service to use the router as a simple FTP application server, the user can do an FTP client to upload or download files to an external router U disk, TF card or SD memory card inside.

FTP Server

FTP Server

FTPD

☒ Enable
 ☐ Disable

Server Port

21

(Default: 21)

Login TimeOut

20

(Default: 20)

IDLE TimeOut

240

(Default: 240)

admin

.....

(Default: admin)

Password

.....

(Default: admin)

Confirm

.....

Anonymous Login

☐ Enable
 ☒ Disable

(Default: Disable)

Manage Account

Help

more...

FTPD:

enable/disable ftp server

Server Port:

ftp server port

Login TimeOut

Login timeout

IDLE TimeOut

idle timeout

Manage Account:

add/delete/account,manage account


Server Port: Router as a local FTP server listening port, the default is 21

admin : Log in to the router FTP server administrator account, the default user name “admin” router WEB configuration management

Password: Log on to the FTP server to the router's administrator password, the default is “admin”

3.3.3.3 Hotspot

The service will enable wireless WIFI router for the bus, chain business model and other companies to provide customers with free internet access after authentication, while in play before certification can be played online business advertising and promotional activities specified function.

Hotspot Portal
Wifidog


Wifidog daemon ☒ Enable ☐ Disable

Gateway ID

Web Server Name

Port (Default: 2060, Range: 1 - 65535)

Max Users (Default: 10, Range: 1 - 50)

Check Interval (in sec.) (Default: 60, Range: 1 - 3600)

Client Timeout (Default: 5, Range: 1 - 99)

Trusted MAC List

AuthServer Hostname

AuthServer SSL Available ☐ Enable ☒ Disable

AuthServer HTTP Port (Default: 80, Range: 1 - 65535)

AuthServer Path

HTTP Server Authentication Support ☐ Enable ☒ Disable

HTML Message File for Wifidog

Firewall Ruleset

Gateway ID: hotspot remote / local authentication server that uniquely identifies the default is 57419230

Port: default 2060, range: 1 - 65535 Please note that no special circumstances do not arbitrarily modify

Max Users: limit the number of customers connected to the local WIFI Internet access, the default factory setting is 50

Check Interval (in sec.): Detection WIFI wireless client terminals (computers, mobile phones, etc.) and link status time interval of this station router, the default is 180 seconds

Client Timeout (minutes): detects the connection at the maximum timeout this station WIFI wireless router client terminals (computers, mobile phones, etc.) did not have the Internet to communicate, think 10 minutes by default. After this time customers need to re-authenticate login.

AuthServer Hostname: remote / local hotspot server host domain name or IP, if the authentication or jump in our station carried the router, please fill out this station router's LAN IP network segment

AuthServer Path: Remote / local server storage WIFI hotspot jump page advertisements path, the default is "/"

3.3.4 Security

3.3.4.1 Firewall

You can enable or disable the firewall, filter specific Internet data types, and prevent anonymous Internet requests, ultimately enhance network security.

Firewall Protection



The screenshot shows the 'Firewall Protection' section with a sub-header 'SPI Firewall'. Below it, there are two radio buttons: 'Enable' (which is selected) and 'Disable'.

Firewall enhance network security and use SPI to check the packets into the network. To use firewall protection, choose to enable otherwise disabled. Only enable the SPI firewall, you can use other firewall functions: filtering proxy, block WAN requests, etc.

Additional Filters



The screenshot shows the 'Additional Filters' section with four checkboxes, all of which are currently unchecked: 'Filter Proxy', 'Filter Cookies', 'Filter Java Applets', and 'Filter ActiveX'.


Filter Proxy: Wan proxy server may reduce the security of the gateway, Filtering Proxy will refuse any access to any wan proxy server. Click the check box to enable the function otherwise disabled.

Filter Cookies: Cookies are the website of data the data stored on your computer. When you interact with the site, the cookies will be used. Click the check box to enable the function otherwise disabled.

Filter Java Applets: If refuse to Java, you may not be able to open web pages using the Java programming. Click the check box to enable the function otherwise disabled.

Filter ActiveX: If refuse to ActiveX, you may not be able to open web pages using the ActiveX programming. Click the check box to enable the function otherwise disabled.

Prevent WAN Request

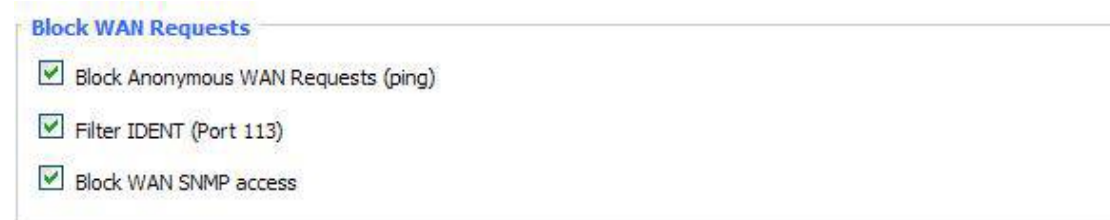

The screenshot shows the 'Block WAN Requests' section with three checkboxes, all of which are checked: 'Block Anonymous WAN Requests (ping)', 'Filter IDENT (Port 113)', and 'Block WAN SNMP access'.

Block Anonymous WAN Requests (ping): By selecting “Block Anonymous WAN Requests (ping)” box to enable this feature, you can prevent your network from the Ping or detection of other Internet users. so that make More difficult to break into your network. The default state of

Page 43 of 77

this feature is enabled ,choose to disable allow anonymous Internet requests.

Filter IDENT (Port 113): Enable this feature can prevent port 113 from being scanned from outside. Click the check box to enable the function otherwise disabled.

Block WAN SNMP access: This feature prevents the SNMP connection requests from the WAN. After Complete the changes, click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

Impede WAN DoS/Bruteforce

Impede WAN DoS/Bruteforce

☐ Limit SSH Access

☐ Limit Telnet Access

☐ Limit PPTP Server Access

☐ Limit L2TP Server Access

Limit ssh Access: This feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Limit Telnet Access: This feature limits the access request from the WAN by Telnet, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Limit PPTP Server Access: When build a PPTP Server in the router,this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP . Any new access request will be automatically dropped.

Limit L2TP Server Access: When build a L2TP Server in the router, this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Log Management

The router can keep logs of all incoming or outgoing traffic for your Internet connection.

Log

Log ☐ Enable ☒ Disable

Log: To keep activity logs, select Enable. To stop logging, select Disable. When select enable, the following page will appear.

Log

☒ Enable
 ☐ Disable

Log Level

High

Options

Dropped

Disable

 Rejected

Enable

 Accepted

Enable

Log Level: Set this to the required log level. Set Log Level higher to log more actions.

Options: When select Enable, the corresponding connection will be recorded in the journal, the disabled are not recorded.

Incoming Log: To see a temporary log of the Router's most recent incoming traffic, click the Incoming Log button.

Incoming Log Table			
Source IP	Protocol	Destination Port Number	Rule
Refresh		Close	

Outgoing Log: To see a temporary log of the Router's most recent outgoing traffic, click the Outgoing Log button.

Outgoing Log Table				
LAN IP	Destination URL/IP	Protocol	Service/Port Number	Rule
192.168.1.164	223.203.188.56	TCP	www	Accepted
192.168.1.164	183.60.16.200	UDP	8000	Accepted
192.168.1.164	183.60.48.60	UDP	8000	Accepted
192.168.1.164	112.95.240.183	UDP	8000	Accepted
192.168.1.164	183.60.49.245	UDP	8000	Accepted
192.168.1.164	119.147.32.204	UDP	8000	Accepted
192.168.1.164	112.90.86.244	UDP	8000	Accepted
192.168.1.164	119.147.45.157	UDP	8000	Accepted
192.168.1.164	183.60.49.15	UDP	8000	Accepted
192.168.1.164	183.60.16.70	UDP	8000	Accepted
192.168.1.164	183.60.16.200	UDP	8000	Accepted

Click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

3.3.5 Access Restrictions

3.3.5.1 WAN Access

Use access restrictions, you can block or allow specific types of Internet applications. You

can set specific PC-based Internet access policies. This feature allows you to customize up to ten different Internet Access Policies for particular PCs, which are identified by their IP or MAC addresses.

Access Policy

Policy

1 ()

Delete

Summary

Status

☐ Enable
☒ Disable

Policy Name

PCs

Edit List of clients

☐ Deny
☒ Filter

Internet access during selected days and hours.

Two options in the default policy rules: "Filter" and "reject". If select "Deny", you will deny specific computers to access any Internet service at a particular time period. If you choose to "filter", It will block specific computers to access the specific sites at a specific time period. You can set up 10 Internet access policies filtering specific PCs access Internet services at a particular time period.

Access Policy: You may define up to 10 access policies. Click Delete to delete a policy or Summary to see a summary of the policy.

Status: Enable or disable a policy.

Policy Name: You may assign a name to your policy.

PCs: The part is used to edit client list, the strategy is only effective for the PC in the list.

Days

Everyday

Sun

Mon

Tue

Wed

Thu

Fri

Sat

☒
☐
☐
☐
☐
☐
☐
☐

Times

24 Hours
☒

From
☐

0

:

00

To

0

:

00

Days: Choose the day of the week you would like your policy to be applied.

Times: Enter the time of the day you would like your policy to be applied.

Website Blocking by URL Address

<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>

Website Blocking by Keyword

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Website Blocking by URL Address: You can block access to certain websites by entering their URL.

Website Blocking by Keyword: You can block access to certain website by the keywords contained in their webpage

List of clients	
Enter MAC Address of the clients in this format: xx:xx:xx:xx:xx:xx	
MAC 01	<input type="text" value="00:AA:BB:CC:DD:EE"/>
MAC 02	<input type="text" value="00:00:00:00:00:00"/>
MAC 03	<input type="text" value="00:00:00:00:00:00"/>
MAC 04	<input type="text" value="00:00:00:00:00:00"/>
MAC 05	<input type="text" value="00:00:00:00:00:00"/>
MAC 06	<input type="text" value="00:00:00:00:00:00"/>
MAC 07	<input type="text" value="00:00:00:00:00:00"/>
MAC 08	<input type="text" value="00:00:00:00:00:00"/>
Enter the IP Address of the clients	
IP 01	192.168.1. <input type="text" value="15"/>
IP 02	192.168.1. <input type="text" value="0"/>
IP 03	192.168.1. <input type="text" value="0"/>
IP 04	192.168.1. <input type="text" value="0"/>
IP 05	192.168.1. <input type="text" value="0"/>
IP 06	192.168.1. <input type="text" value="0"/>
Enter the IP Range of the clients	
IP Range 01	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="19"/> ~ <input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="30"/>
IP Range 02	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> ~ <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

set up Internet access policy

1. Select the policy number (1-10) in the drop-down menu.
2. For this policy is enabled, click the radio button next to "Enable"
3. Enter a name in the Policy Name field.
4. Click the Edit List of PCs button.
5. On the List of PCs screen, specify PCs by IP address or MAC address. Enter the appropriate IP addresses into the IP fields. If you have a range of IP addresses to filter, complete the appropriate IP Range fields. Enter the appropriate MAC addresses into the MAC fields.
6. Click the Apply button to save your changes. Click the Cancel button to cancel your unsaved changes. Click the Close button to return to the Filters screen.
7. If you want to block the listed PCs from Internet access during the designated days and time, then keep the default setting, Deny. If you want the listed PCs to have Internet filtered during the designated days and time, then click the radio button next to Filter.
8. Set the days when access will be filtered. Select Everyday or the appropriate days of the week.
9. Set the time when access will be filtered. Select 24 Hours, or check the box next to From and use the drop-down boxes to designate a specific time period.
10. Click the Add to Policy button to save your changes and active it.
11. To create or edit additional policies, repeat steps 1-9.
12. To delete an Internet Access Policy, select the policy number, and click the Delete button.

Note:

- 1) The default factory value of policy rules is "filtered". If the user chooses the default policy rules for "refuse", and editing strategies to save or directly to save the settings. If the strategy edited is the first, it will be automatically saved into the second, if not the first, keep the original number.
- 2) Turn off the power of the router or reboot the router can cause a temporary failure. After the failure of the router, if can not automatically synchronized NTP time server, you need to recalibrate to ensure the correct implementation of the relevant period control function.

3.3.5.2 Packet Filter

To block some packets getting Internet access or block some Internet packets getting local network access, you can configure filter items to block these packets.

Packet Filter

Packet filter function is realized based on IP address or port of packets.



Enable Packet Filter: Enable or disable “packet filter” function

Policy: The filter rule’s policy, you can choose the following options

Discard The Following--Discard packets conform to the following rules, Accept all other packets

Only Accept The Following-- Accept only the data packets conform to the following rules,
Page 48 of 77

Discard all other packets

Add Filter Rule

Direction:

Protocol:

Source Ports: -

Destination Ports: -

Source IP: . . . /

Destination IP: . . . /

Direction

input: packet from WAN to LAN

output: packet from LAN to WAN

Protocol: packet protocol type

Source Ports: packet's source port

Destination Ports: packet's destination port

Source IP: packet's source IP address

Destination IP: packet's destination IP address

Note: "Source Port" ,"Destination Port" ,"Source IP" ,"Destination IP" could not be all empty ,you have to input at least one of these four parameters.

3.3.6 NAT

3.3.6.1 Port Forwarding

Port Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the router will forward those requests to the appropriate PC. If you want to forward a whole range of ports, see [Port Range Forwarding](#).

Forwards

Application	Protocol	Source Net	Port from	IP Address	Port to	Enable
web	TCP	192.168.8.11	8000	192.168.1.12	80	<input checked="" type="checkbox"/>
ftp	Both	192.168.8.12	24	192.168.1.12	21	<input checked="" type="checkbox"/>

Application: Enter the name of the application in the field provided.

Protocol: Chose the right protocol TCP,UDP or Both. Set this to what the application requires.

Source Net: Forward only if sender matches this ip/net (example 192.168.1.0/24).

Port from: Enter the number of the external port (the port number seen by users on the Internet).

IP Address: Enter the IP Address of the PC running the application.

Port to: Enter the number of the internal port (the port number used by the application).

Enable: Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.6.2 Port Range Forward

Port Range Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the router will forward those requests to the appropriate PC. If you only want to forward a single port, see [Port Forwarding](#).

Port Range Forward

Forwards

Application	Start	End	Protocol	IP Address	Enable
web-tftp	800	8100	Both	192.168.1.16	<input checked="" type="checkbox"/>
game	9000	10000	Both	192.168.1.16	<input checked="" type="checkbox"/>

Application: Enter the name of the application in the field provided.

Start:Enter the number of the first port of the range you want to seen by users on the Internet and forwarded to your PC.

End: Enter the number of the last port of the range you want to seen by users on the Internet and forwarded to your PC.

Protocol: Chose the right protocol TCP,UDP or Both. Set this to what the application requires.

IP Address: Enter the IP Address of the PC running the application.

Enable: Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.6.3 DMZ

The DMZ (DeMilitarized Zone) hosting feature allows one local user to be exposed to the Internet for use of a special-purpose service such as Internet gaming or videoconferencing. DMZ hosting forwards all the ports at the same time to one PC. The Port Forwarding feature is more secure because it only opens the ports you want to have opened, while DMZ hosting opens all the ports of one computer, exposing the computer so the Internet can see it.

Demilitarized Zone (DMZ)

DMZ

Use DMZ

☒ Enable
 ☐ Disable

DMZ Host IP Address

192.168.8.

Any PC whose port is being forwarded must should have a new static IP address assigned to it because its IP address may change when using the DHCP function.

DMZ Host IP Address: To expose one PC to the Internet, select Enable and enter the computer's IP address in the DMZ Host IP Address field. To disable the DMZ, keep the default setting: Disable

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.7 QoS Setting

3.3.7.1 Basic

QoS function can control the upload traffic and download traffic to balance the traffic, beside the block video is also a useful function.

QoS Setting

Start QoS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Uplink (kbps)	<input type="text" value="1000"/>
Downlink (kbps)	<input type="text" value="1000"/>
Max up rate for per user(kbps)	<input type="text" value="100"/>
Max down rate for per user(kbps)	<input type="text" value="100"/>

Uplink (kbps): In order to use bandwidth management (QoS) you must enter bandwidth values for your uplink. These are generally 80% to 90% of your maximum bandwidth.

Downlink (kbps): In order to use bandwidth management (QoS) you must enter bandwidth values for your downlink. These are generally 80% to 90% of your maximum bandwidth.

Video Blacklist Settings

☐ Enable Video Restrictions ☒ Enable Video/Flash Restrictions ☐ Disable Video/Flash Restrictions

Enable Video Restrictions : Restrict the video access that connected to the router, like the MP4,MKV,AVI format and other common video format

Enable Video and Flash Restriction : Besides the common Video Format restriction ,it can also restrict the Flash format video.

3.3.8 Applications

3.3.8.1 Serial Applications

There is a console port on router. Normally, this port is used to debug the router. This port can also be used as a serial port. The router has embedded a serial to TCP program. The data sent to the serial port is encapsulated by TCP/IP protocol stack and then is sent to the destination server. This function can work as a DTU (Data Terminal Unit).

Serial Applications

Serial Applications ☒ Enable ☐ Disable

Baudrate

Databit

Stopbit

Parity

Flow Control

Protocol

Server Address

Server Port

Device Number

Device Id

Heartbeat Interval

Baudrate: The serial port's baudrate

Databit: The serial port's databit

Parity: The serial port's parity

Stopbit: The serial port's stopbit

Flow Control: The serial port's flow control type.

Enable Serial TCP Function: Enable the serial to TCP function

Protocol Type: The protocol type to transmit data.

UDP(DTU) – Data transmit with UDP protocol , work as a DTU which has application protocol and hear beat mechanism.

Pure UDP – Data transmit with standard UDP protocol.

TCP(DTU) -- Data transmit with TCP protocol , work as a DTU which has application protocol and hear beat mechanism.

Pure TCP -- Data transmit with standard TCP protocol, router is the client.

TCP Server -- Data transmit with standard TCP protocol, router is the server.

TCST -- Data transmit with TCP protocol, Using a custom data

Server Address: The data service center's IP Address or domain name.

Server Port: The data service center's listening port.

Device ID: The router's identity ID.

Device Number: The router's phone number.

Heartbeat Interval: The time interval to send heart beat packet. This item is valid only when you choose UDP(DTU) or TCP(DTU) protocol type.

TCP Server Listen Port: This item is valid when Protocol Type is "TCP Server"

Custom Heartbeat Packet : This item is valid when Protocol Type is "TCST"

Custom Registration Packets: This item is valid when Protocol Type is "TCST"

3.3.8.2 GPS Settings(Optional)

Enable GPS	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
GPS Output Interface	<input checked="" type="checkbox"/> Net <input checked="" type="checkbox"/> Console
Protocol	TCP ▼
GPS Center Address	0.0.0.0
GPS Center Listening Port	5001
GPS Information Update Interval	60
GPS Speed Threshold	0
Device ID	12345678 <input checked="" type="checkbox"/> Append the device ID to the tail of gps information
GPS Information Contents	<input checked="" type="checkbox"/> GPRMC <input checked="" type="checkbox"/> GPWGA <input checked="" type="checkbox"/> GPVTG <input checked="" type="checkbox"/> GPGSA <input checked="" type="checkbox"/> GPGSV <input checked="" type="checkbox"/> GPGLL

Enable GPS: Enable or disable GPS function

GPS Output Interface: This item selects the GPS output interface including network and serial port

Protocol: TCP mode or UDP mode

GPS Center Address: The GPS center's IP Address or domain name

GPS Center Listening Port: The GPS center's listening port.

GPS Information Update Interval: The time interval between two GPS information update, unit is second

GPS Speed Threshold: The GPS speed threshold of update gps information

Device ID: The ID of this device

Append the device ID to the tail of gps information: Whether append the ID to the GPS information

GPS Information Contents: GPS contents selection

When GPS output interface is serial port, we should set the following serial port settings:

Baudrate	115200 ▼
Databit	8 ▼
Stopbit	1 ▼
Parity	None ▼
Flow Control	None ▼

3.3.9 Administration

3.3.9.1 Management

The Management screen allows you to change the router's settings. On this page you will find most of the configurable items of the router code.

Router Password

Router Username	<input type="password"/>
Router Password	<input type="password"/>
Re-enter to confirm	<input type="password"/>

The new password must not exceed 32 characters in length and must not include any spaces. Enter the new password a second time to confirm it.

Note:

Default username is admin.

It is strongly recommended that you change the factory default password of the router, which is admin. All users who try to access the router's web-based utility or Setup Wizard will be prompted for the router's password.

Web Access

This feature allows you to manage the router using either HTTP protocol or the HTTPS protocol. If you choose to disable this feature, a manual reboot will be required. You can also activate or not the router information web page. It's now possible to password protect this page (same username and password than above).

Web Access

Protocol	<input checked="" type="checkbox"/> HTTP <input type="checkbox"/> HTTPS
Auto-Refresh (in seconds)	<input type="text" value="3"/>
Enable Info Site	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Info Site Password Protection	<input type="checkbox"/> Enabled

Protocol: This feature allows you to manage the router using either HTTP protocol or the HTTPS protocol

Auto-Refresh: Adjusts the Web GUI automatic refresh interval. 0 disables this feature completely

Enable Info Site: Enable or disable the login system information page

Info Site Password Protection: Enable or disable the password protection feature of the system information page

Remote Access

Web GUI Management	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Use HTTPS	<input type="checkbox"/>	
Web GUI Port	<input type="text" value="8080"/>	(Default: 8080, Range: 1 - 65535)
SSH Management	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
SSH Remote Port	<input type="text" value="22"/>	(Default: 22, Range: 1 - 65535)
Telnet Management	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	

Remote Access: This feature allows you to manage the router from a remote location, via the Internet. To disable this feature, keep the default setting, Disable. To enable this feature, select Enable, and use the specified port (default is 8080) on your PC to remotely manage the router. You must also change the router's default password to one of your own, if you haven't already.

To remotely manage the router, enter `http://xxx.xxx.xxx.xxx:8080` (the x's represent the router's Internet IP address, and 8080 represents the specified port) in your web browser's address field. You will be asked for the router's password.

If you use https you need to specify the url as `https://xxx.xxx.xxx.xxx:8080` (not all firmwares does support this without rebuilding with SSL support).

SSH Management: You can also enable SSH to remotely access the router by Secure Shell. Note that SSH daemon needs to be enable in Services page.

Note:

If the Remote Router Access feature is enabled, anyone who knows the router's Internet IP address and password will be able to alter the router's settings.

Telnet Management: Enable or disable remote Telnet function

Cron

Cron	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Additional Cron Jobs	<input type="text"/>

Cron : The cron subsystem schedules execution of Linux commands. You'll need to use the command line or startup scripts to actually use this.

Language Selection

Language	<input type="text" value="English"/>
----------	--------------------------------------

Language: Set up the router page shows the type of language, including simplified Chinese and English.

Remote Upgrade

Remote Upgrade	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Remote Server IP	<input type="text" value="xmsx0618.f3322.org"/>	
Remote Server Listen Port	<input type="text" value="8189"/>	(Default: 40001, Range: 1 - 65535)
Heart Interval	<input type="text" value="60"/>	(Default: 60Sec, Range: 1 - 999)
3G Flow Upload Interval	<input type="text" value="600"/>	(Default: 600Sec, Range: 1 - 86400)
AD Calc Upload Interval	<input type="text" value="600"/>	(Default: 600Sec, Range: 1 - 86400)
Device Number	<input type="text" value="11111115"/>	
Device Phone Number	<input type="text" value="13888888888"/>	
Device Type Description	<input type="text" value="Router"/>	
Customized Local Domain	<input type="text" value="m.16wifi.com"/>	
Advertising storage Type	<input checked="" type="radio"/> Local Storage (U-Disk / TF card) <input type="radio"/> WEB remote terminal server	
Local Auth Mode	<input checked="" type="radio"/> User Name And Password <input type="radio"/> Login without authentication	
Use Remote Authentication	<input type="radio"/> Yes <input checked="" type="radio"/> No	

Remote Upgrade: custom-developed remote management server for this station router monitoring and management, configuration parameters, WIFI advertising updates.

Remote Management Login Server

Remote Management Login Server	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Remote Login Server IP	<input type="text" value="192.168.8.234"/>	
Remote Login Server Port	<input type="text" value="9001"/>	(Default: 44008, Range: 1 - 65535)

Remote Management Login Server: In the case of more than one servers, the remote management login server is a general server. Connect the router to this login server, the login server will assign an available server IP and port for the router to connect for remote management.

Firmware Upgrade

Firmware Upgrade	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	
Upgrade Server IP	<input type="text" value="xmsx0618.f3322.org"/>	
Upgrade Server Port	<input type="text" value="882"/>	(Default: 882, Range: 1 - 65535)

Firmware Upgrade: custom-developed remote server for this station router upgrading firmware.

Users Internet Records Reported

Users Internet Records Reported	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Server IP Address/Domain Name:	<input type="text" value="42.121.16.56"/>
Server Port:	<input type="text" value="50001"/> (Default: 50001, Range: 1 - 65535)
Heartbeat Interval:	<input type="text" value="60"/> (Default: 60Sec.Range: 1 - 999)

User Internet Records Reported: the router clients' webpages record submitted to the remote server center.

3.3.9.2 Keep Alive

Schedule Boot&Shutdown

The user can set the startup or shutdown time:

For example,the user want to set the start time at 8:07 and boot time at 9:07.

Schedule Boot&Shutdown

Schedule Boot&Shutdown	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Match	<input checked="" type="radio"/> Day <input type="radio"/> Weekday <input type="radio"/> Days <input type="radio"/> Weekdays
Shutdown Time	<input type="text" value="08"/> : <input type="text" value="07"/>
Shutdown Date	<input type="text" value="*"/> : <input type="text" value="01"/> Sunday <input type="text" value="Sunday"/>
Boot Time	<input type="text" value="09"/> : <input type="text" value="07"/>
Boot Date	<input type="text" value="*"/> : <input type="text" value="01"/> Sunday <input type="text" value="Sunday"/>

Schedule Reboot

Schedule Reboot

Schedule Reboot	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Interval (in seconds)	<input checked="" type="radio"/> <input type="text" value="3600"/>
At a set Time	<input type="radio"/> <input type="text" value="00"/> : <input type="text" value="00"/> Sunday

You can schedule regular reboots for the router :

Regularly after xxx seconds.


At a specific date time each week or everyday.

Note:

For date based reboots Cron must be activated. See Management for Cron activation.

3.3.9.3 Commands

Commands: You are able to run command lines directly via the Webinterface.

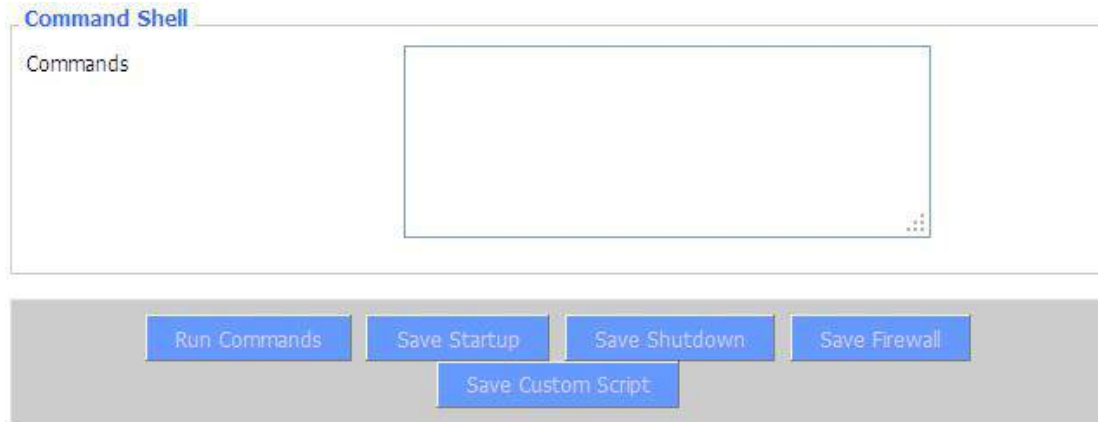

Run Command: You can run command lines via the web interface. Fill the text area with your command and click Run Commands to submit.

Startup: You can save some command lines to be executed at startup's router. Fill the text area with commands (only one command by row) and click Save Startup.

Shutdown: You can save some command lines to be executed at shutdown's router. Fill the text area with commands (only one command by row) and click Save Shutdown.

Firewall: Each time the firewall is started, it can run some custom iptables instructions. Fill the text area with firewall's instructions (only one command by row) and click Save Firewall.

Custom Script: Custom script is stored in /tmp/custom.sh file. You can run it manually or use cron to call it. Fill the text area with script's instructions (only one command by row) and click Save Custom Script.

3.3.9.4 Factory Defaults



Reset router settings: Click the Yes button to reset all configuration settings to their default values. Then click the Apply Settings button.

Note:

Any settings you have saved will be lost when the default settings are restored. After restoring the router is accessible under the default IP address 192.168.1.1 and the default password admin.

3.3.9.5 Firmware Upgrade

Firmware Upgrade

After flashing, reset to Don't reset ▼

Please select a file to upgrade 浏览...

Firmware Upgrade: New firmware versions are posted at www.four-faith.com and can be downloaded. If the Router is not experiencing difficulties, then there is no need to download a more recent firmware version, unless that version has a new feature that you want to use.

Note:

When you upgrade the Router's firmware, you lose its configuration settings, so make sure you write down the Router settings before you upgrade its firmware.

To upgrade the Router's firmware:

1. Download the firmware upgrade file from the website.
2. Click the Browse... button and chose the firmware upgrade file.
3. Click the Upgrade button and wait until the upgrade is finished.

Note:

Upgrading firmware may take a few minutes.

Do not turn off the power or press the reset button!

After flashing, reset to: If you want to reset the router to the default settings for the firmware version you are upgrading to, click the Firmware Defaults option.

3.3.9.6 Backup

Backup Configuration

Backup Settings

Click the "Backup" button to download the configuration backup file to your computer.

Restore Configuration

Restore Settings

Please select a file to restore 浏览...

WARNING

**Only upload files backed up using this firmware and from the same model of router.
Do not upload any files that were not created by this interface!**

Backup
Restore

Backup Settings: You may backup your current configuration in case you need to reset the router back to its factory default settings. Click the Backup button to backup your current configuration.

Restore Settings: Click the Browse... button to browse for a configuration file that is currently saved on your PC. Click the Restore button to overwrite all current configurations with the ones in the configuration file.

Note:

Only restore configurations with files backed up using the same firmware and the same model of router.

3.3.10 Status

3.3.10.1 Router

System	
Router Name	Four-Faith
Router Model	Four-Faith Router
Firmware Version	FXXXX v1.0 (01/10/12) std - build 94
MAC Address	<u>00:AA:BB:CC:DD:44</u>
Host Name	
WAN Domain Name	
LAN Domain Name	
Current Time	Sat, 01 Jan 2000 00:51:29
Uptime	51 min,

Router Name: name of the router, setting→basic setting to modify

Router Model: model of the router, unavailable to modify

Firmware Version: software version information

MAC Address: MAC address of WAN, setting→Clone MAC Address to modify

Host Name: host name of the router, setting→basic setting to modify

WAN Domain Name: domain name of WAN, setting→basic setting to modify

LAN Domain Name: domain name of LAN, unavailable to modify

Current Time: local time of the system

Uptime: operating uptime as long as the system is powered on

Memory

Total Available	255172 kB / 262144 kB	<div><div></div></div> 97%
Free	188020 kB / 255172 kB	<div><div></div></div> 74%
Used	67152 kB / 255172 kB	<div><div></div></div> 26%
Buffers	38872 kB / 67152 kB	<div><div></div></div> 58%
Cached	8924 kB / 67152 kB	<div><div></div></div> 13%
Active	16640 kB / 67152 kB	<div><div></div></div> 25%
Inactive	33504 kB / 67152 kB	<div><div></div></div> 50%

Total Available: the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

Free: free memory, the router will reboot if the memory is less than 500kB

Used: used memory, total available memory minus free memory

Buffers: used memory for buffers,

Cached: the memory used by high-speed cache memory

Active: active use of buffer or cache memory page file size

Inactive: not often used in a buffer or cache memory page file size

Network

IP Filter Max Connections	16384	
Active IP Connections	96	<div><div></div></div> 1%

IP Filter Maximum Ports: preset is 4096, available to re-management

Active IP Connections: real time monitor active IP connections of the system, click to see the table as blow:

Active IP Connections

53

No.	Protocol	Timeout (s)	Source Address	Remote Address	Service Name	State
1	TCP	60	192.168.1.120	192.168.1.1		80 TIME_WAIT
2	TCP	30	192.168.1.120	192.168.1.1		80 TIME_WAIT
3	TCP	65	192.168.1.120	192.168.1.1		80 TIME_WAIT
4	TCP	96	192.168.1.120	192.168.1.1		80 TIME_WAIT
5	TCP	99	192.168.1.120	192.168.1.1		80 TIME_WAIT
6	TCP	70	192.168.1.120	192.168.1.1		80 TIME_WAIT
7	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT
8	TCP	115	192.168.1.120	192.168.1.1		80 TIME_WAIT
9	TCP	84	192.168.1.120	192.168.1.1		80 TIME_WAIT
10	TCP	3599	192.168.1.120	192.168.1.1		80 ESTABLISHED
11	TCP	3599	192.168.1.120	192.168.1.1		80 ESTABLISHED
12	TCP	108	192.168.1.120	192.168.1.1		80 TIME_WAIT
13	TCP	3600	192.168.1.120	192.168.1.1		80 ESTABLISHED
14	TCP	93	192.168.1.120	192.168.1.1		80 TIME_WAIT
15	TCP	102	192.168.1.120	192.168.1.1		80 TIME_WAIT
16	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT
17	TCP	3599	192.168.1.120	192.168.1.1		80 ESTABLISHED
18	TCP	15	192.168.1.120	192.168.1.1		80 TIME_WAIT
19	TCP	25	192.168.1.120	192.168.1.1		80 TIME_WAIT
20	TCP	90	192.168.1.120	192.168.1.1		80 TIME_WAIT
21	UDP	26	192.168.8.119	255.255.255.255	1947	UNREPLIED
22	TCP	77	192.168.1.120	192.168.1.1		80 TIME_WAIT
23	TCP	35	192.168.1.120	192.168.1.1		80 TIME_WAIT
24	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT
25	TCP	40	192.168.1.120	192.168.1.1		80 TIME_WAIT
26	TCP	3599	192.168.1.120	192.168.1.1		80 ESTABLISHED
27	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT
28	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT
29	TCP	4	192.168.1.120	192.168.1.1		80 TIME_WAIT
30	UDP	31	192.168.8.160	224.0.0.1	9166	UNREPLIED
31	TCP	74	192.168.1.120	192.168.1.1		80 TIME_WAIT

Active IP Connections: total active IP connections

Protocol: connection protocol

Timeouts: connection timeouts, unit is second

Source Address: source IP address

Remote Address: remote IP address

Service Name: connecting service port

Status: displayed status

3.3.10.2 WAN

Connection Type Automatic Configuration - DHCP

Connection Uptime Not available

Connection Type: disabled, static IP, automatic configuration-DHCP, PPPOE, PPTP, L2TP, 3G/UMTS

Connection Uptime: connecting uptime; If disconnect, display Not available

IP Address 0.0.0.0
 Subnet Mask 0.0.0.0
 Gateway 0.0.0.0
 DNS 1
 DNS 2
 DNS 3

IP Address: IP address of router WAN

Subnet Mask: subnet mask of router WAN

Gateway: the gateway of router WAN

DNS1, DNS2, DNS3: DNS1/DNS2/DNS3 of router WAN

Remaining Lease Time 0 days 23:38:43
 DHCP Release DHCP Renew

Remaining Lease Time: remaining lease time of IP address in DHCP way

DHCP Release: release DHCP address

DHCP Renew: renew IP address in DHCP way, default is 1 day

Login Status Disconnected Connect

Login Status: connection status of WAN

Disconnect: disconnect

Connection: connect

Module Type ZTE-EVDO MODULE

 Signal Status -79 dBm
 Network CDMA/HDR

Module Type: module type in 3G/UMTS way


Signal Status: signal intensity of the module in 3G/UMTS way

Network: network type of the module in 3G/UMTS way

Total Traffic

Incoming (MBytes)	0
Outgoing (MBytes)	0

Traffic by Month

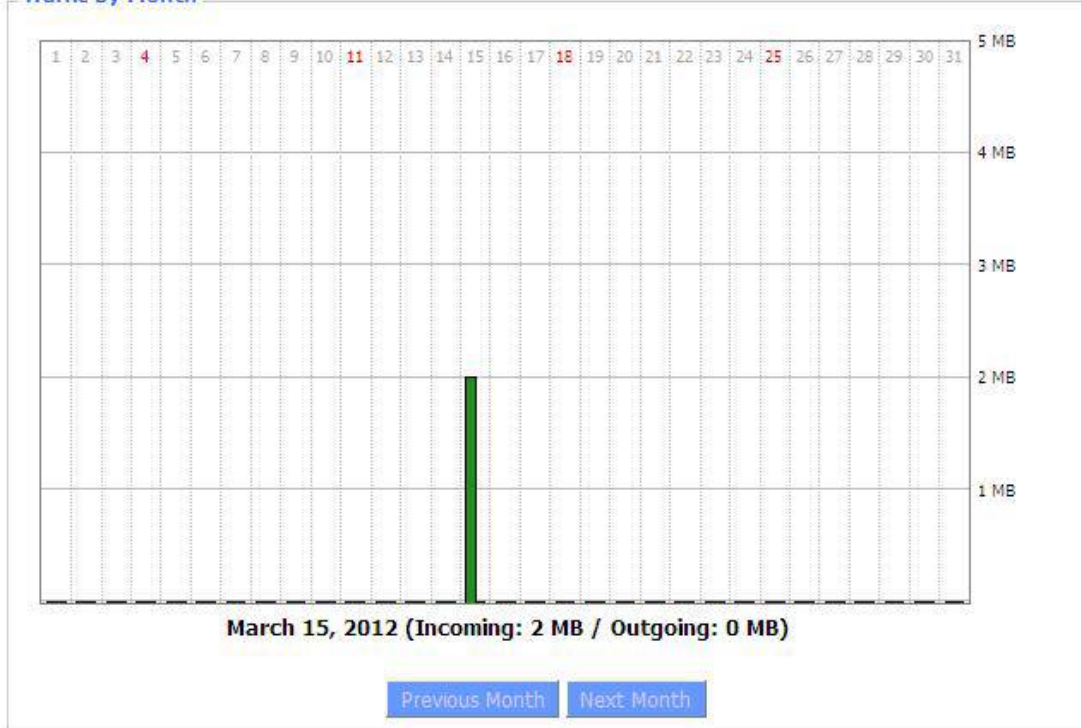

Total Flow: flow from power-off last time until now statistics, download and upload direction

Monthly Flow: the flow of a month, unit is MB

Last Month: the flow of last month

Next Month: the flow of next month

Data Administration

Backup Restore Delete

Backup: backup data administration

Restore: restore data administration

Delete: delete data administration

3.3.10.3 LAN

LAN Status

MAC Address	00:0C:43:30:52:77
IP Address	192.168.1.1
Subnet Mask	255.255.255.0
Gateway	0.0.0.0
Local DNS	0.0.0.0

MAC Address: MAC Address of the LAN port ethernet

IP Address: IP Address of the LAN port

Subnet Mask: Subnet Mask of the LAN port

Gateway: Gateway of the LAN port

Local DNS: DNS of the LAN port

Active Clients

Host Name	IP Address	MAC Address	Conn. Count	Ratio [4096]
*	192.168.1.120	10:78:D2:98:C9:46	57	1%

Host Name: host name of LAN client

IP Address: IP address of the client

MAC Address: MAC address of the client

Conn. Count: connection count caused by the client

Ratio: the ratio of 4096 connection

Dynamic Host Configuration Protocol

DHCP Status

DHCP Server	Enabled
DHCP Daemon	uDHCPd
Start IP Address	192.168.1.100
End IP Address	192.168.1.149
Client Lease Time	1440 minutes

DHCP Server: enable or disable the router work as a DHCP server



DHCP Daemon: the agreement allocated using DHCP including DNSMasq and uDHCPd

Starting IP Address: the starting IP Address of the DHCP server's Address pool

Ending IP Address: the ending IP Address of the DHCP server's Address pool

Client Lease Time: the lease time of DHCP client

DHCP Clients

Host Name	IP Address	MAC Address	Client Lease Time	Delete
PC-201011161332	192.168.1.142	00:21:5C:33:4D:29	1 day 00:00:00	
jack-lincw	192.168.1.117	44:37:E6:3F:45:54	1 day 00:00:00	
*	192.168.1.149	00:0C:E7:00:00:00	1 day 00:00:00	

Host Name: host name of LAN client

IP Address: IP address of the client

MAC Address: MAC address of the client

Expires: the expiry the client rents the IP address

Delete: click to delete DHCP client

Connected PPPOE Clients

Interface	User Name	Local IP	Delete
ppp0	hometest	192.168.10.10	

Interface: the interface assigned by dial-up system

User Name: user name of PPPoE client

Local IP: IP address assigned by PPPoE client

Delete: click to delete PPPoE client

Connected L2TP Server

Interface	Local IP	Remote IP	Delete
ppp0	172.168.8.2	172.168.8.1	

Interface: the interface assigned by dial-up system

Local IP: tunnel IP address of local L2TP

Remote IP: tunnel IP address of L2TP server

Delete: click to disconnect L2TP

Connected L2TP Clients

Interface	User Name	Local IP	Remote IP	Delete
ppp1	hometest	192.168.50.2	120.42.46.98	

Interface: the interface assigned by dial-up system

User Name: user name of the client

Local IP: tunnel IP address of L2TP client

Remote IP: IP address of L2TP client

Delete: click to delete L2TP client

Connected PPTP Server

Interface	Local IP	Remote IP	Delete
ppp0	172.168.8.2	172.168.8.1	

Interface: the interface assigned by dial-up system

Local IP: tunnel IP address of local PPTP

Remote IP: tunnel IP address of PPTP server

Delete: click to disconnect PPTP

Connected PPTP Clients

Interface	User Name	Local IP	Remote IP	Delete
ppp1	hometest	192.168.5.1	120.42.46.98	

Interface: the interface assigned by dial-up system

User Name: user name of the client

Local IP: tunnel IP address of PPTP client

Remote IP: IP address of PPTP client

Delete: click to delete PPTP client

3.3.10.4 Wireless

Wireless Status

MAC Address	00:0C:43:30:52:79
Radio	Radio is On
Mode	AP
Network	Mixed
SSID	four-faith
Channel	6 (2437 MHz)
TX Power	71 mW
Rate	72 Mb/s
Encryption - Interface w10	Disabled
PPTP Status	Disconnected

MAC Address: MAC address of wireless client

Radio: display whether radio is on or not

Mode: wireless mode

Network: wireless network mode

SSID: wireless network name

Channel: wireless network channel

TX Power: reflection power of wireless network

Rate: reflection rate of wireless network

Encryption-Interface w10: enable or diasbal Encryption-Interface w10

PPTP Status: show wireless pptp status

Wireless Packet Info

Received (RX)	91125 OK, no error	100%
Transmitted (TX)	11957 OK, no error	100%

Received (RX): received data packet

Transmitted (TX): transmitted data packet

Wireless Nodes

Clients

MAC Address	Interface	Uptime	TX Rate	RX Rate	Signal	Noise	SNR	Signal Quality
- None -								

MAC Address: MAC address of wireless client

Interface: interface of wireless client

Uptime: connecting uptime of wireless client

TX Rate: transmit rate of wireless client

RX Rate: receive rate of wireless client

Signal: the signal of wireless client

Noise: the noise of wireless client

SNR: the signal to noise ratio of wireless client

Signal Quality: signal quality of wireless client

Neighbor's Wireless Networks

SSID	Mode	MAC Address	Channel	Rssi	Noise	beacon	Open	dtim	Rate	Join Site
tzt-3g	Unknown	00:aa:bb:cc:dd:14	2	-5	-95	0	No	0	54(b/g)	Join
four-faith	Unknown	00:0c:43:30:52:79	6	-24	-95	0	No	0	300(b/g/n)	Join
ff-old	AP	00:13:10:09:56:92	6	-55	-95	0	No	0	54(b/g)	Join

[Refresh](#)
[Close](#)

Neighbor's Wireless Network: display other networks nearby

SSID: the name of wireless network nearby

Mode: operating mode of wireless network nearby

MAC Address: MAC address of the wireless nearby

Channel: the channel of the wireless nearby

Rssi: signal intensity of the wireless nearby

Noise: the noise of the wireless nearby

Beacon: signal beacon of the wireless nearby

Open: the wireless nearby is open or not

Dtim: delivery traffic indication message of the wireless nearby

Rate: speed rate of the wireless nearby

Join Site: click to join wireless network nearby

3.3.10.5 Device Management

Device Management

Connection Status

Status	Enabled
Server Ip And Port	192.168.8.234:9100
Connection status	Connecting to Server...
Active Time	

Connection Status:display the connection status with the management platform.

Status:if the device management function is opened or not.

Server Ip And Port:the ip address and port of the management server.

Connection status:show if the device is connected to the server.

Active Time:show the during time that connected to server.

Fireware Upgrade

Upgrade Status

Status	no update, waiting...
Server Ip And Port	42.121.16.56:882
update version	
upgrade progress	

Upgrade Status: show the status of the firmware upgrade.

Status:show if the new firmware is in update.

Server Ip And Port:show the firmware upgrade server's ip and port.

update version:show the version in upgrading.

upgrade progress:show the progress of the upgrading firmware.

rsync update local ad file

rsync update status

Status	no update, waiting...
update info	
update progress	

rsync update status:show the status of the rsync update

Status:show if the rsync is updating.

Update info:show the info of the update status.

Update progress: show the progress of the rsync update.


3.3.10.6 Bandwidth



Bandwidth Monitoring-LAN Graph

abscissa axis: time


vertical axis: speed rate

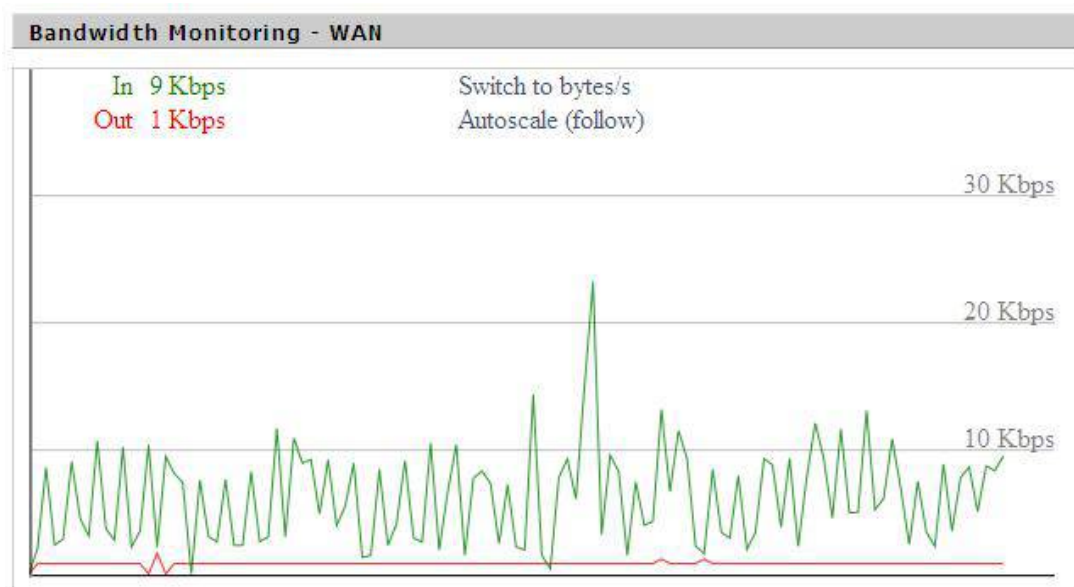

Bandwidth Monitoring-WAN Graph

abscissa axis: time

vertical axis: speed rate

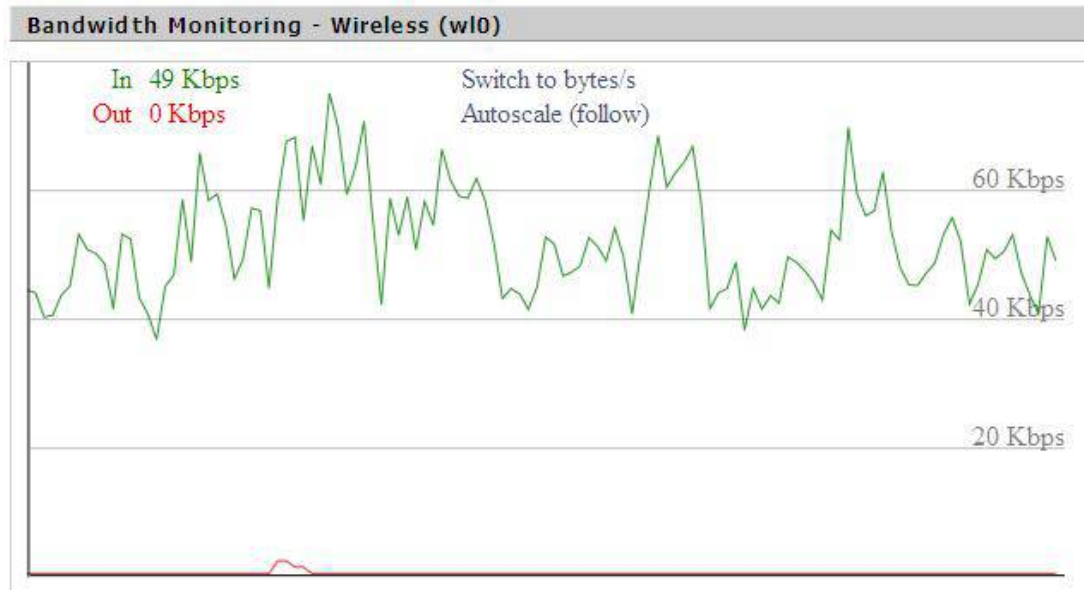

Bandwidth Monitoring-Wireless (W10) Graph

abscissa axis: time

vertical axis: speed rate

3.3.10.7 Sys-Info

Router	
Router Name	Four-Faith
Router Model	Four-Faith Router
LAN MAC	<u>00:0C:43:30:52:77</u>
WAN MAC	<u>00:0C:43:30:52:78</u>
Wireless MAC	<u>00:0C:43:30:52:79</u>
WAN IP	10.34.107.156
LAN IP	192.168.1.1

Router Name: the name of the router

Router Model: the model of the router

LAN MAC: MAC address of LAN port

WAN MAC: MAC address of WAN port

Wireless MAC: MAC address of the wireless

WAN IP: IP address of WAN port

LAN IP: IP address of LAN port

Wireless	
Radio	Radio is On
Mode	AP
Network	Mixed
SSID	four-faith
Channel	6 (2437 MHz)
TX Power	71 mW
Rate	72 Mb/s

Radio: display whether radio is on or not

Mode: wireless mode

Network: wireless network mode

SSID: wireless network name

Channel: wireless network channel

TX Power: reflection power of wireless network

Rate: reflection rate of wireless network

Wireless Packet Info	
Received (RX)	6982 OK, no error
Transmitted (TX)	1498 OK, no error

Received (RX): received data packet

Transmitted (TX): transmitted data packet

Wireless								
Clients								
MAC Address	Interface	Uptime	TX Rate	RX Rate	Signal	Noise	SNR	Signal Quality
- None -								

MAC Address: MAC address of wireless client

Interface: interface of wireless client

Uptime: connecting uptime of wireless client

TX Rate: transmit rate of wireless client

RX Rate: receive rate of wireless client

Signal: the signal of wireless client

Noise: the noise of wireless client

SNR: the signal to noise ratio of wireless client

Signal Quality: signal quality of wireless client

Services

DHCP Server	Enabled
ff-radauth	Disabled
USB Support	Disabled

DHCP Server: enabled or disabled

ff-radauth: enabled or disabled

USB Support: enabled or disabled

Memory

Total Available	249.2 MB / 256.0 MB
Free	183.4 MB / 249.2 MB
Used	65.7 MB / 249.2 MB
Buffers	38.0 MB / 65.7 MB
Cached	8.7 MB / 65.7 MB
Active	16.4 MB / 65.7 MB
Inactive	32.6 MB / 65.7 MB

Total Available: the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

Free: free memory, the router will reboot if the memory is less than 500kB

Used: used memory, total available memory minus free memory

Buffers: used memory for buffers, total available memory minus allocated memory

Cached: the memory used by high-speed cache memory

Active: Active use of buffer or cache memory page file size

Inactive: Not often used in a buffer or cache memory page file size

DHCP

DHCP Clients

Host Name	IP Address	MAC Address	Expires
*	192.168.1.143	xx:xx:xx:xx:DD:45	1 day 00:00:00
four-488e1df5fa	192.168.1.125	xx:xx:xx:xx:D8:F7	1 day 00:00:00
Mycenae-PC	192.168.1.116	xx:xx:xx:xx:5E:30	1 day 00:00:00

Host Name: host name of LAN client

IP Address: IP address of the client


MAC Address: MAC address of the client

Expires: the expiry the client rents the IP address

Appendix

The following steps describe how to setup Windows XP Hyper Terminal.

1. Press “Start”→”Programs”→”Accessories”→”Communications”→”Hyper Terminal”

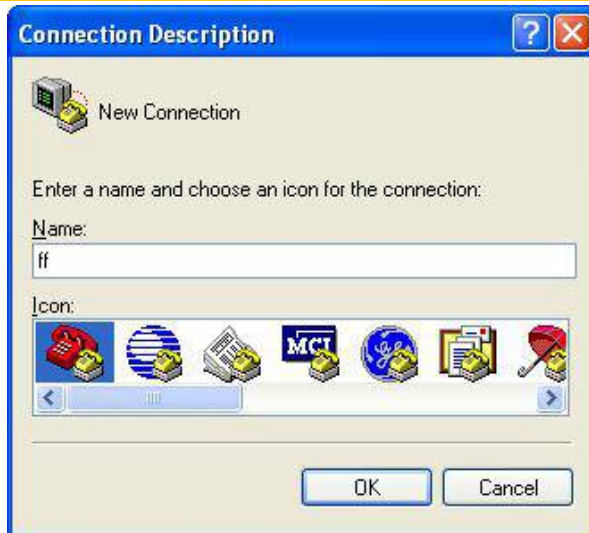

2. Input connection name, choose “OK”
3. Choose the correct COM port which connects to modem, choose “OK”



4. Configure the serial port parameters as following, choose “OK”


Bits per second: 115200

Data bits: 8

Parity: None

Stop bits: 1

Flow control: None

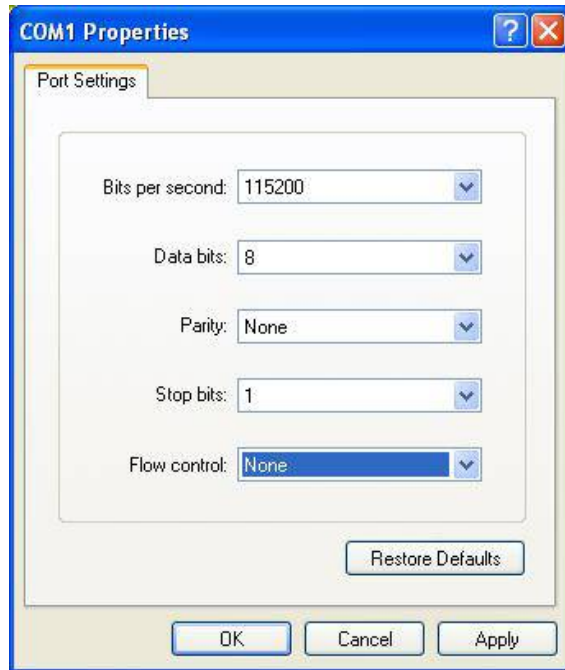

5. Complete Hyper Terminal operation, It runs as following

