

# IMC101GT

## User manual

Shenzhen 3onedat Technology CO., LTD

Address: 3/F, 2/B, Jiuxiangling Industrial District,  
Nanshan District, ShenZhen, 518055, China

Website: [www.3onedata.com](http://www.3onedata.com)

Phone: +86 0755-26702688

Fax: +86 0755-26703485

### 【Introduction】

IMC101GT is a kind of industrial gigabit media converter, it support 1 10Base-T/100Base-TX/1000 Base-TX port and 1 1000Base-X SFP port. It support LFP function, it is easy to check the network connection status,, it also support CE,FCC standard, IMC101 adopt industry standard design, IP30 protection, rugged high-strength metal case, power supply input(12V ~ 48VDC), -40 to 85°C working temperature.

### 【Packing list】


Please check the package and all the components inside are in good condition before you use the switch.

- IMC101GT\*1
- User manual
- Warranty card
- DIN rail

### 【Features】

- Support 1 10Base-T/100Base-TX/1000 Base-TX port and 1 1000Base-X SFP port
- Support IEEE802.3/802.3u/802.3x/802.3z store and forward
- Ethernet port support 10/100/1000M self-adaption
- Support LFP
- DC12~48V power input
- IP40 protect grade, high strength iron shell, DIN Rail installation.

### 【Panel Layout】

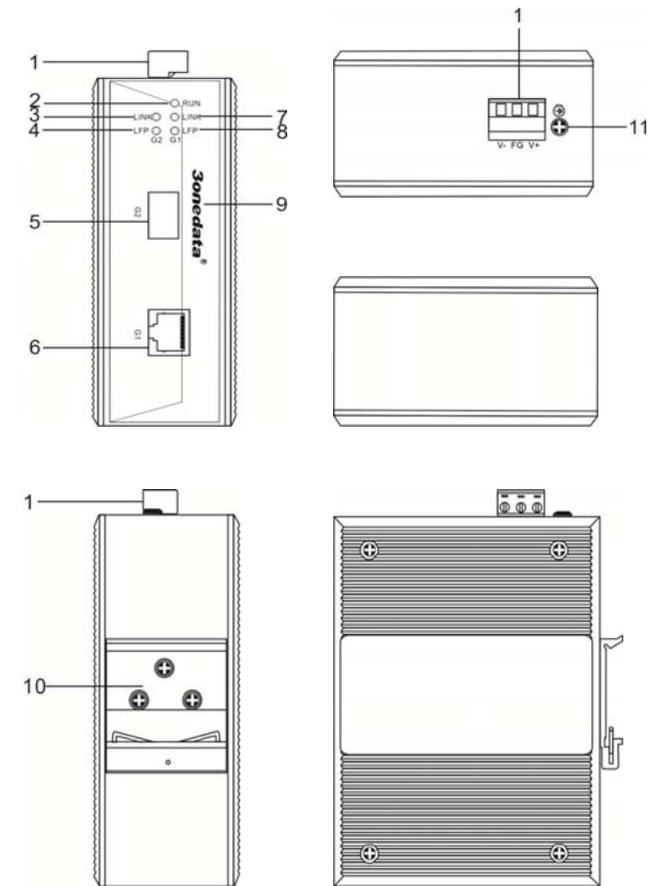


1. PWR power input (3 bots terminal block)
2. Working status indicator
3. Fiber port connection indicator
4. Remote fiber port alarm indicator
5. 1000Base-X SFP port
6. 10Base-T/100Base-TX/1000 Base-TX port
7. Ethernet port connection indicator
8. Remote Ethernet port alarm indicator

9. Company name and Product name label



10. DIN-Rail

11. Grounding screw

Unit (mm)

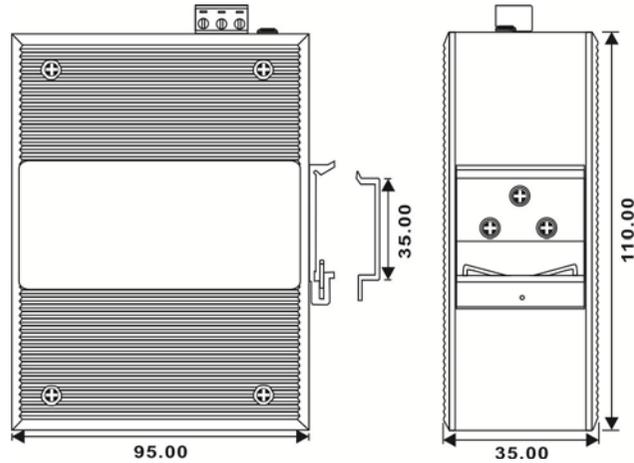

**【Power Input】**

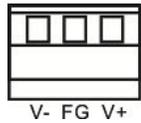

12~48VDC


IMC101GT provides 3 bits terminal block (V-, FG, V+), V-, V+ is 12VDC ~ 48VDC power input. It can also work if connection opposite.

**【Communication Interface】**

**10Base-T/100Base-TX/1000 Base-TX Ethernet port**


10Base-T/100Base-TX/1000 Base-TX Ethernet port use in front panel, It is RJ45 port, the PIN define of RJ45 is as follows: connection adopt UTP or STP, the distance is no more

than 100m, 1000Mbps use cat5e, 100Mbps use cat5, 10Mbps use cat3,4, 5.

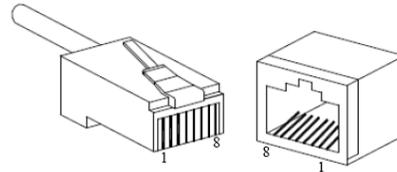


RJ45 port support MDI/MDI-X self-adaption. In (MDI), PIN1, 2, 3, 4, 5, 6, 7, 8 connect corresponding, in (MDI-X) PIN1 → 3, 2→6, 3→1, 6→2, 4→7, 5→8, 7→4, 8→5. In MDI/MDI-X, 1000 Base-TX PIN define is as follows:

PIN	MDI	MDI-X
1	BI_DA+/TX+	BI_DB+/RX+
2	BI_DA-/TX-	BI_DB-/RX-
3	BI_DB+/RX+	BI_DA+/TX+
4	BI_DC+/-	BI_DD+/-
5	BI_DC-/-	BI_DD-/-
6	BI_DB-/RX-	BI_DA-/TX-
7	BI_DD+/-	BI_DC+/-
8	BI_DD-/-	BI_DC-/-




Note: 10Base-T/100Base-TX, "TX±"transmit data±, "RX±"receive data±, "—"not use.

MDI:

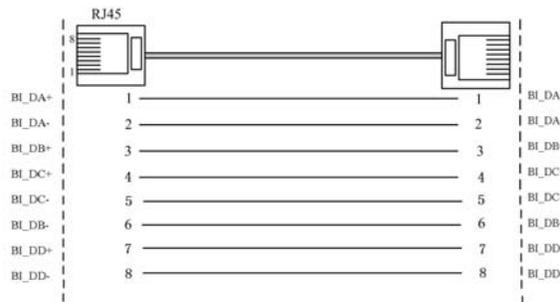



MDI-X:

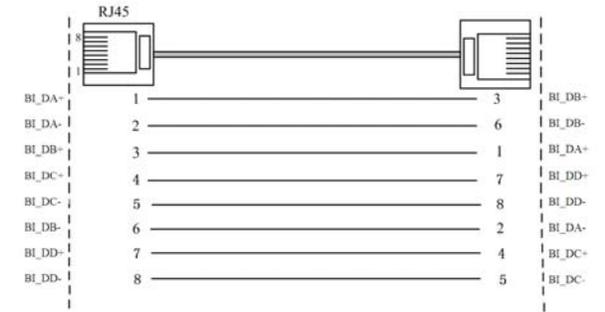

**1000Base-X SFP fiber port**

1000Base-X fiber port is SFP multi mode or single mode port, it supports LFP.

Suggestion: please make a mark for your optic fiber (Picture as follows: A-A, B-B or A1-A2, B1-B2) Easy to use

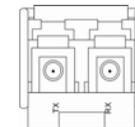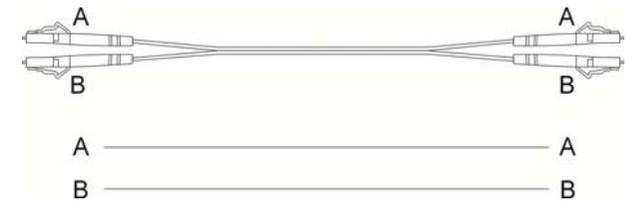

**【LED Indicator】**

LED indicator in front panel of IMC101GT monitor working status, the function of each LED is described in the table as below.

System indication LED		
LED	State	Description
RUN	ON/OFF	Switch is unwonted
	Blinking	Switch is active
LINK (G1)	ON	Local Ethernet port connection regular.
	Blinking	Local Ethernet port connection active
	OFF	Local Ethernet port had no connection.
LINK (G2)	ON	Local Fiber port connection regular and active.
	OFF	Local fiber port had no connection.
LFP (G1)	ON	Remote Ethernet port had no connection or unwonted
	OFF	Remote Ethernet port connection regular.
LFP (G2)	ON	Remote fiber port had no connection or unwonted
	OFF	Remote fiber port connection regular.

### Installation:

Before installation, confirm that the work environment meet the installation require, including the power needs and abundant space. Whether it is close to the connection equipment and other equipments are prepared or not.

#### Installation require as below


1. Avoid in the sunshine, keep away from the heat fountainhead or the area where in intense EMI.
2. Examine the cables and plugs that installation requirements.

3. Examine whether the cables be seemly or not (less than 100m) according to reasonable scheme.
4. Screw, nut, tools provide by yourselves.
5. Power need: power inputs(12~48DC)
6. Environment: -40°C to 85°C  
Storage Temperature: -40°C to 85°C  
Relative humidity 10% to 95%

#### DIN-Rail Installation

In order to use in industrial environments expediently, IMC101G adopt 35mm DIN-Rail installation, the installation steps as fellows:

1. Examine the DIN-Rail attachment
2. Examine DIN Rail whether be firm and the position be suitability or not.
3. Insert the top of the DIN-Rail into the slot just below the stiff metal spring.
4. The DIN-Rail attachment unit will snap into place as shown below.

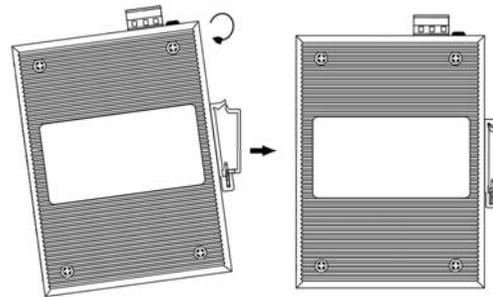

#### Wiring Requirements

Wiring need to meet the following requirements:

- It is needed to check whether the type, quantity and specification of cable match the requirement before cable laying;
- It is needed to check the cable is damaged or not, factory records and quality assurance booklet before cable

laying;

- The required cable specification, quantity, direction and laying position need to match construction requirements, and cable length depends on actual position;
- All the cable cannot have break-down and terminal in the middle;
- Cables should be straight in the hallways and turning;
- Cable should be straight in the groove, and cannot beyond the groove in case of holding back the inlet and outlet holes. Cables should be banded and fixed when they are out of the groove;
- User cable should be separated from the power lines. Cables, power lines and grounding lines cannot be overlapped and mixed when they are in the same groove road. When cable is too long, it cannot hold down other cable, but structure in the middle of alignment rack;
- Pigtail cannot be tied and swerved as less as possible. Swerving radius cannot be too small (small swerving causes terrible loss of link). Its banding should be moderate, not too tight, and should be separated from other cables;
- It should have corresponding simple signal at both sides of the cable for maintaining.

#### 【Specification】

##### Technology:

Standard; IEEE802.3, IEEE802.3u, IEEE802.3x, IEEE802.3z

Flow control: IEEE802.3x, back pressure control

##### Interface:

Gigabit Ethernet port: 10Base-T/100Base-TX/1000Base-TX  
Self-adaption

Gigabit fiber port: 1000Base-X SFP

### Transmission:

Twisted pair: 100M (Standard CAT5/CAT5e cable)

Multi mode fiber: 1310nm, 2Km

Single mode fiber: 1310nm, 20/40/60Km

1550nm,20/40/60/80/100/120Km

### Exchange of attribute:

100M forward speed: 148810pps

1000M forward speed: 1488100pps

Transmission: Store and forward

Memory: 1Mbits

MAC address: 1K

### Indicator:

System: RUN

Ethernet port: G1 LINK

Fiber port: G2 LINK

Remote Ethernet port alarm: G1 LFP

Remote Fiber port alarm: G2 LFP

### Power supply:

Power input: 24VDC(12~48VDC)

Terminal block: 3 bits 7.62mm terminal block

No-load power consumption:1.512W@24VDC

Full-load power consumption: 1.800W@24VDC

Support reverse connection protection

### Mechanical:

Shell: IP40, high strength iron shell.

Installation: DIN Rail

Weight: 346.6g

Dimension (W×H×D: 110mm×35mm×95mm)

### Environmental

Operating Temperature: -40 to 85°C

Storage Temperature: -45°C to 85°C

Ambient Relative Humidity:

10 to 95% (non-condensing)

### Standard:

EMI: FCC Part 15, CISPR (EN55022) class A

EMS: EN61000-4-2 (ESD), Level 1

EN61000-4-4 (EFT), Level 4

EN61000-4-5 (Surge), Level 3

Shell: IEC 60068-2-27

### Warranty:

Warranty time: 5 years


### Certification:

CE, FCC, RoHS, PAL, UL508(pending)

### Appendix:


Link Fault Pass-Through (LFP) : If one side link had failure, this side fiber port will send a failure alarm to remote connection, the remote fiber port will force the Ethernet port disconnect when it got the alarm, data packets will never send. The function description is as follows:

(1) Link working steadily, all indicator in regular.

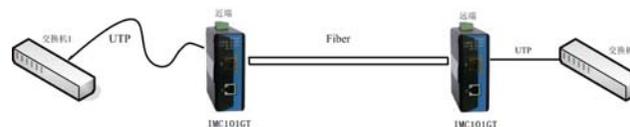


(2) One Ethernet port unplug, Fiber port send the alarm,

force another Ethernet port disconnect, communication interrupt, indicator OFF.

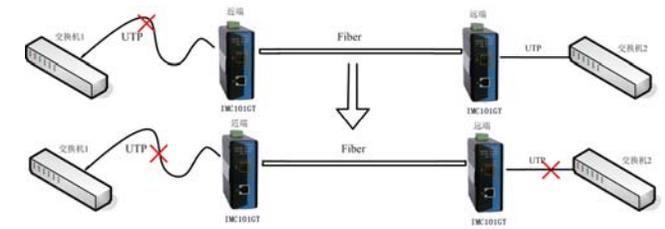

(3) When side fiber port disconnect, force all communication port interrupt, stop to communication, all indicator OFF

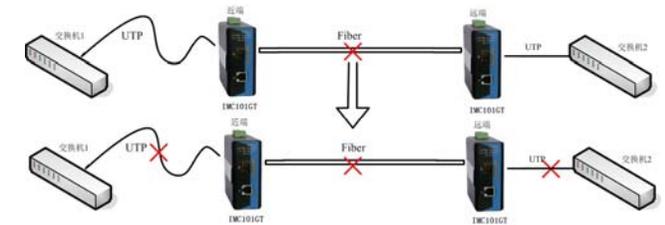

IMC101GT' LFP function is fore to close the connection when detected network connection failure.